


Service
Service
Service

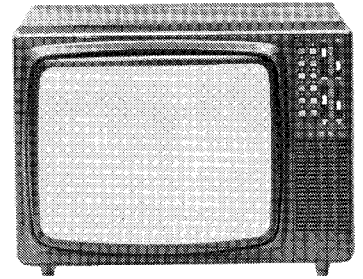


10370A2


00Z/12Z/16Z/18Z/20Z/23Z
30Z/33Z/38Z/95Z/96Z

Service Manual

CHASSIS KT2

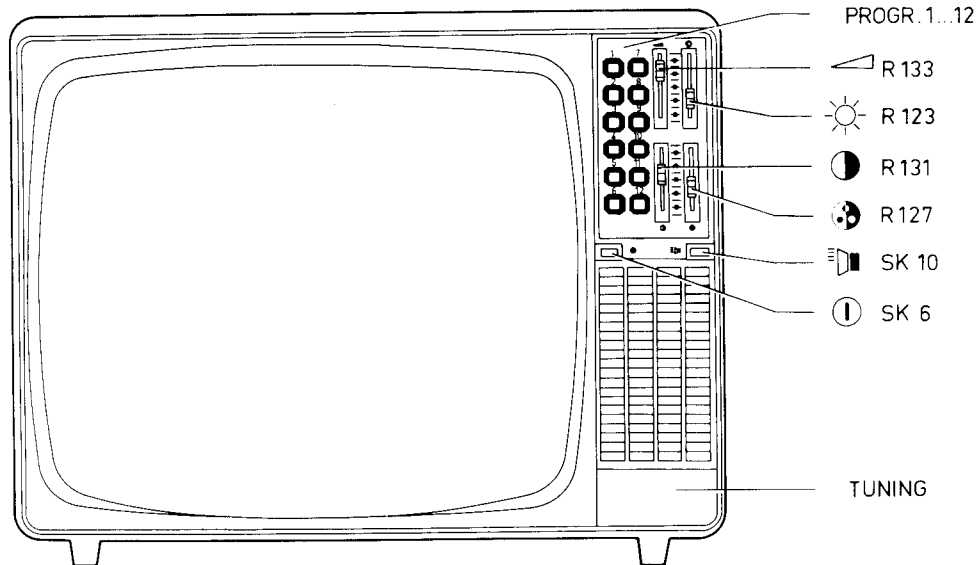

10348B13

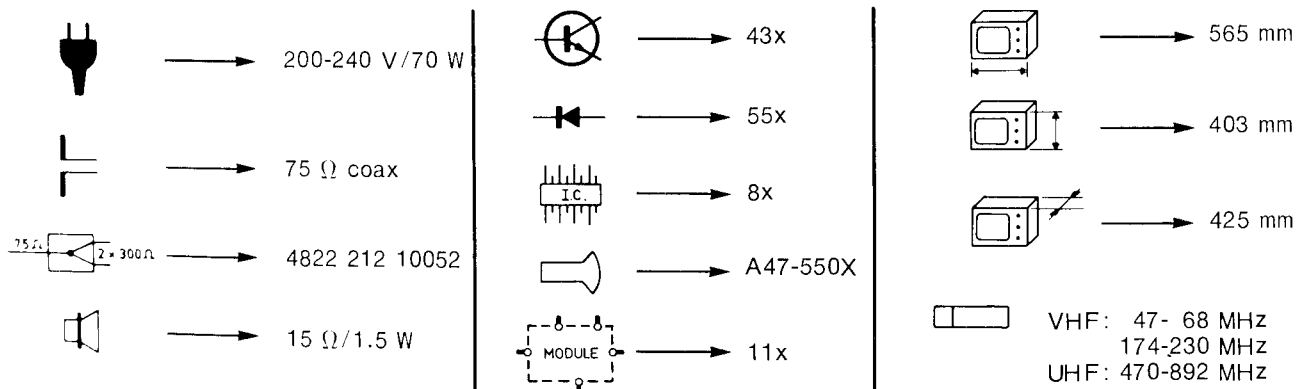

Documentation Technique Service Dokumentation Documentazione di Servizio Huolto-Ohje Manual de Servicio Manual de Servicio



GB NL F D


Subject to modification

4822 727 13053


Printed in The Netherlands

PHILIPS




DIAGRAM - SCHALTBILD A

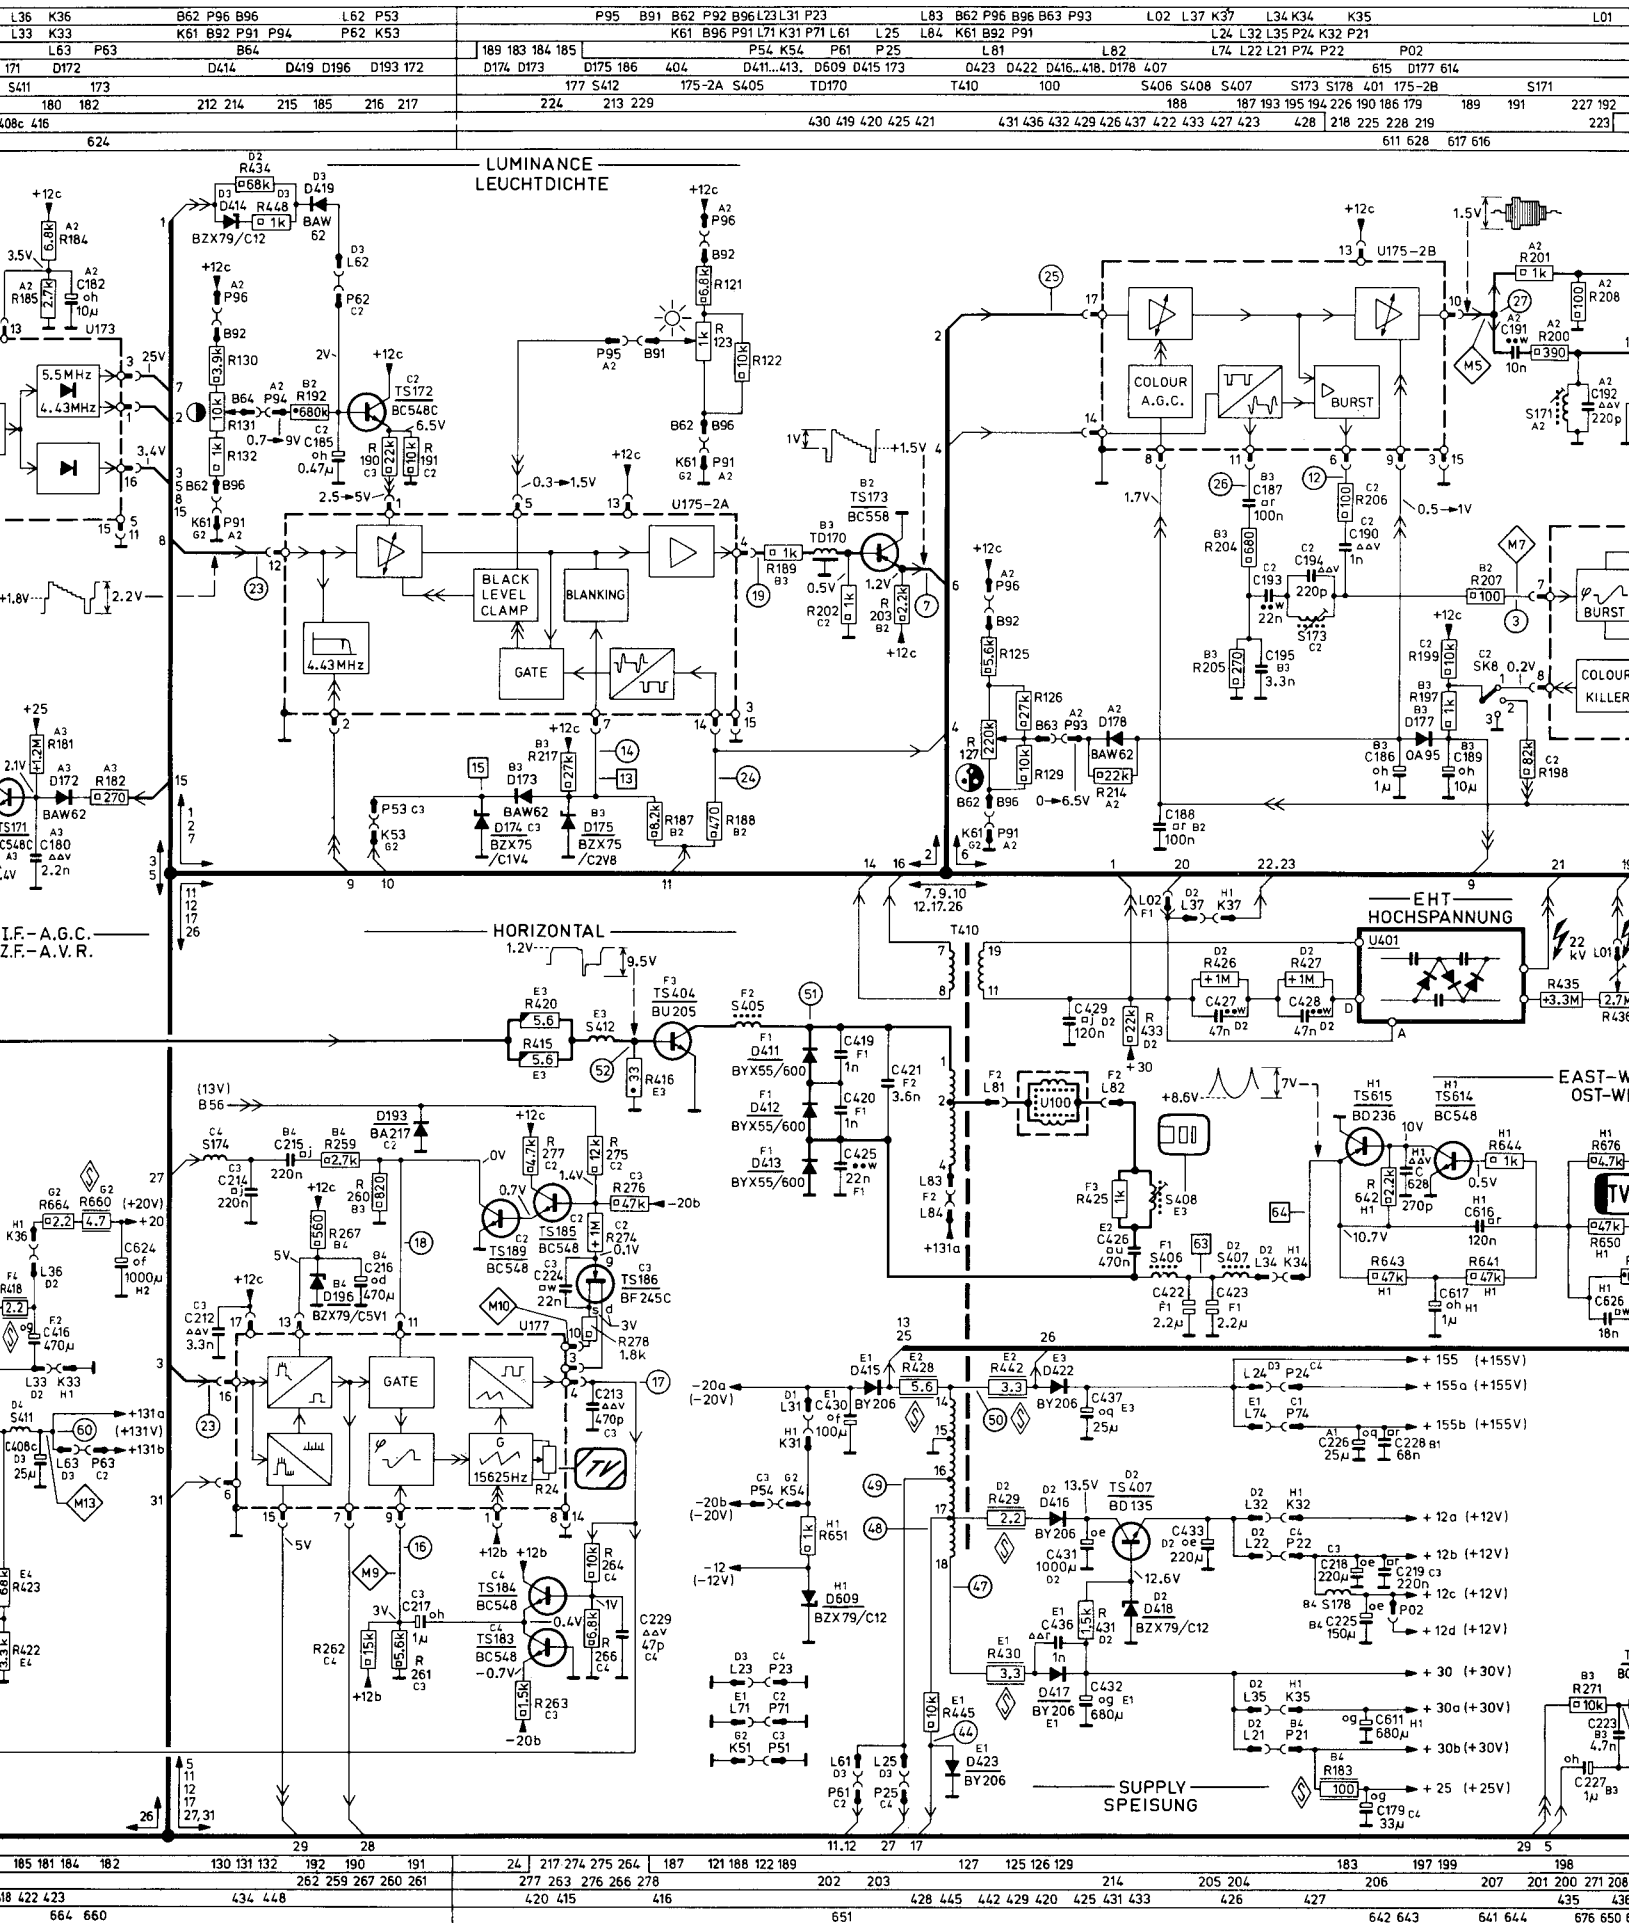

GRAM-SCHALTBILD A

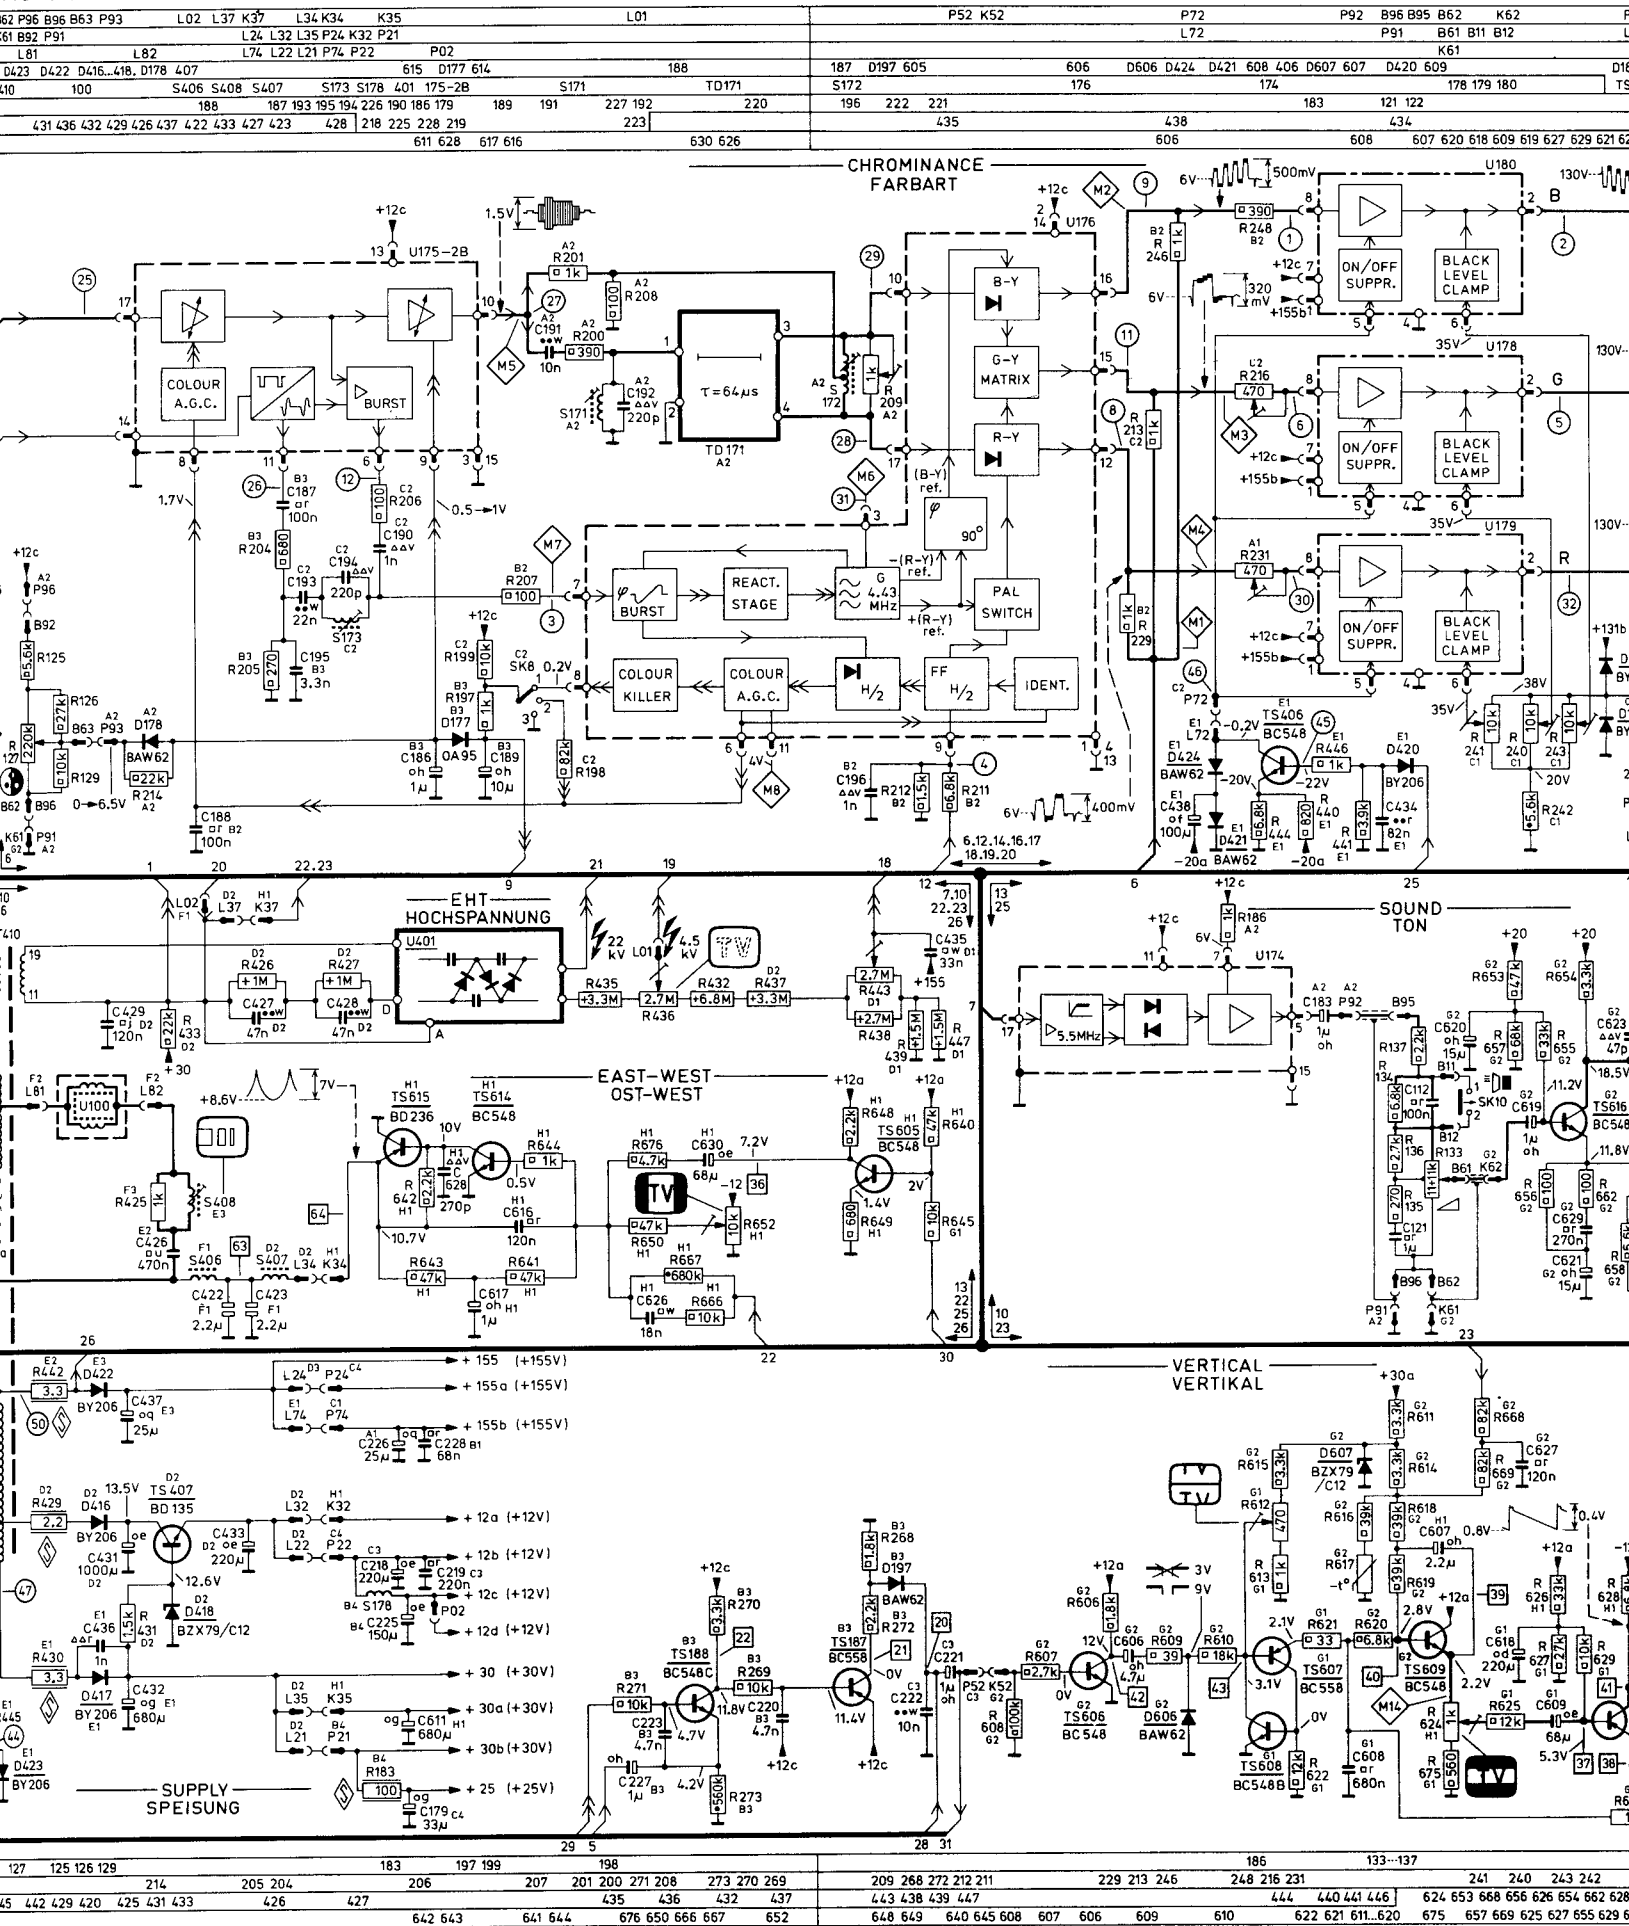


L01	P52 K52	P72	P92 B96 B95 B62 K62	P73	P83 S81 S03 S02 S42 K41 K11 S41 S01
		L72	P91 B61 B11 B12 K51	L73	S83 P82 L52 L51 L42 K42 L41 A22 A02
188	187 D197 605	606 D606 D424 D421 608 406 D607 607 D420 609	D180 D181	P81 S82 K12	A21 A01
227 192	TD171	S172	TS616...619, TS610...613,	S142 S141	B100 IC-TS-D-B
223	196 222 221	176	174	100	S100 S-T-U
	630 626	435	438	141	1-299
		606	608	607 620 618 609 619 627 629 621 623 610 622 615	400-499 C
				631 612 625 613 632 614	500-

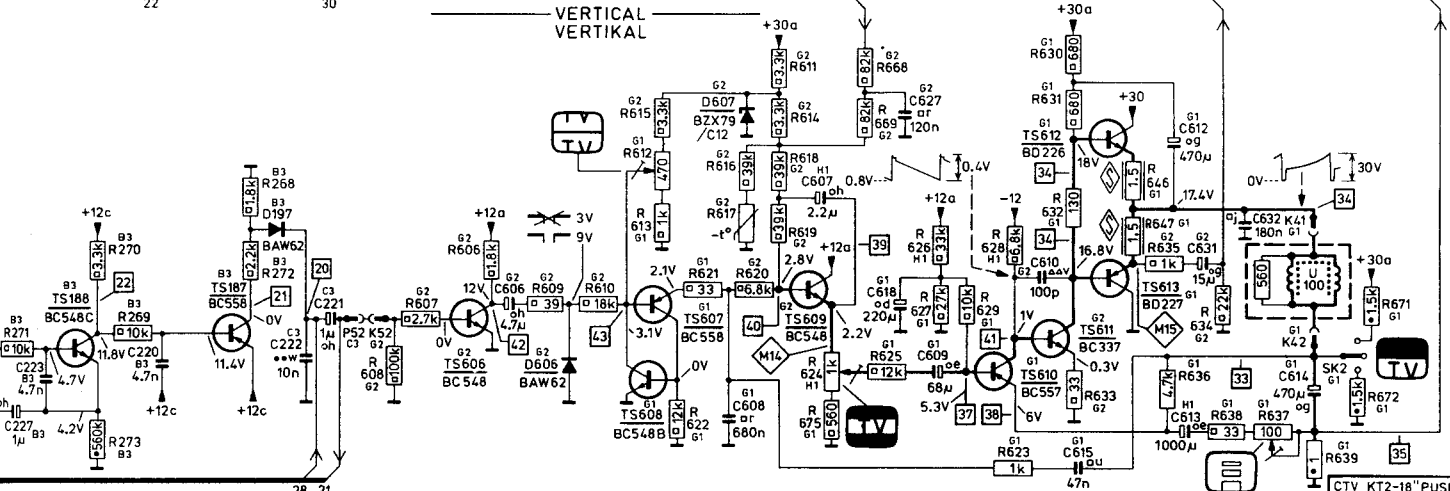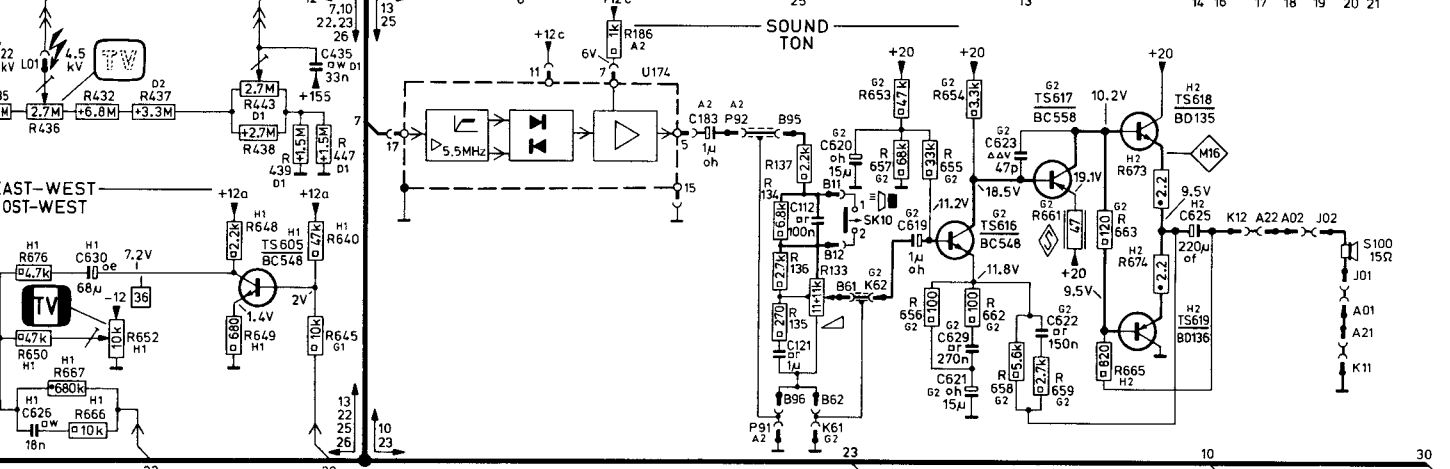
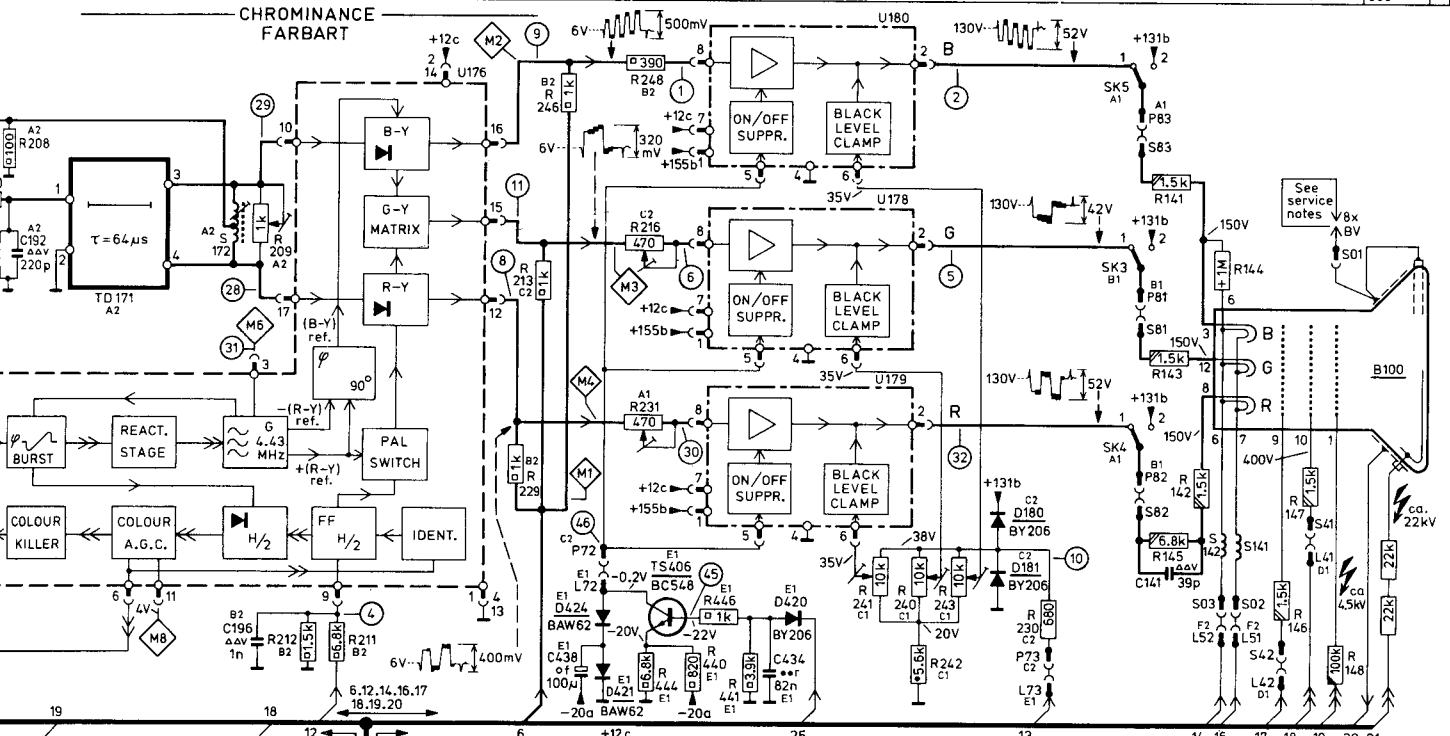


10 271 208	273 270 269	209 268 272 212 211	229 213 246	248 216 231	444 440 441 446	624 653 668 656 626 654 662 628 623 630 661 632 663 673 646 634	675 657 669 625 627 655 629 658 631 659 633 665 674 647 635	636...639	672 671	500-
35 436	432 437	443 438 439 447	608 609	610	622 621 611...620	675 657 669 625 627 655 629 658 631 659 633 665 674 647 635	636...639	672 671	500-	

DIAGRAM-SCHALTBILD B

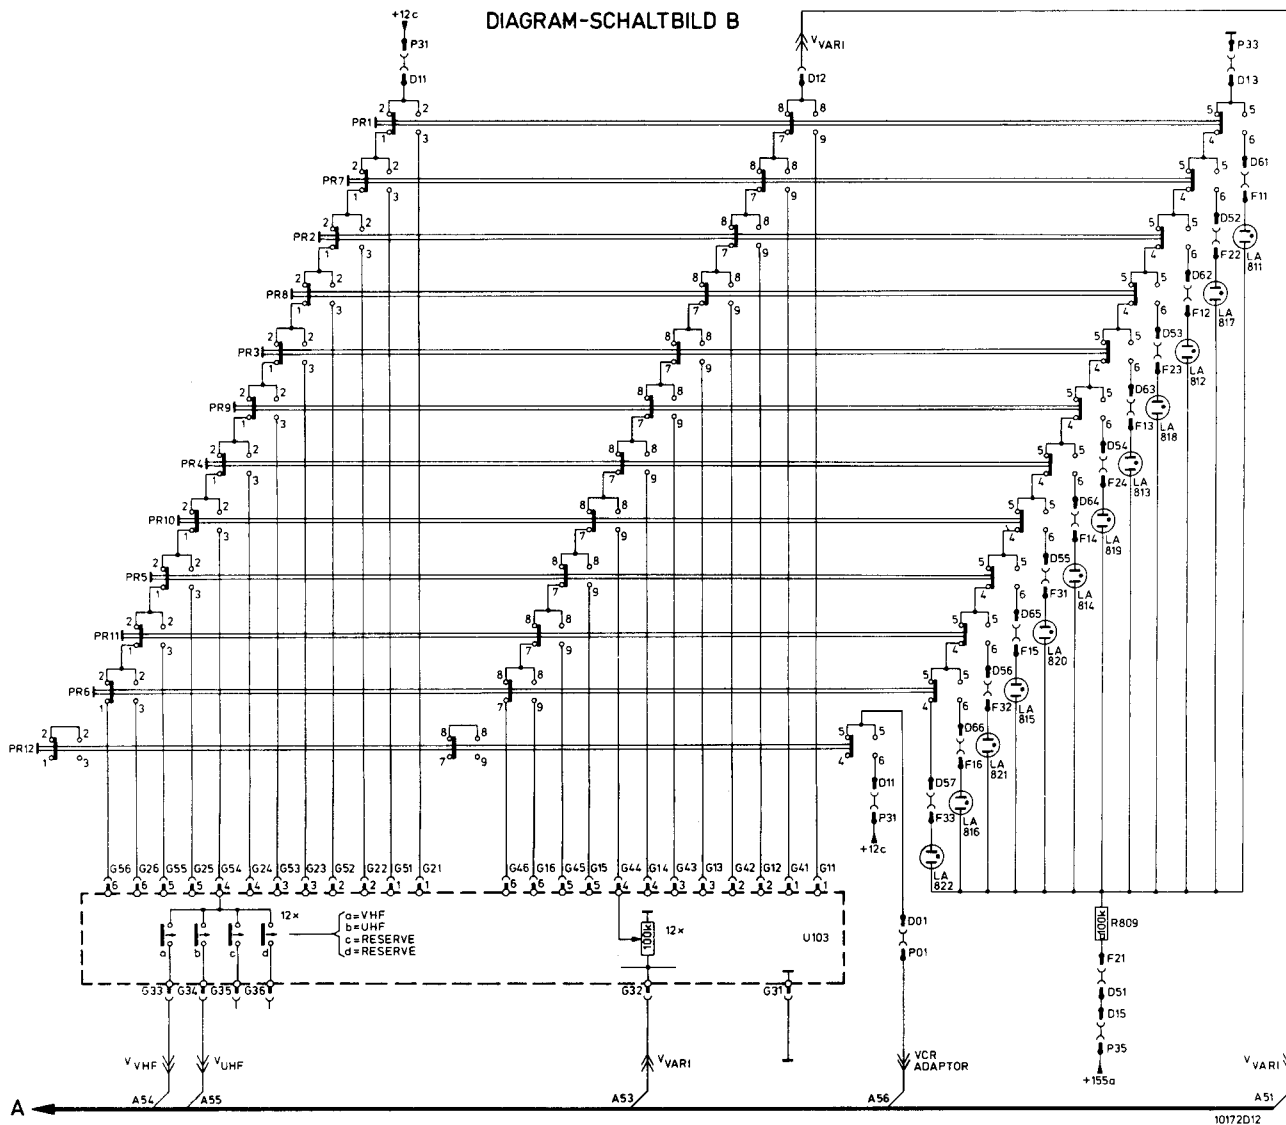

10172D12

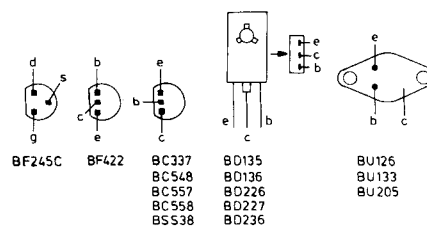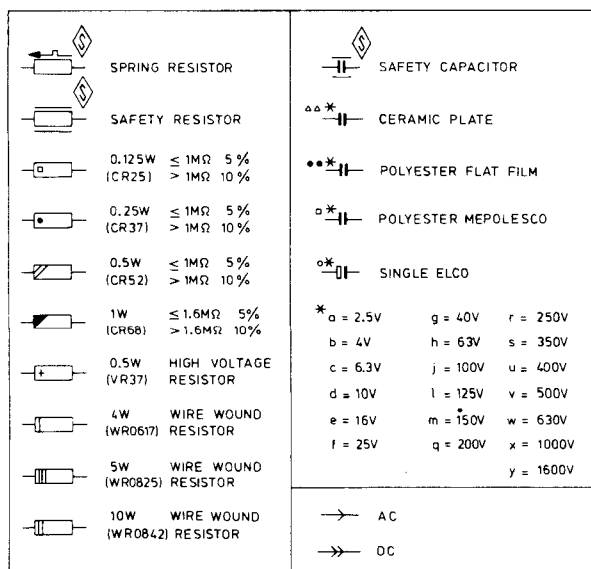

Deleted - Afge

S100
U100
U102
U103
R123
R127
R131
R133
R433
LA811 - 818