## MFJ-903 6 METER ANTENNA TUNER

#### **General Information:**

The MFJ-903 6 Meter Antenna Tuner for The Magic Band gives you low SWR with practically any coax fed antenna -- mobile whips, dipoles, verticals, vees, random wires, beams.

With low SWR, your rig will be more efficient; you'll get more power out of your 6 meter tranceiver and into your antenna for more DX, it will run cooler and last longer, and your expensive tranceiver will be protected from overheating due to high SWR.

The MFJ-903 handles 100 Watts FM and 200 Watts SSB PEP. It works with ALL solid state and tube rigs and is perfect for home and mobile stations.

### Installation:

The MFJ-903 installs between your 6 meter tranceiver and your antenna. An external Power/SWR meter is necessary for proper operation of the MFJ-903. Connect your 6 meter transceiver to your Power/SWR meter. Then connect the Power/SWR meter to the TRANSMITTER SO-239 of the MFJ-903. The coax from the antenna is then connected to the ANTENNA SO-239 of the MFJ-903.


# **Operation:**

- minimum SWR!
- 3. Referring to your external Power/SWR meter, TRANSMITTER control for a drop in SWR.
- 4. Adjust the **ANTENNA** control until minimum SWR is achieved.


Since the TRANSMITTER and ANTENNA controls interactive the transmitter and antenna control controls in the transmitter and antenna control contro NOT E must be adjusted alternately until minimum SWR is obtakerprises, INC., 300 Industrial Park Road, Starkville,

5. After minimum SWR is achieved, check output power with a voltmeter, relative power meter or with an antenna current meters at 76206,1763; or by email to voltmeter at 76206,1763; or by email to 76206,1763; or Tune the **ANTENNA** tuner for maximum power output; make sure of your problem, an explanation of exactly SWR is at minimum.

**MFJ-903 Front Panel** 

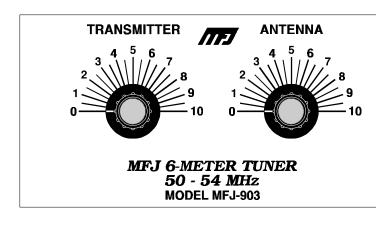

## MFJ-903 Rear Panel

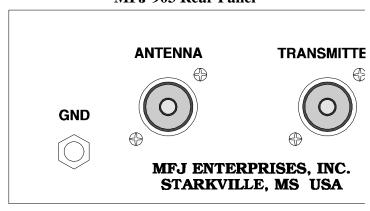

## **Technical Assistance**

of your station.

If you have any problem with this unit first check the 1. Set **TRANSMITER** and **ANTENNA** controls to **5** (capacitors half not reference your problem or your problem is not opened).

Solved by reading the manual you may call *MFJ*Apply enough transmitter power to give an adequate indication on review at **601-323-0549** or the *MFJ Factory* your SWR meter. Do not apply full power while at 601-323-5869. You will be best helped if you have your unit, manual and all information on your station hardy so you can answer any questions the technicians

how you are using your unit, and a complete description