




SERVICE MANUAL

20" COLOR TELEVISION
with TELETEXT

TV-2000T MK7

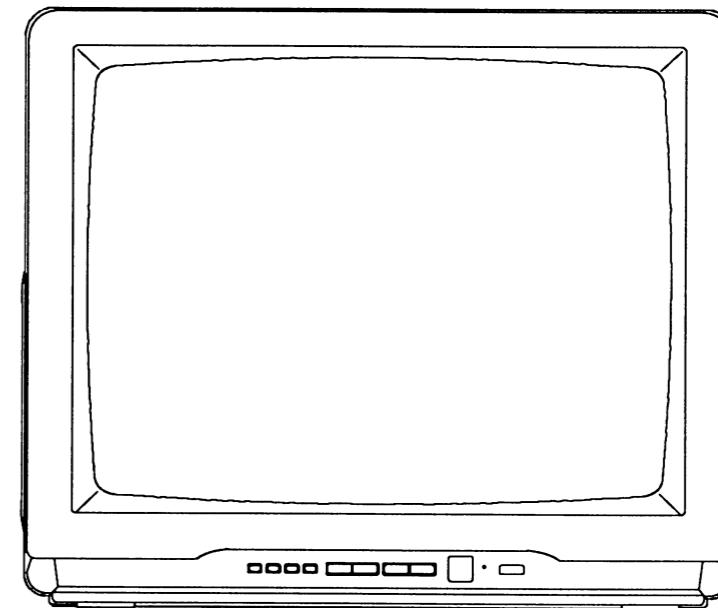

IMPORTANT SAFETY NOTICE

Proper service and repair is important to the safe, reliable operation of all Funai Equipment. The service procedures recommended by Funai and described in this service manual are effective methods of performing service operations. Some of these service special tools should be used when and as recommended.

It is important to note that this service manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Funai could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Funai has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Funai must first use all precautions thoroughly so that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

TABLE OF CONTENTS

General Specifications	1-1
Performance Specifications	2-1
Important Safety Precautions.....	3-1
Disassembly Instructions	4-1
Electrical Adjustment Instructions	5-1
Block Diagram.....	6-1
Schematic Diagrams / PCB's and Test Points.....	7-1
Waveforms	8-1
Wiring Diagram	9-1
Exploded View	10-1
Mechanical Parts List	11-1
Electrical Parts List.....	12-1

GENERAL SPECIFICATIONS *

FEATURE and SPECIFICATIONS

Color System:	PAL - B/G, SECAM - B/G, D/K NTSC 4.43/3.58MHz (Video In only)
Tuning System:	Voltage Synthesizer
Receiveable Channels:	VHF-L; R1~R5 / - (OIRT + CCIR ch) - E2~E4 ch (X~S2) VHF-H; R6~R12 / E5~E12 ch (S3~S10) UHF; 21~69 ch CATV-Mid
Numer of Present:	up to 50
Antenna Impedance:	UHF/VHF 75Ω, Unbalanced
Picture Tube:	14", Tinted
Picture Control:	Color, Brightness, (Remote) Contrast and Video mode (Sharp/Soft)
Picture Control Memory:	Standard - Select (Remote)
Speaker:	77m/m, Round Type, 8Ω
Output Power:	1W, 10% THD
Other Features:	Automatic Channel Programming Automatic Degaussing
Power Source:	220-240V, 50Hz AC
Power Consumption:	70W
Cabinet Size:	366(W) x 35(D) x 32(H) mm (Approx)
Weight:	9Kg (Approx)
Regulations:	IEC-65 Passable

CONTROL and SWITCHES

Power:	Push (Front)
Channel Up/Down:	Push (Front)
Volume Up/Down:	Push (Front)
Tuning Up/Down:	Push (Front)
Program:	Push (Front)
Auto Memo/Band:	Push (Front)
Remote Control:	Standby (20keys)
0/AV 1~9	Channel Up/Down
Picture Select	Control& Volume Up/Down
(Bright/Contrast/ Color/Video Mode)	Picture Select
Previous	Previous
Mute	Mute
Sleep	Sleep
Display	Display

DISPLAY

LED Indicator:	LED (Red)
* When turning on the power, the stand-by LED will turn off.	
On Screen Display:	Channel Volume Brightness Color Contrast Sharp-Soft Sleep Timer (10~90 Minute) Tuning Indicator Band Position

JACK AND TERMINALS

UHF/VHF Antenna:	75Ω IEC Jack
Video In Jack:	BNC Jack
Audio In Jack:	RCA Jack
EARPHONE:	3.5mm CES

ACCESSORIES

Remote Control Transmitter	
Battery:	UM3 x 2
Owner's Manual	
Rod Antenna	

* Specifications are subject to change without notice.

PERFORMANCE SPECIFICATIONS

< Tuner >

ANT. Input ----- 75Ω Unbalanced, IEC connector
 Reference Level ----- 300mVp-p at Video Output
 Test Input Signal ----- 400Hz 30% modulation

<u>Description</u>	<u>Condition</u>	<u>Unit</u>	<u>Nominal</u>	<u>Limit</u>
1. Peak Picture Sens	VHF	dBµV	20	30
	UHF	dBµV	30	40
2. AFT Pull In Range (80dBµ input)	—	MHz	± 1.0	± 0.7
3. Intermediate Freq.	Picture	MHz	38.0	—
	Sound	MHz	31.5 (D/K)	—
	Sound	MHz	32.5 (B/G)	—
4. Intercarrier Freq.	—	MHz	6.5 (D/K)	—
	—	MHz	5.5 (B/G)	—

< Video & Chroma >

<u>Description</u>	<u>Condition</u>	<u>Unit</u>	<u>Nominal</u>	<u>Limit</u>
1. Misconvergence	Center	mm	—	0.4
	Side	mm	—	1.5
	Corner	mm	—	2.0
2. Over Scan	Horizontal	%	10	—
	Vertical	%	10	—
3. Color Temperature	—	K	8000K-10MPCD	—
4. Resolution	Horizontal	Line	300	—
	Vertical	Line	300	—
5. Brightness	APL 100%	Ft-L	45	35

< Deflection >

<u>Description</u>	<u>Condition</u>	<u>Unit</u>	<u>Nominal</u>	<u>Limit</u>
1. Deflection Freq.	Horizontal (PAL/SECAM) (NTSC)	KHz	15.625	—
		KHz	15.75	—
	Vertical (PAL/SECAM) (NTSC)	Hz	50	—
		Hz	60	—
2. Linearity	Horizontal	%	—	± 15
	Vertical	%	—	± 15
3. High Voltage	—	KV	23	—

< Audio >

All items are measured across 16Ω resistor at speaker output terminal.

<u>Description</u>	<u>Condition</u>	<u>Unit</u>	<u>Nominal</u>	<u>Limit</u>
1. Audio Output Power	10% THD	W	1.2	0.8
2. Audio Distortion	500mW	%	2	5
3. Audio Freq. Response	-6dB	Hz	—	100~6K

IMPORTANT SAFETY PRECAUTIONS

Prior to shipment from the factory, our products are strictly inspected for recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Safety Precautions for TV Circuit

1. Before returning an Instrument to the customer, always make a safety check of the entire instrument, including, but not limited to, the following items:


a. Be sure that no built-in protective devices are defective and have been defeated during servicing. (1) Protective shields are provided on this chassis to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience. (2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including but not limited to, nonmetallic control knobs, insulating fishpapers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. **Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning. Servicers who defeat safety features or fail to perform safety checks may be liable for any resulting damage.**

b. Be sure that there are no cabinet openings through which an adult or child might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to, (1) spacing between the picture tube and the cabinet mask, (2) excessively wide cabinet ventilation slots, and (3) an improperly fitted and/or incorrectly secured cabinet back cover.

c. **Antenna Cold Check** - With the instrument AC plug removed from any AC source, connect an electrical jumper across the two AC plug prongs. Place the instrument AC switch in the on position. Connect one lead of an ohmmeter to the AC plug prongs tied together and touch the other ohmmeter lead in turn to each tuner antenna input exposed terminal screw and, if applicable, to the coaxial connector. If the measured resistance is less than 1.0 megohm or greater than 5.2 megohm, an abnormality exists that must be corrected before the instrument is returned to the customer.

Repeat this test with the instrument AC switch in the off position.

d. **Leakage Current Hot Check** - With the instrument completely reassembled, plug the AC line cord directly into a AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester. With the instrument AC switch first in the on position and then in the off position, measure from a known earth ground (metal water pipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle brackets, metal cabinet, screw heads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis. Any current measured must not exceed 0.5 milliampere. Reverse the instrument power cord plug in the outlet and repeat the test.

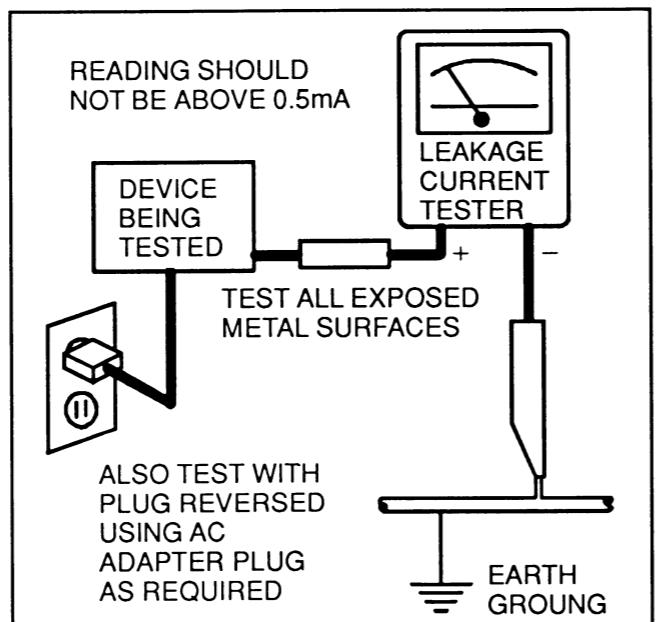

ANY MEASUREMENTS NOT WITHIN THE LIMITS SPECIFIED HEREIN INDICATE A POTENTIAL SHOCK HAZARD THAT MUST BE ELIMINATED BEFORE RETURNING THE INSTRUMENT TO THE CUSTOMER OR BEFORE CONNECTING THE ANTENNA OR ACCESSORIES.

e. **X-Radiation and High Voltage Limits** - Because the picture tube is the primary potential source of X-radiation in solid-state TV receivers, it is specially constructed to prohibit X-radiation emissions. For continued X-radiation protection, the replacement picture tube must be the same type as the original. Also, because the picture tube shields and mounting hardware perform an X-radiation protection function, they must be correctly in place. High voltage must be measured each time servicing is performed that involves B+, horizontal deflection or high voltage. Correct operation of the X-radiation protection circuits also must be reconfirmed each time they are serviced. (X-radiation protection circuits also may be called "horizontal disable" or "hold down.") Read and apply the high voltage limits and, if the chassis is so equipped, the X-radiation protection circuit specifications given on instrument labels and in the Product Safety & X-Radiation Warning note on the service data chassis schematic. High voltage is maintained within specified limits by close tolerance safety-related components/adjustments in the high-voltage circuit. If high voltage exceeds specified limits, check each component specified on the chassis schematic and take corrective action.

2. Read and comply with all caution and safety-related notes on or inside the receiver cabinet, on the receiver chassis, or on the picture tube.

3. **Design Alteration Warning** - Do not alter or add to the mechanical or electrical design of this TV receiver. Design alterations and additions, including, but not limited to circuit modifications and the addition of items such as auxiliary audio and/or video output connections, might alter the safety characteristics of this receiver and create a hazard to the user. Any design alterations or additions will void the manufacturer's warranty and may make you, the servicer, responsible for personal injury or property damage resulting therefrom.

4. **Picture Tube Implosion Protection Warning** - The picture tube in this receiver employs integral implosion protection. For continued implosion protection, replace the picture tube only with one of the same type number. Do not remove, install, or otherwise handle the picture tube in any manner without first putting on shatterproof goggles equipped with side shields. People not so equipped must be kept safely away while picture tubes are handled. Keep the picture tube away from your body. Do not handle

the picture tube by its neck. Some "in-line" picture tubes are equipped with a permanently attached deflection yoke; because of potential hazard, do not try to remove such "permanently attached" yokes from the picture tube.

5. Hot Chassis Warning -

a. Some TV receiver chassis are electrically connected directly to one conductor of the AC power cord and may be safety-serviced without an isolation transformer only if the AC power plug is inserted so that the chassis is connected to the ground side of the AC power source. To confirm that the AC power plug is inserted correctly, with an AC voltmeter, measure between the chassis and a known earth ground. If a voltage reading in excess of 1.0V is obtained, ***remove and reinser the AC power plug in the opposite polarity** and again measure the voltage potential between the chassis and a known earth ground.

b. Some TV receiver chassis have a circuit which obtain voltage about 70% of AC voltage between chassis and earth ground regardless of the AC plug polarity. This chassis can be safety-serviced only with an isolation transformer inserted in the power line between the receiver and the AC power source, for both personnel and test equipment protection.

c. Some TV receiver chassis have a secondary ground system in addition to the main chassis ground. This secondary ground system is not isolated from the AC power line. The two ground systems are electrically separated by insulation material that must not be defeated or altered.

Note: * In case unit has no polarity AC plug only.

6. Observe original lead dress. Take extra care to assure correct lead dress in the following areas: a. near sharp edges, b. near thermally hot parts-be sure that leads and components do not touch thermally hot parts, c. the AC supply, d. high voltage, and e. antenna wiring. Always inspect in all areas for pinched, out of place, or frayed wiring. Check AC power cord for damage.

7. Components, parts, and/or wiring that appear to have overheated or are otherwise damaged should be replaced with components, parts, or wiring that meet original specifications. Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.

8. **Product Safety Notice** - Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual

inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc.. Parts that have special safety characteristics are identified by a (Δ) on schematics and in parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. The Product's Safety is under review continu-

ously and new instructions are issued whenever appropriate. Prior to shipment from the factory, our products are strictly inspected to confirm with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Precautions during Servicing

- A.** Parts identified by the (Δ) symbol are critical for safety.
Replace only with part number specified.
- B.** In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.
Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.
- C.** Use specified internal wiring. Note especially:
 - 1) Wires covered with PVC tubing
 - 2) Double insulated wires
 - 3) High voltage leads
- D.** Use specified insulating materials for hazardous live parts. Note especially:
 - 1) Insulation Tape
 - 2) PVC tubing
 - 3) Spacers
 - 4) Insulators for transistors.
- E.** When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.
- F.** Observe that the wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.)
- G.** Check that replaced wires do not contact sharp edged or pointed parts.

- H.** When a power cord has been replaced, check that 10-15 kg of force in any direction will not loosen it.
 - I. Also check areas surrounding repaired locations.
 - J. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.
- K.** Crimp type wire connector
When replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, in order to prevent shock hazards, perform carefully and precisely the following steps.
Replacement procedure
 - 1) Remove the old connector by cutting the wires at a point close to the connector.
 - Important: Do not re-use a connector (discard it).
 - 2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.
 - 3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.
 - 4) Use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.
- L.** When connecting or disconnecting the VCR connectors, first, disconnect the AC plug from AC supply socket.

Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1 : Ratings for selected area

AC Line Voltage	Region	Clearance Distance (d) (d')
200 to 240 V	Europe	$\geq 4\text{mm}$ (d)
	Australia	$\geq 6\text{mm}$ (d')

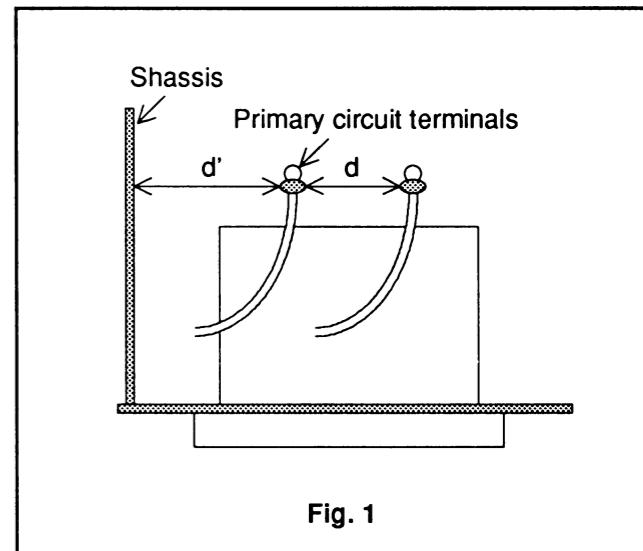


Fig. 1

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

2. Leakage Current Test

Confirm specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method : (Power ON)

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See Fig. 2 and following table.

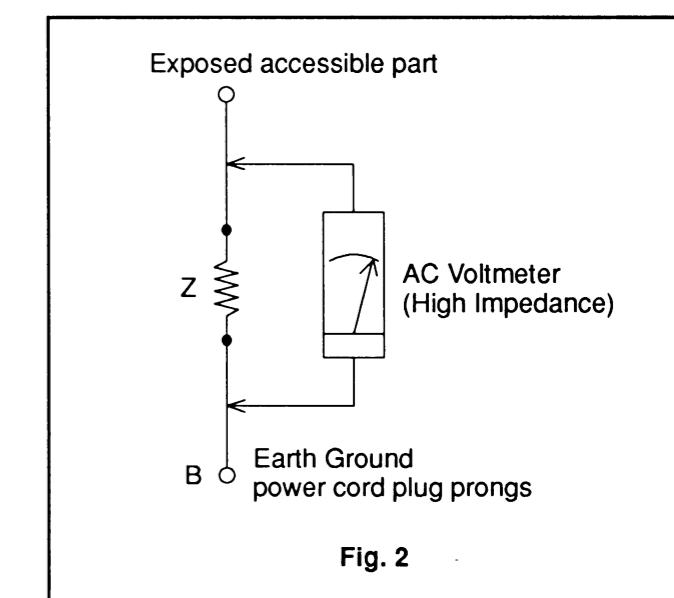


Fig. 2

Table 2 : Leakage current ratings for selected areas

AC Line Voltage	Region	Load Z	Leakage Current (i)	Earth Ground (B) to:
200 to 240 V	Europe	2k Ω RES. in connected	i $\leq 0.7\text{mA rms}$ i $\leq 2\text{mA dc}$	Antenna terminals
		50k Ω RES. in connected	i $\leq 0.7\text{mA rms}$ i $\leq 2\text{mA dc}$	Other terminals


Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

DISASSEMBLY INSTRUCTIONS

1. DISASSEMBLY FLOW CHART

This flow chart indicates the disassembly steps of the cabinet parts and PCB in order to gain access to item(s) to be serviced. When reassembling, perform the step(s) in the reverse order. Bend, route and dress the cables as they were originally.

CAUTION ! : When removing the CRT, make sure to discharge Anode Lead of the CRT.
Use the CRT Ground Wire to discharge the CRT before removing the Anode Cap.

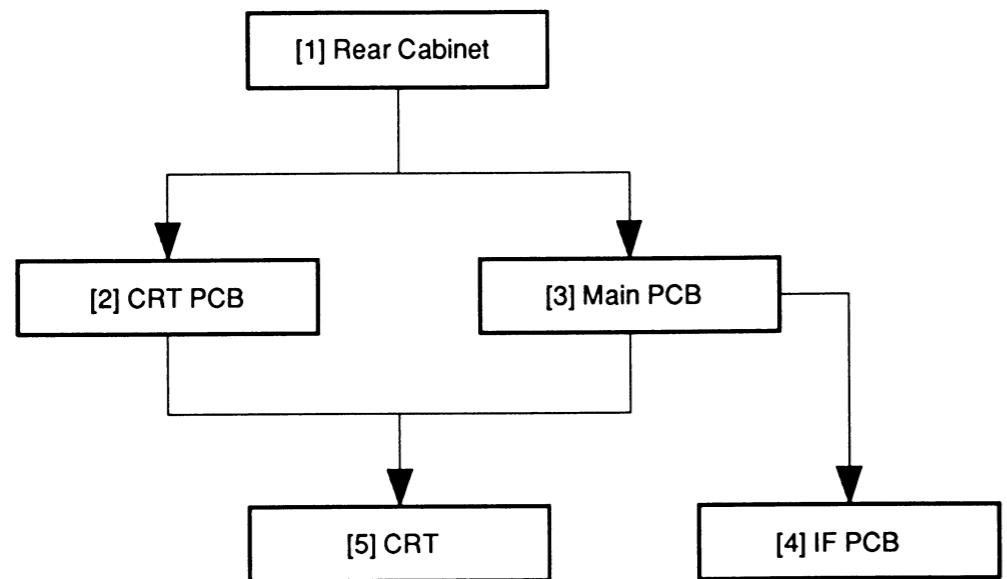

2. DISASSEMBLY METHOD

STEP / LOC. NO.	PART	REMOVAL		
		FIG. NO.	REMOVE / *UNLOCK / RELEASE / UNPLUG / UNCLAMP / DESOLDER	NOTE
[1]	Rear Cabinet	CAB1 CAB2	L2 (4pcs), L3	1
[2]	CRT PCB	CAB4 CAB5	CN602, CN603, CN604 FOCUS WIRE, SCREEN WIRE	2
[3]	Main PCB	CAB3 CAB5	CN201, CN202, CN203, CN204, CN208, CN501 ANODE CAP, FOCUS WIRE, SCREEN WIRE	3
[4]	IF PCB	CAB3	CN101, CN102	4
[5]	CRT	CAB4	B2 (4pcs)	5

Reference <Notes> in Table

- (1) Remove 5 screws (L2, L3) and slide the Rear Cabinet backward.
- (1) If not already removed, first remove the Rear Cabinet.
(2) Remove all relative wires, then pull the CRT PCB backward.
- (1) If not already removed, first remove the Rear Cabinet.
(2) Remove all relative wires on the Main PCB and remove the Anode Cap, then slide the main PCB backward.
- (1) If not already removed, first remove the Rear Cabinet.
(2) Desolder CN101 and CN102, then remove the IF PCB from the Main PCB.

Caution !

Discharge Anode Lead of the CRT with the CRT Ground Wire before removing the Anode Cap.

- (1) If not already removed, first remove the Rear Cabinet and Main PCB.
(2) Remove 4 screws (B2), then the CRT can be removed.

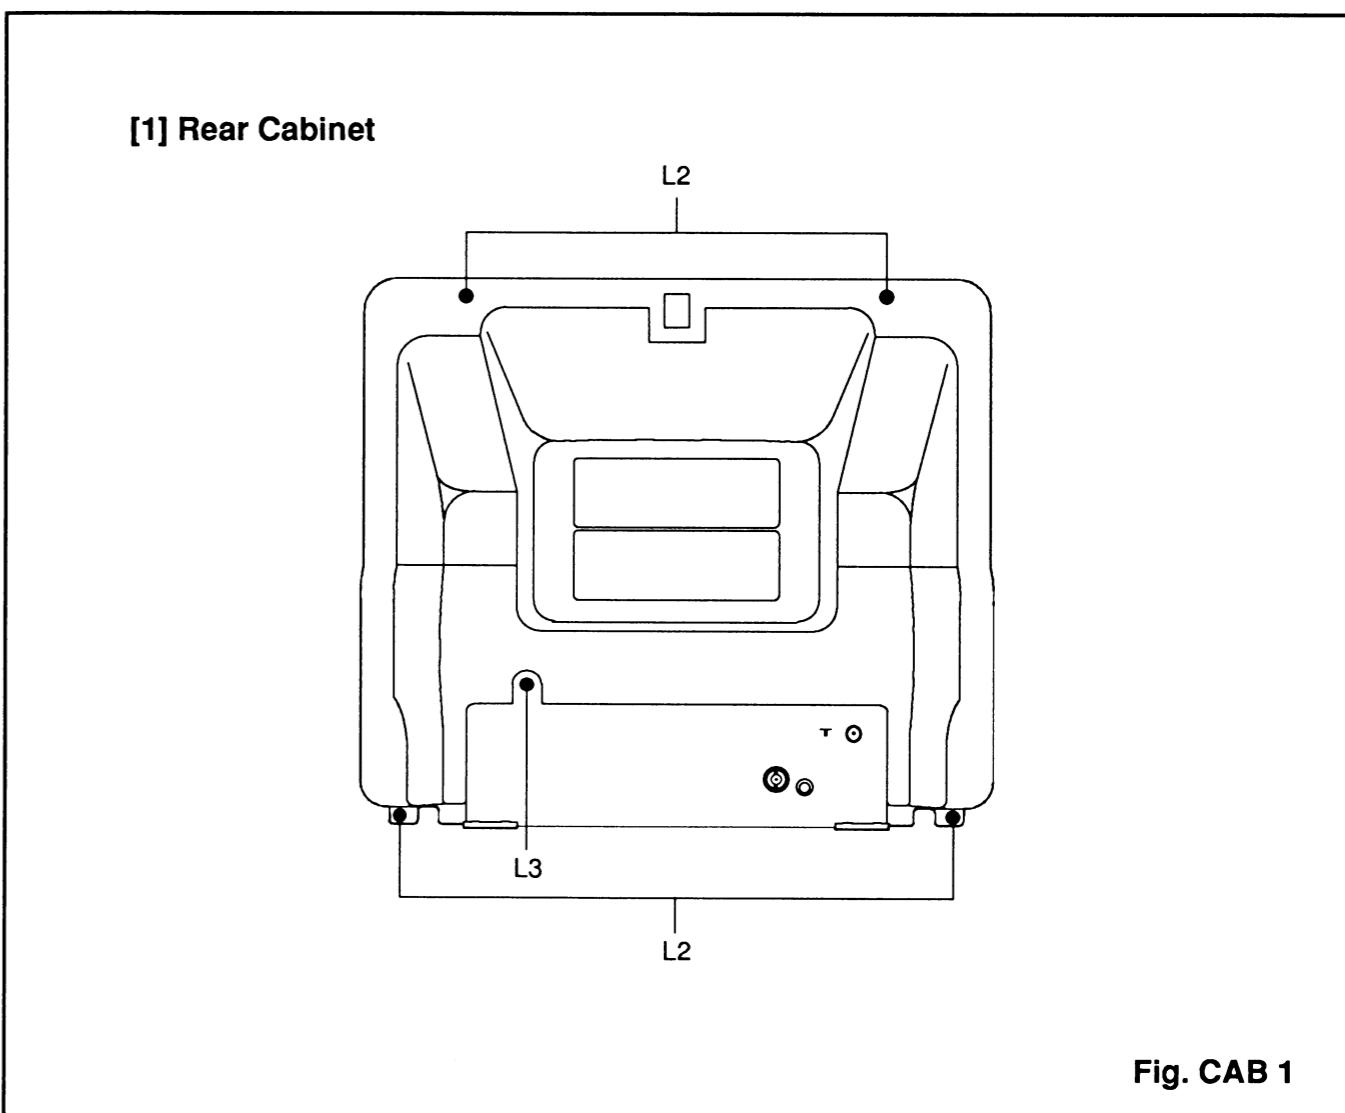
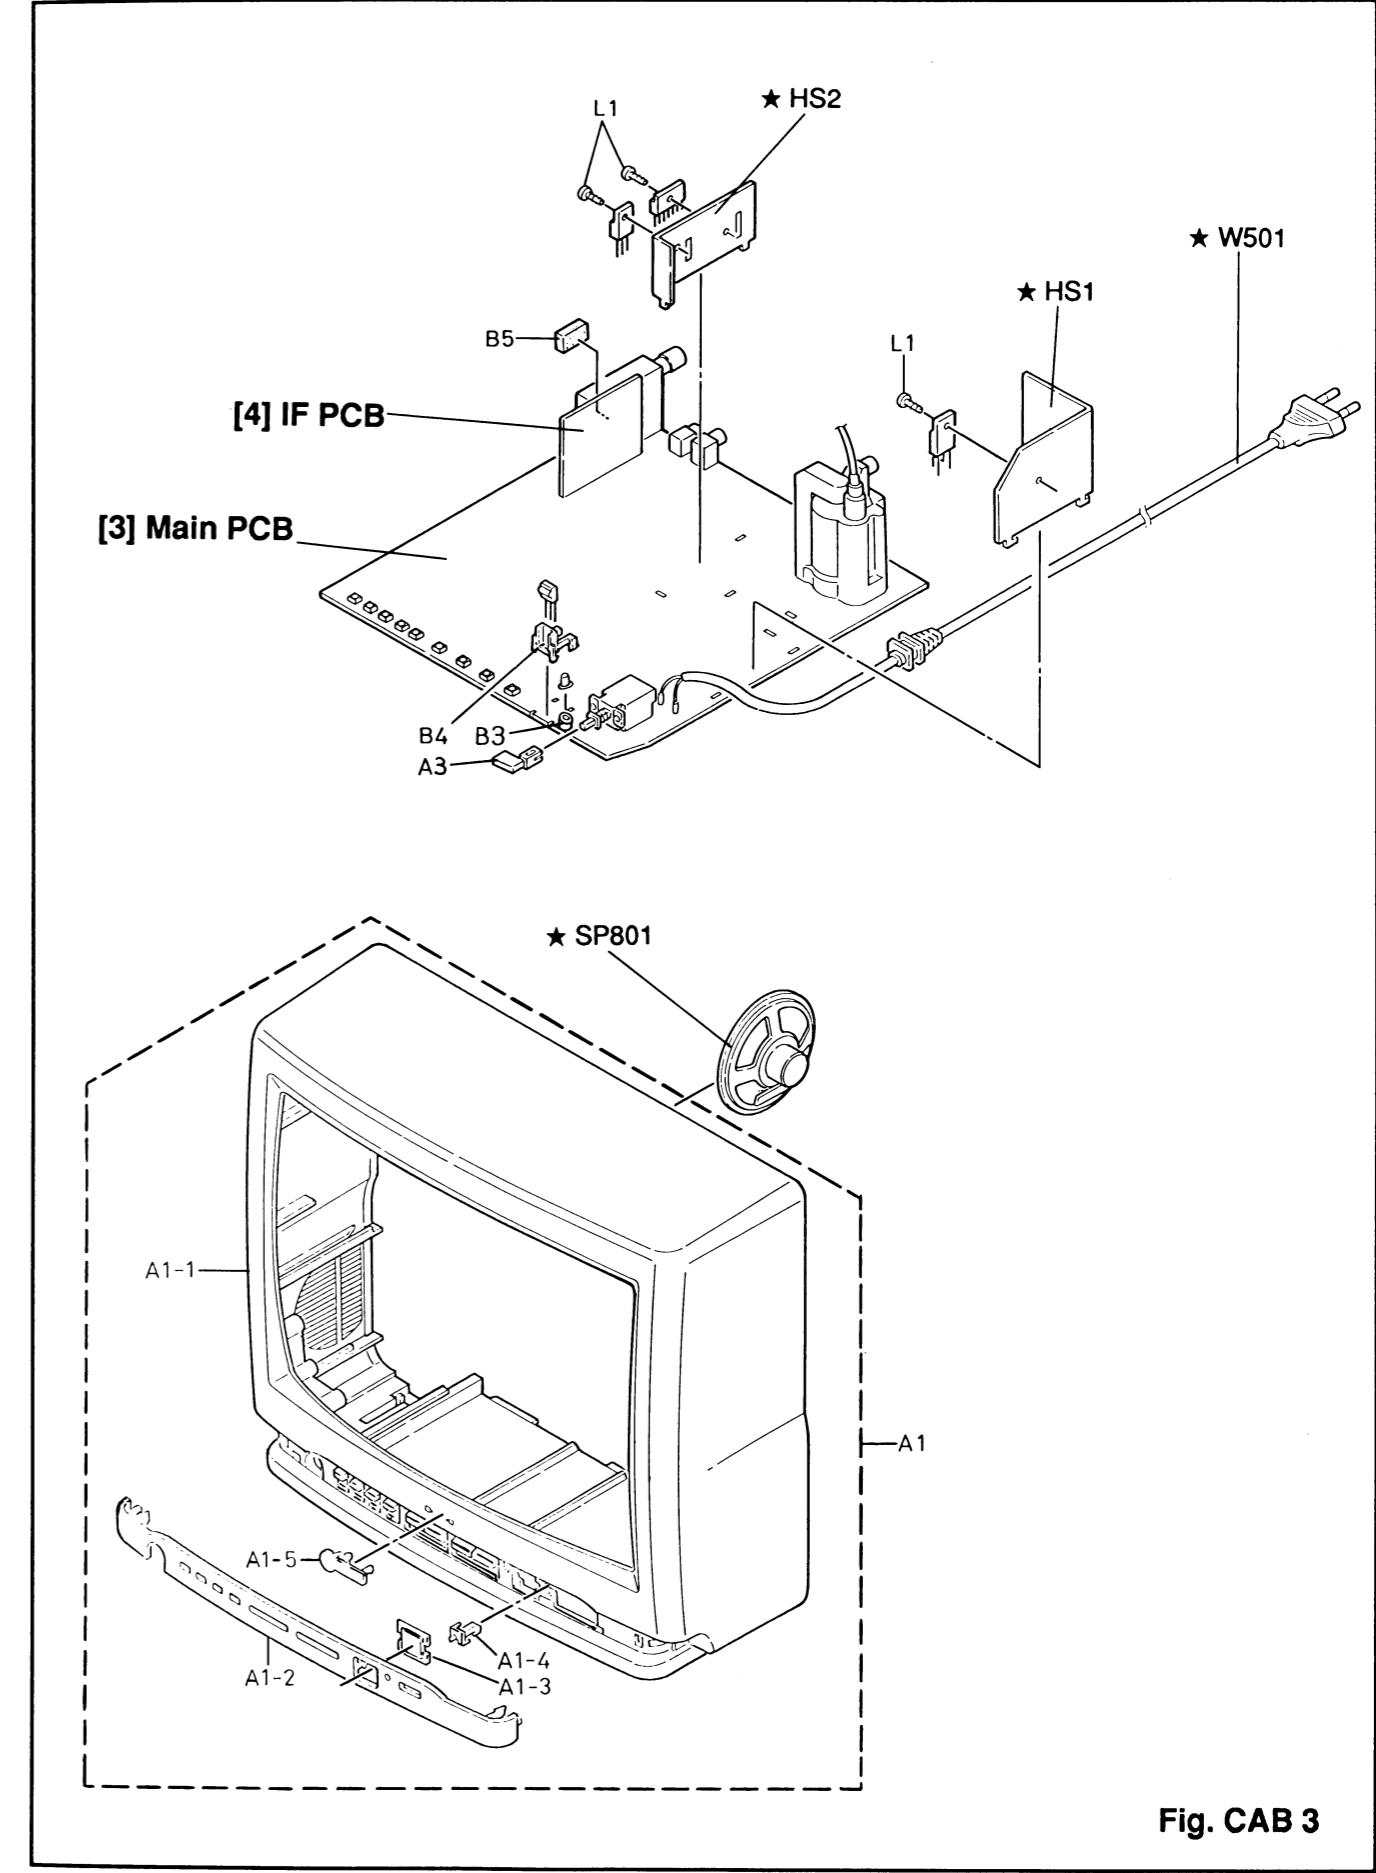
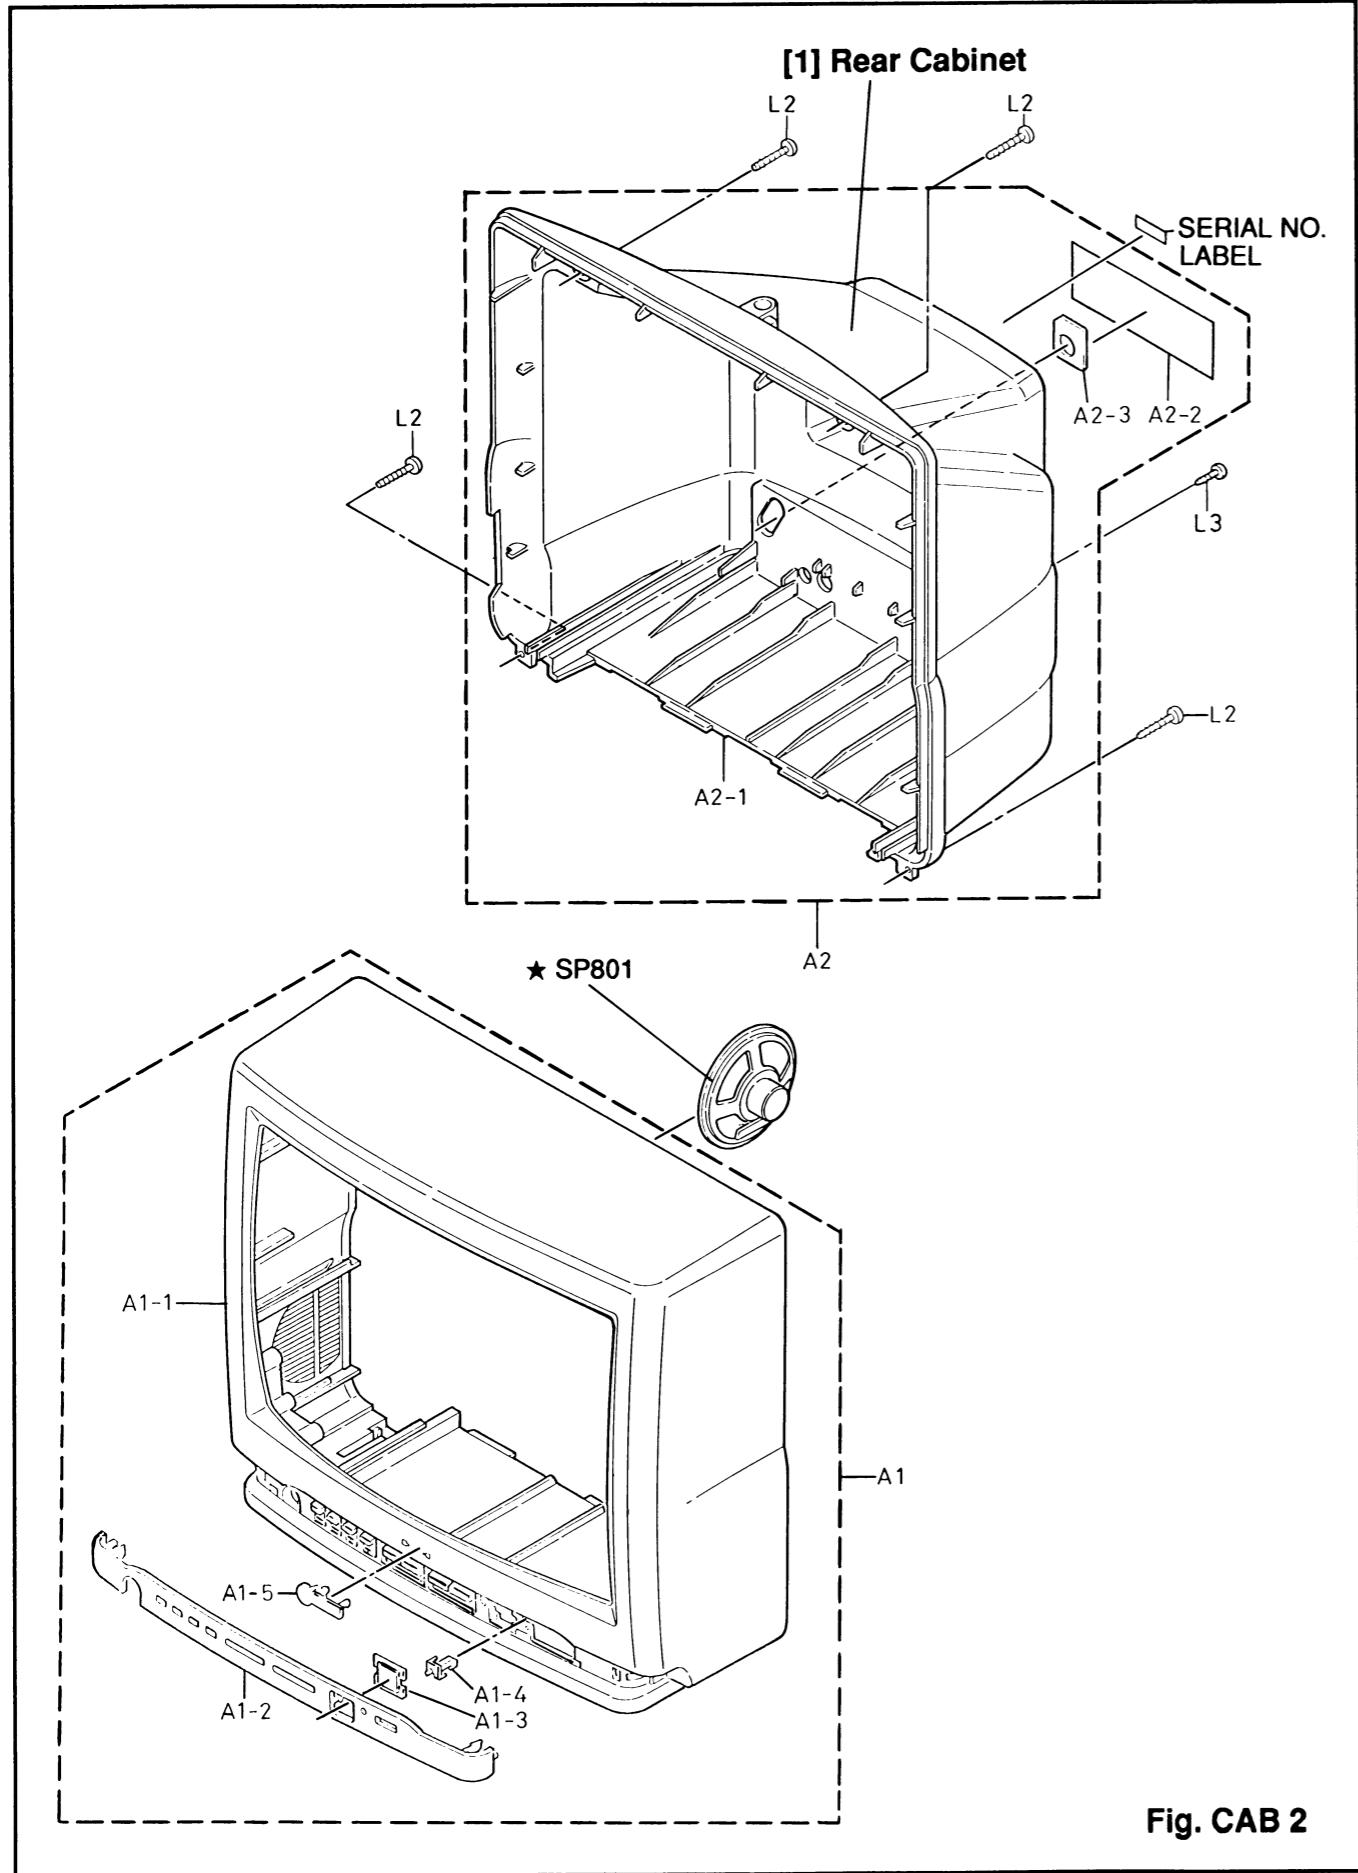


Fig. CAB 1



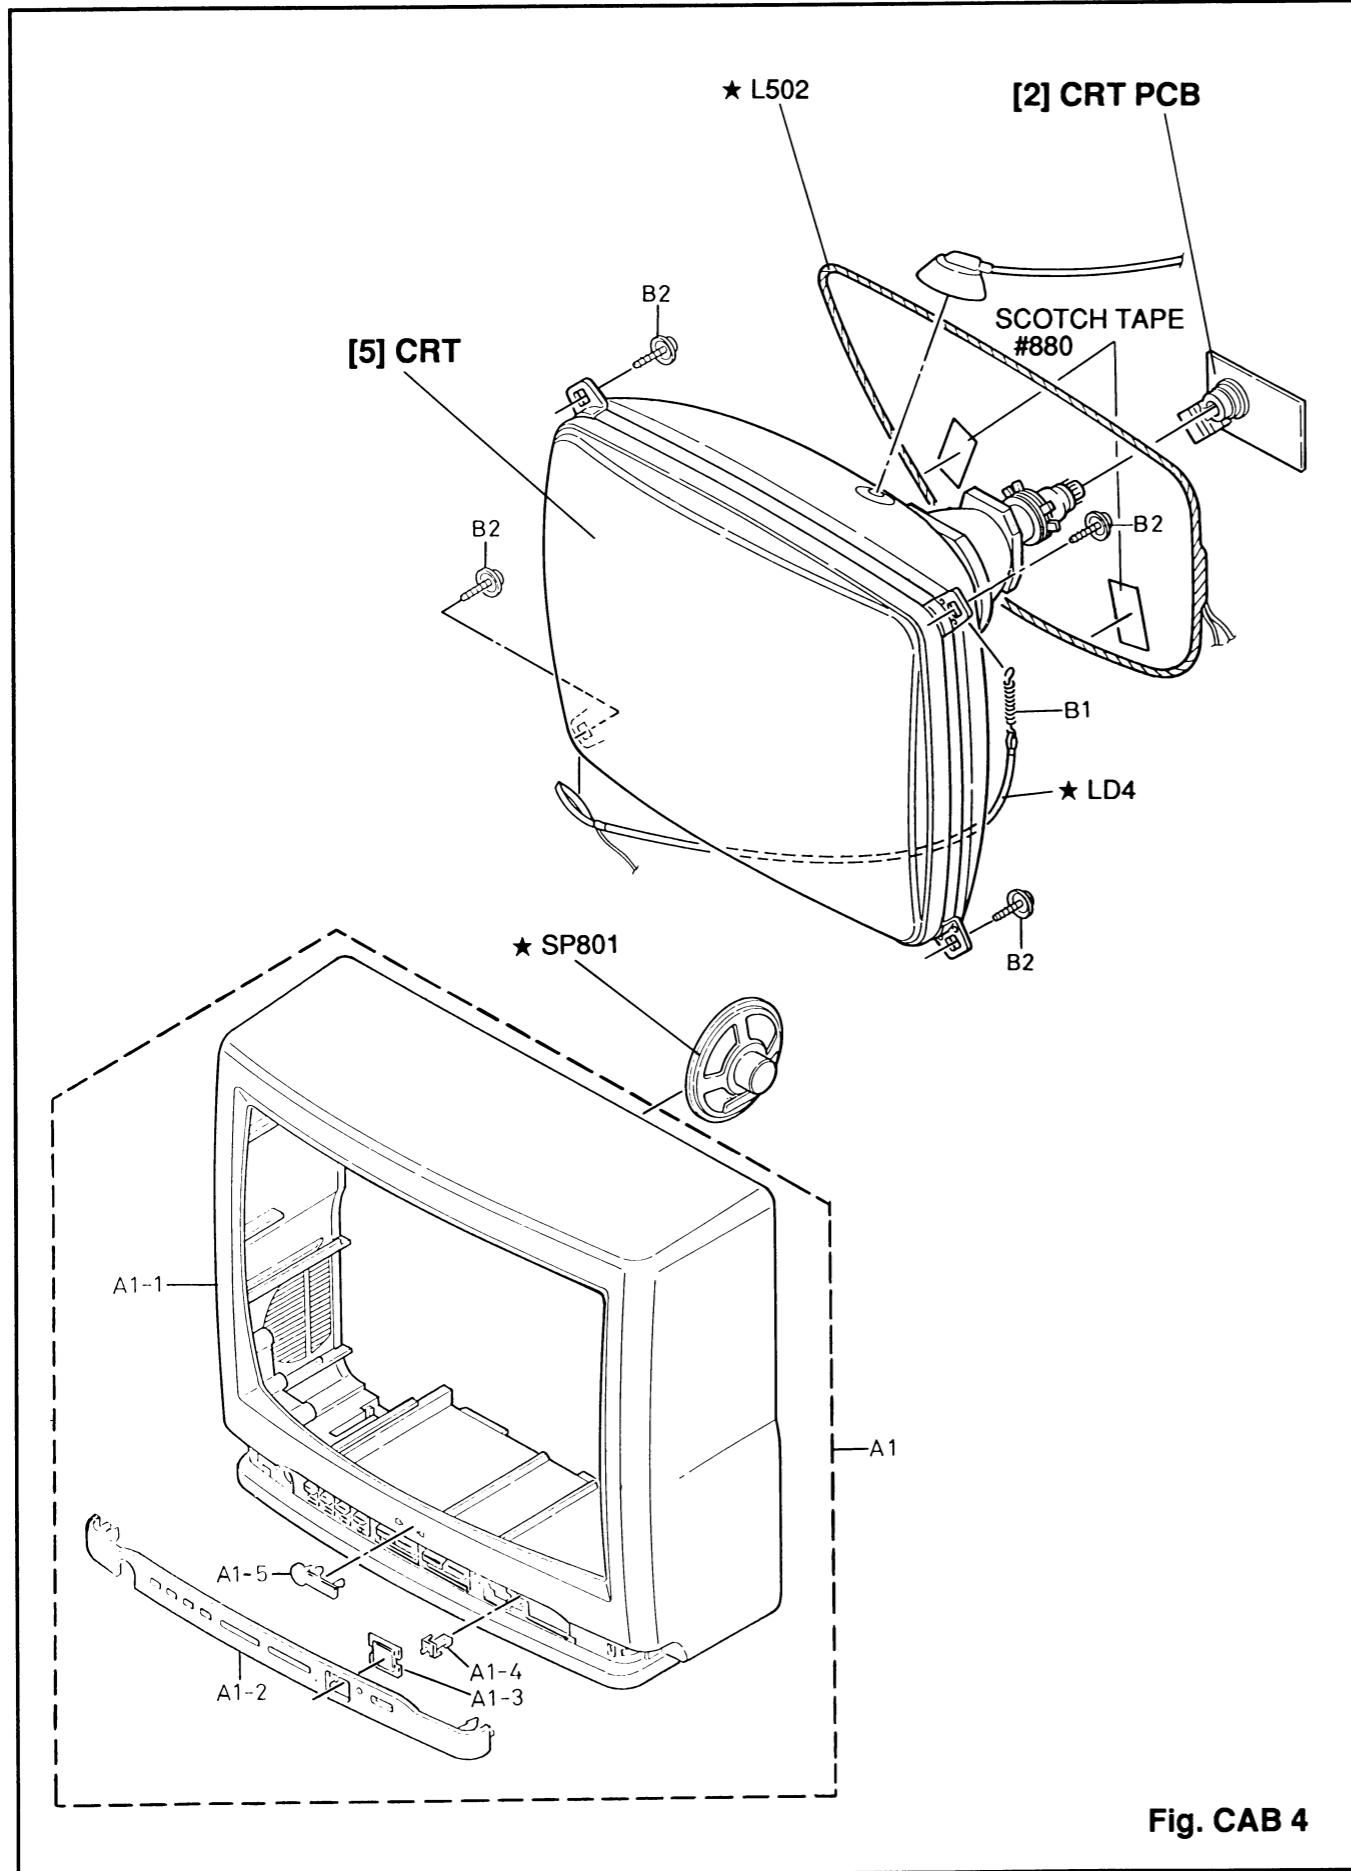


Fig. CAB 4

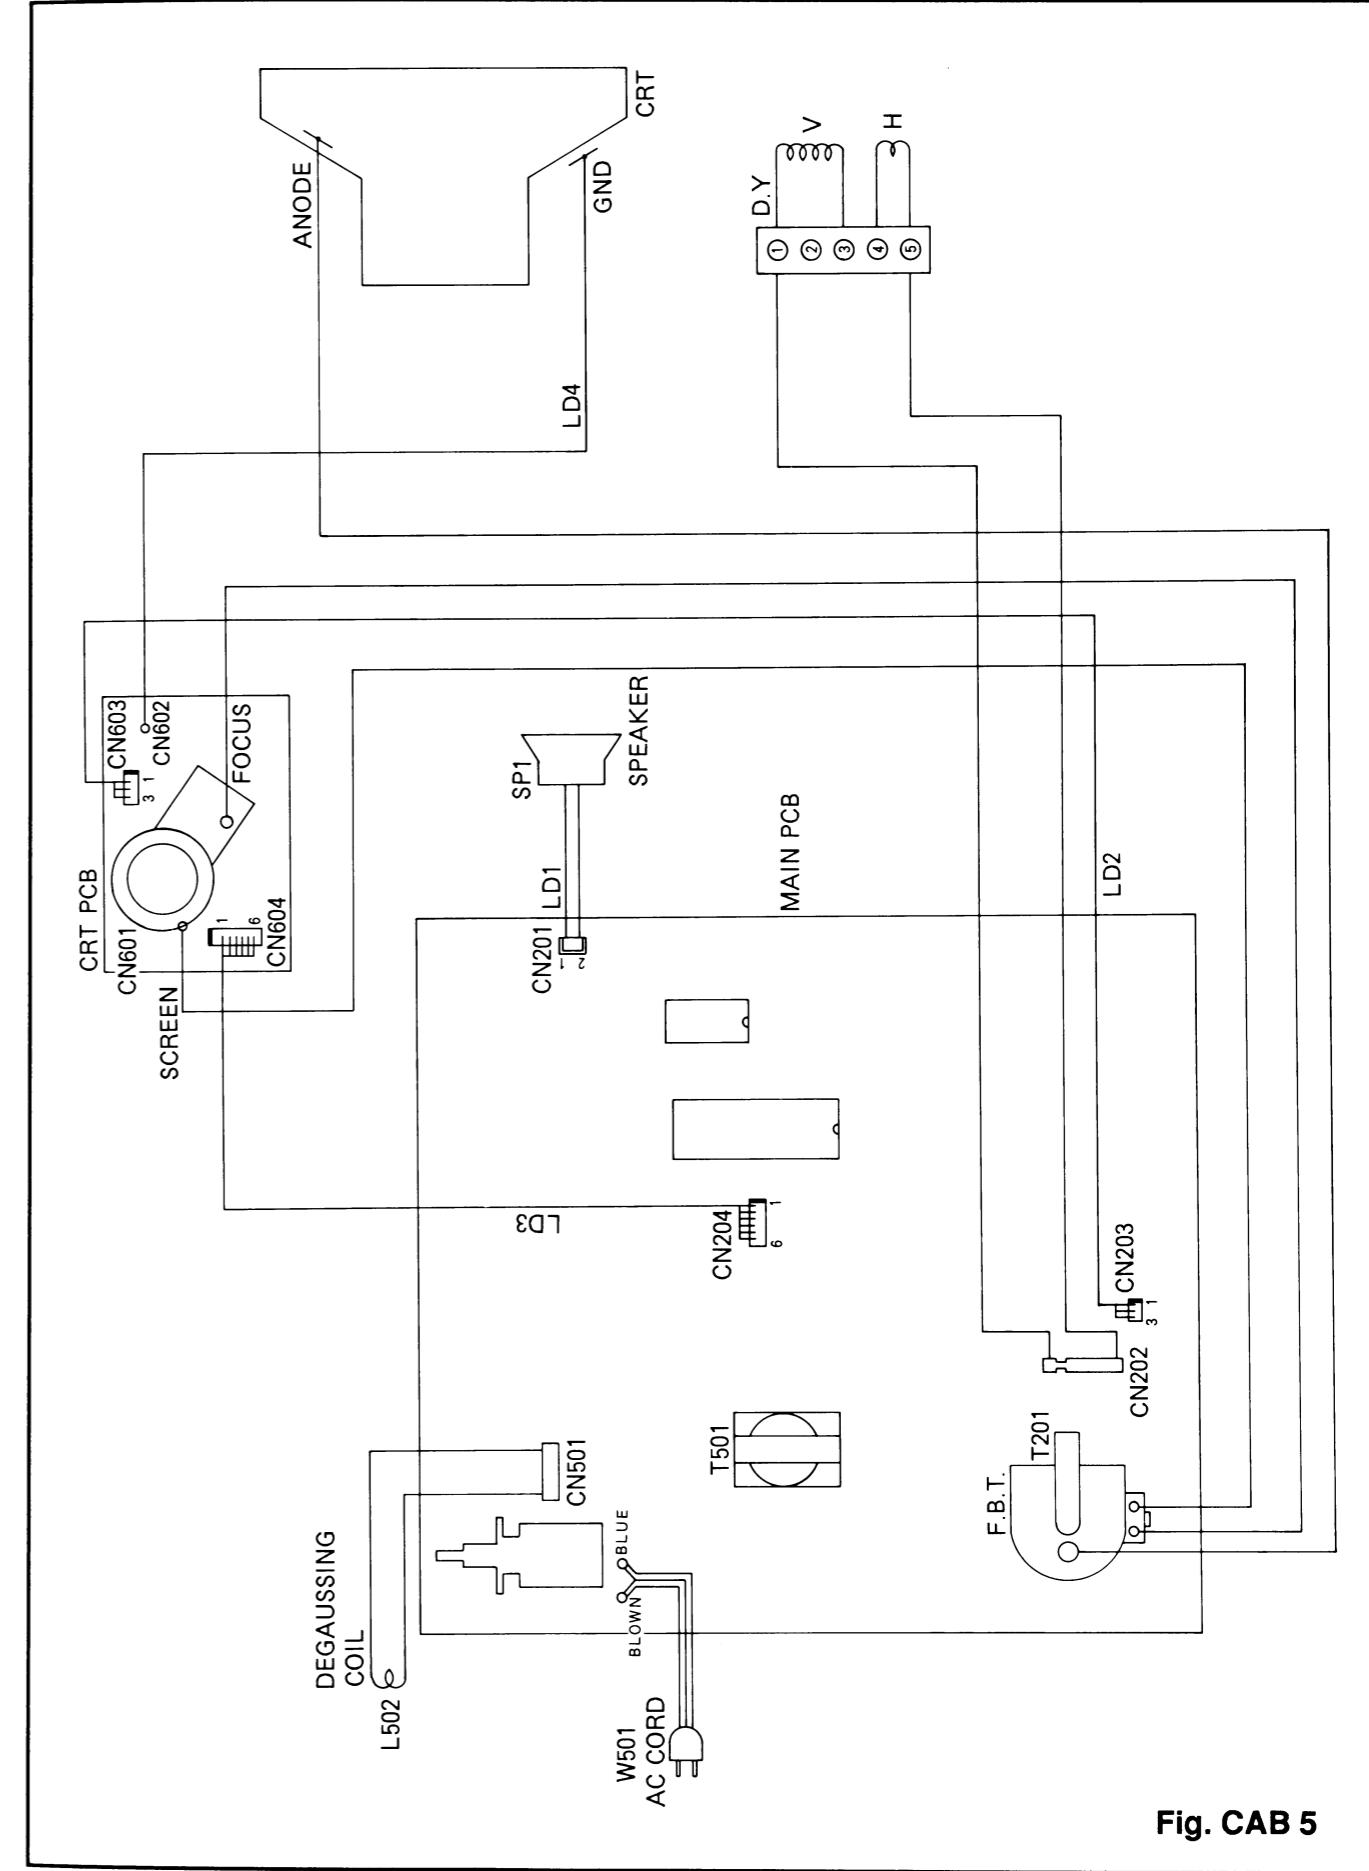


Fig. CAB 5

ELECTRICAL ADJUSTMENT INSTRUCTIONS

NOTE:

Electrical adjustments are required after replacing circuit components. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.


TEST EQUIPMENT REQUIRED:

1. IF Sweeper
2. DC Volt Meter
3. Oscilloscope: Dual Trace with 10:1 probe
4. PAL, SECAM and NTSC Pattern Generator
5. Monoscope
6. Color Analyzer

HOW TO SET UP THE ADJUSTMENT MODE:

Preset Mode: Press picture select button on the remote control unit, then press the number "1" button.

Brightness ----- Center
Color ----- Center
Contrast ----- Approx 70%

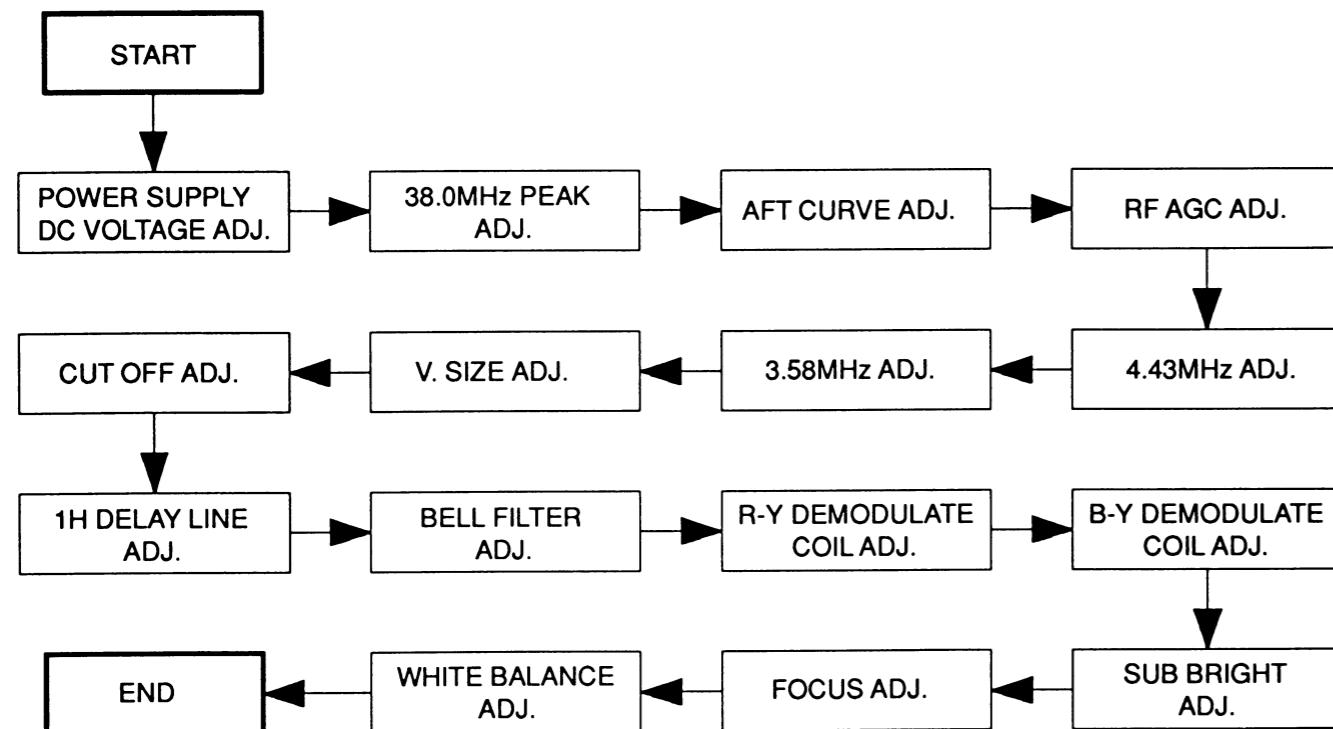

1. POWER SUPPLY DC VOLTAGE ADJUSTMENT

Purpose: To get correct voltage.

Symptom of Misadjustment: If voltage is incorrect, picture is dark.

Test Point	Adjustment Point	Input
D245	VR205	---
Equipment		Spec.
DC Volt Meter		DC +114±0.5V
Connections of M. EQ.		

Reference Notes: D245, VR205 --- MAIN PCB


1. To inactivate FBT, ground the base of Q220.
2. Connect both terminal of C343 by 1KΩ (60W~80W).
3. Connect the equipment as shown in the above table.
4. Adjust VR205 for reading +114±0.5V on the DC Volt Meter.

2. 38.0MHz PEAK ADJUSTMENT (for TUNER)

Purpose: To adjust PIF (Picture Intermediate Frequency).

Symptom of Misadjustment: Beat may appear on the picture and buzz may sound.

Test Point	Adjustment Point	Input
IC101 6pin, 16pin	L106	---
Equipment		Spec.
IF Sweeper, Oscilloscope		See below
Figure		

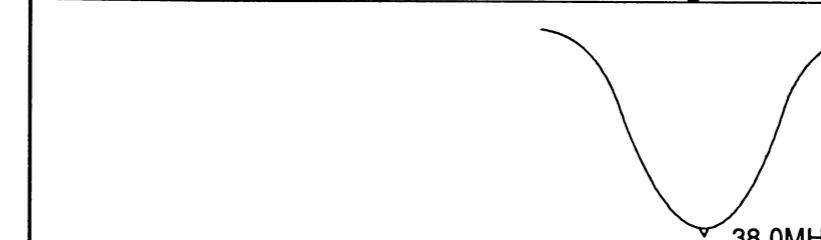

Reference Notes: IC101, L106 --- IF PCB

1. Connect Output of sweeper to 6pin of IC101.
Frequency set of sweeper are below:
(1) 31.5MHz (2) 32.4MHz (3) 33.57MHz (4) 35.8MHz (5) 38.0MHz (6) 39.45MHz
2. Connect the oscilloscope to 16pin of IC101.
3. Load DC Voltage to 4pin of IC101 as the wave of oscilloscope not to clip.
4. Adjust L106 as the marker for 38.0MHz to be peak.

3. AFT CURVE ADJUSTMENT (for TUNER)

Purpose: To operate AFT correctly.

Symptom of Misadjustment: AFT does not work correctly and/or synchronism will be faulty.

Test Point	Adjustment Point	Input
IC101 6pin, 11pin	L107	---
Equipment		Spec.
IF Sweeper, Oscilloscope		See below

Figure

Reference Notes: SW206 --- MAIN PCB IC101, L107 --- IF PCB

1. Connect output of sweeper to 6pin of IC101.
Frequency set is the same as for 38.0MHz Peak Adjustment.
2. Connect the oscilloscope to 11pin of IC101.
3. Push SW206 to disengage AFT action.
4. Adjust L107 as the marker for 38.0MHz to the center of AFT curve.

4. RF AGC ADJUSTMENT (for TUNER)

Purpose: Set AGC (Auto Gain Control) Level.

Symptom of Misadjustment: AGC does not synchronize correctly when RF Input Level is weak and distortion may cause on the picture when it is strong.

Test Point	Adjustment Point	Input
TU201 6pin	VR101	PAL Color Bar
Equipment		Spec.
PAL Pattern Generator, DC Volt Meter		DC +4.1±0.1V

Connections of M. EQ.

Reference Notes: TU201 --- MAIN PCB VR101 --- IF PCB

1. Receive the PAL Color Bar signal for 2ch (48.25MHz). (RF input level 80dB μ V at the best synchronized point)
2. Connect the equipment as shown in the above table.
3. Adjust VR101 for reading +4.1±0.1V on the DC Volt Meter.

5. 4.43MHz ADJUSTMENT

Purpose: To adjust the color sub-carrier frequency of PAL and SECAM.

Symptom of Misadjustment: No color when receiving PAL and SECAM signal.

Test Point	Adjustment Point	Input
Screen	C299	PAL Red Raster
Equipment		Spec.
PAL Pattern Generator		See below

Figure

(Pink) Picture is rolling or unstable.

<Turn C299>

(Purple)

Whole Screen Red Picture is stable.

Reference Notes: C299 --- MAIN PCB

1. Input the PAL Red Raster.
2. Check picture. A. If Red picture is stable.OK
B. If Red picture is rolling or unstable, adjust C299 until stable.

6. 3.58MHz ADJUSTMENT

Purpose: To adjust the color sub-carrier frequency of NTSC.

Symptom of Misadjustment: No color when receiving NTSC signal.

Test Point	Adjustment Point	Input
Screen	C298	NTSC Red Raster
Equipment		Spec.
NTSC Pattern Generator		See below


Reference Notes: C298 --- MAIN PCB

1. Input the NTSC Red Raster.
2. Check picture. Procedure is the same as for 4.43MHz Adjustment.

7. V. SIZE ADJUSTMENT

Purpose: To get correct vertical size of screen image.

Symptom of Misadjustment: Vertical size of screen image may not be properly displayed.

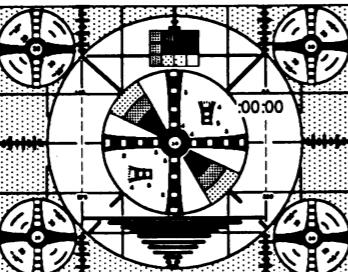Test Point	Adjustment Point	Input
Screen	VR204	Monoscopic Pattern
Equipment		Spec.
Monoscope		90±5%
Figure		
		

Reference Note: VR204 --- MAIN PCB


1. Operate the unit more than 20 minutes.
2. Input the Monoscopic Pattern.
3. Adjust VR204 so that the vertical size will be 90±5% of Monoscopic Pattern and the circle is round.

8. CUT OFF ADJUSTMENT

Purpose: To adjust the beam current of R, G, B and screen voltage.

Symptom of Misadjustment: White color may be reddish, greenish or bluish.

When the screen voltage is too high, the scanning line is appeared on the screen.

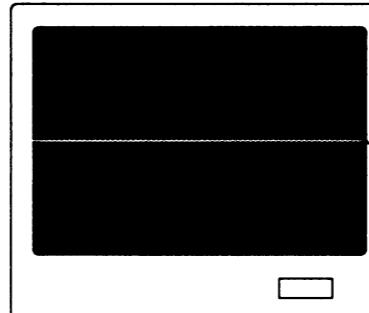Test Point	Adjustment Point	Input
Screen	VR604, VR605, VR606 Screen-VR (FBT)	Black Raster
Equipment		Spec.
Pattern Generator		See below
Figure		
		

Reference Notes: VR601, VR602, VR603, VR604, VR605, VR606 --- CRT PCB

SW209 --- MAIN PCB

Screen-VR --- MAIN PCB (FBT)


1. Operate the unit more than 20 minutes.
2. Degauss the CRT using Degaussing Coil.
3. Input the Black Raster.
4. Turn the Screen-VR (FBT) fully counterclockwise.
5. Set VR602 (B. Drive), VR603 (R. Drive), VR604 (B. Cut Off), VR605 (G. Cut Off), VR606 (R. Cut Off) and VR601 (Sub Bright) to center.
6. Set the SW209 (Service SW) to ON.
7. Slowly turn the Screen-VR (FBT) to the point where horizontal line just visible.
8. Adjust VR604 (Blue), VR605 (Green) and VR606 (Red) so that horizontal line becomes pure white.
9. Turn off the SW209 (Service SW).

Note: Confirm that White Balance Adj. is correct after this adjustment, and attempt White Balance Adj. if needed.

9. 1 H DELAY LINE ADJUSTMENT (for PAL)

Purpose: To get correct 1H delay line when the PAL signal is entered.

Symptom of Misadjustment: The Anti-PAL signal part is colored when the Philips Pattern is entered.
Each scanning line is colored on the color bar.

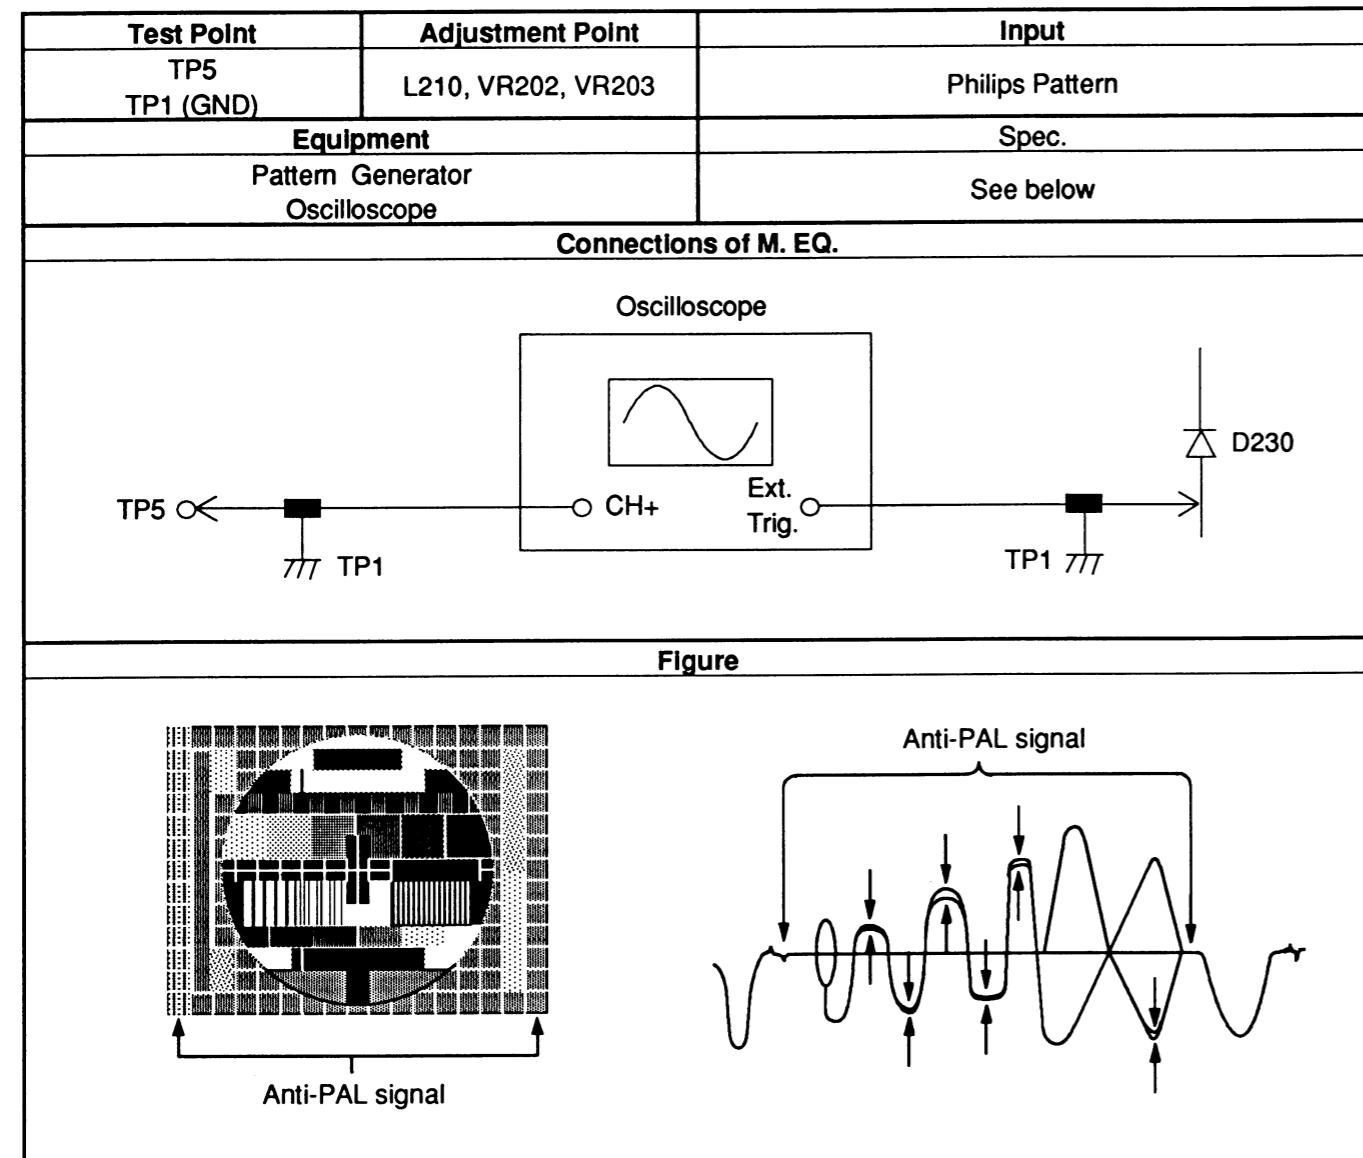


Reference Notes: D230, TP1, TP5, L210, VR202, VR203 --- MAIN PCB

1. Input the Philips Pattern.
2. Connect the equipment as shown in the above table.
3. Adjust VR202 VR203 and L210 so that the amplitude at Anti-PAL signal part becomes minimum (no color) and the waveform at the color bar part is not seen in double ("Venetian Blind" does not appear at the color bar signal part).

10. BELL FILTER ADJUSTMENT (for SECAM)

Purpose: To adjust the center frequency of SECAM bell filter.

Symptom of Misadjustment: The color will be reversed when the SECAM signal is entered.

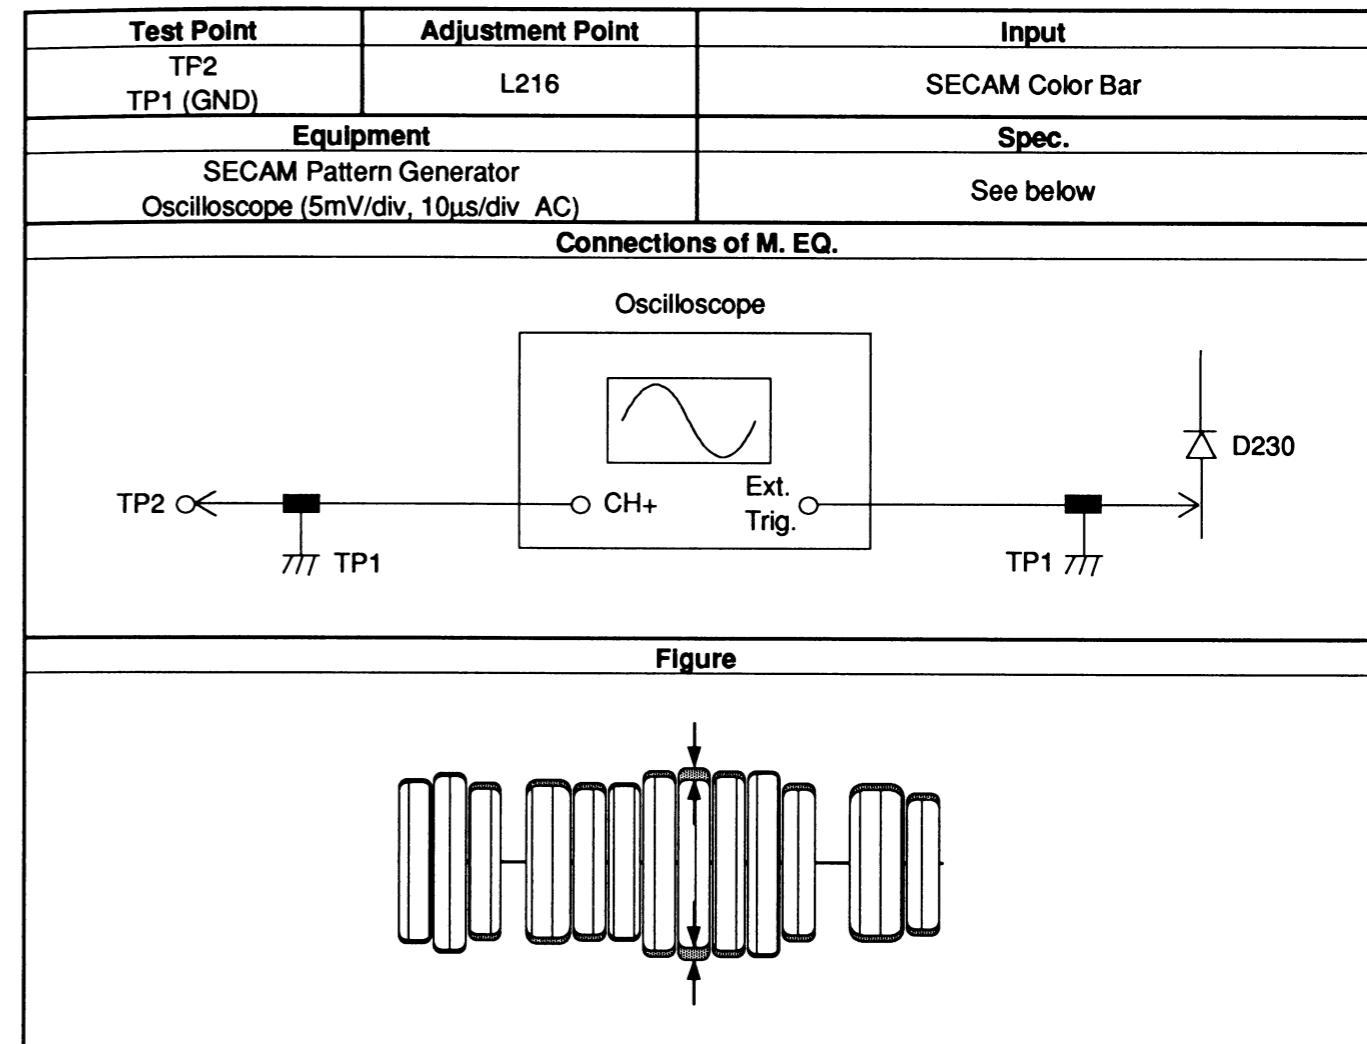

Reference Notes: D230, TP1, TP2, L216 --- MAIN PCB

1. Input the SECAM Color Bar signal.
The Contrast, Bright and Color control to center.
2. Connect the equipment as shown in the above table.
3. Set oscilloscope to 10 : 1 probe, AC 5mV/div and Range 10μs/div.
4. Adjust L216 with core driver to flat waveform.

11. R-Y DEMODULATE COIL ADJUSTMENT (for SECAM)

Purpose: To adjust the level of R-Y color difference signal.

Symptom of Misadjustment: The R, G and B will be unbalanced.

Test Point	Adjustment Point	Input
TP3 TP1 (GND)	L212	SECAM Black Raster
Equipment		Spec.
SECAM Pattern Generator Oscilloscope (20mV/div, 5μs/div AC)		See below
Connections of M. EQ.		
Figure 		

Reference Notes: D230, TP1, TP3, L212 --- MAIN PCB

1. Connect the equipment as shown in the above table.
2. Input the SECAM Black Raster.
3. Adjust L212 with core driver so that ① becomes center of ② as shown in the above table.

12. B-Y DEMODULATE COIL ADJUSTMENT (for SECAM)

Purpose: To adjust the level of B-Y color difference signal.

Symptom of Misadjustment: The R, G and B will be unbalanced.

Test Point	Adjustment Point	Input
TP4 TP1 (GND)	L211	SECAM Black Raster
Equipment		Spec.
SECAM Pattern Generator Oscilloscope (20mV/div, 5μs/div AC)		See below
Connections of M. EQ.		
Figure 		

Reference Notes: D230, TP1, TP4, L211 --- MAIN PCB

1. Connect the equipment as shown in the above table.
2. Input the SECAM Black Raster.
3. Adjust L211 with core driver so that ① becomes center of ② as shown in the above table.

13. SUB BRIGHT ADJUSTMENT

Purpose: To get proper brightness.

Symptom of Misadjustment: Proper brightness cannot be obtained by adjusting the Bright Control.

Test Point	Adjustment Point	Input
Screen	VR601	Gray Scale pattern
Equipment		Spec.
Pattern Generator		See below
Figure		

Reference Notes: VR601 --- CRT PCB

1. Operate the unit more than 20 minutes.
2. Input the 8-step Gray Scale pattern.
3. Adjust VR601 so that the bar is just visible. (See above figure)

14. FOCUS ADJUSTMENT

Purpose: To get correct focus.

Symptom of Misadjustment: Blurred image is shown on the display.

Test Point	Adjustment Point	Input
Screen	Focus-VR (FBT)	Monoscopic Pattern
Equipment		Spec.
Monoscope		See below
Figure		

Reference Note: Focus-VR (FBT) --- MAIN PCB

1. Operate the unit more than 20 minutes.
2. Input the Monoscopic Pattern.
3. Adjust Focus-VR (FBT) to obtain a clear picture.

SCHEMATIC DIAGRAMS / PCB'S AND TEST POINTS

STANDARD NOTES

Warning

Critical components having special safety characteristics are identified with a Δ by the Ref. No. in the parts list and enclosed within a broken line * (where several critical components are grouped in one area) along with the safety symbol Δ on the schematics or exploded views.

Use of substitute replacement parts which do not have the same specified safety characteristics may create shock, fire, or other hazards.

Under no circumstances should the original design be modified or altered without written permission from Funai Electric Company. Funai assumes no liability, express or implied, arising out of any unauthorized modification of design. Servicer assumes all liability.

Notes:

- ① Do not use the part number shown on these drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since these drawings were prepared.
- ② All resistance values are indicated in ohms ($K=10^3$, $M=10^6$).
- ③ Resistor wattages are 1/5W or 1/6W unless otherwise specified.
- ④ All capacitance values are indicated in μF ($P=10^{-6} \mu F$).

Note of Capacitors:

(M) --- Mylar Cap. (SC) --- Semiconductor Cap. (TF) --- Stacked Metallized Film Cap.

Temperature Characteristics of Capacitors are noted with the following:

(YB) --- $\pm 10\%$ (SR) --- $\pm 15\%$ (NP0) --- $0 \pm 60 \text{ ppm}/^\circ\text{C}$ (SL) --- $+350 \sim -1000 \text{ ppm}/^\circ\text{C}$

Tolerance of Capacitors are noted with the following:

(K) --- $\pm 10\%$ (Z) --- $+80 \sim -20\%$

Note of Resistor:

(F) --- Fuse Res.

VOLTAGE CHART

(Unit: Volt)

Pin No.	IC101	IC201	IC206
1	5.7	4.6	2.8
2	4.7	3.5	4.3
3	5.4	2.6	5.8
4	3.9	2.0	4.6
5	3.9	* 5.0~0.1	5.8
6	4.3	0	5.8
7	4.3	5.0	6.6
8	0	0	4.4
9	1.4	2.4	NC
10	4.8	2.5	4.4
11	6.0	2.5	0
12	3.8	5.0	0
13	8.4	5.0	0
14	8.4	5.0	0
15	3.8	5.0	3.1
16	4.4	5.0	5.0
17	11.7	0	2.9
18	0	NC	0.9
19	3.0	5.0	8.9
20	3.0	3.5	0.2
21		0	4.8
22		NC	0
23		0	0
24		0	2.2
25		0	9.0
26		4.1	3.6
27		5.0	0.5
28		3.0	0
29		3.0	4.2
30		0	5.2
31		—	3.0
32		—	0.6
33		4.9	0.4
34		0	6.1
35		5.0	6.1
36		4.5	5.8
37		0	2.5
38		5.0	2.6
39		0	2.5
40		0	3.9
41		0	4.8
42		5.0	6.8
43			2.6
44			3.3
45			3.6
46			6.3
47			8.9
48			0

Pin No.	IC202	IC203	IC204	IC205
1	5.0	6.0	0	11.0
2	2.5	5.9	13.0	4.9
3	2.5	6.9	27.4	NC
4	5.0	6.9	0.8	* 0.7~11.3
5	0	7.0	0.7	7.2
6	5.0	0	27.0	7.4
7	5.0	0	1.7	0
8	5.0	0		7.5
9		11.7		15.5
10		11.7		
11		11.7		
12		4.6		
13		5.0		
14		5.0		
15		6.0		
16		11.7		

Pin No.	IC207	IC208	IC209	IC210
1	16.3	32.0	2.5	11.8
2	0	0	2.5	0
3	11.8		4.9	8.9
4			4.9	
5			1.7	
6			1.7	
7			2.5	
8			2.6	
9			3.3	
10			2.7	
11			2.7	
12			1.7	
13			0.2	
14			0	
15			2.2	
16			3.8	
17			2.3	
18			1.7	
19			4.9	
20			4.9	
21			2.5	
22			2.5	
23			0	
24			2.5	

* Vol. Min~Max

Input: PAL Color Bar Signal (with 1KHz Audio Signal)

Receiving Ch.: E2 ch (48.25 MHz)

Preset Mode: Press Picture Select button on the remote control unit, then press the number "1" button.

Brightness--- Center

Color--- Center

Contrast--- Approx 70%

EXPLODED VIEW

(unit: Volt)


IC205
11.0
4.9
NC
0.7~11.3
7.2
7.4
0
7.5
15.5

IC210
11.8
0
8.9

Signal)

the control unit.

★ Marked Parts see the Electrical Parts List

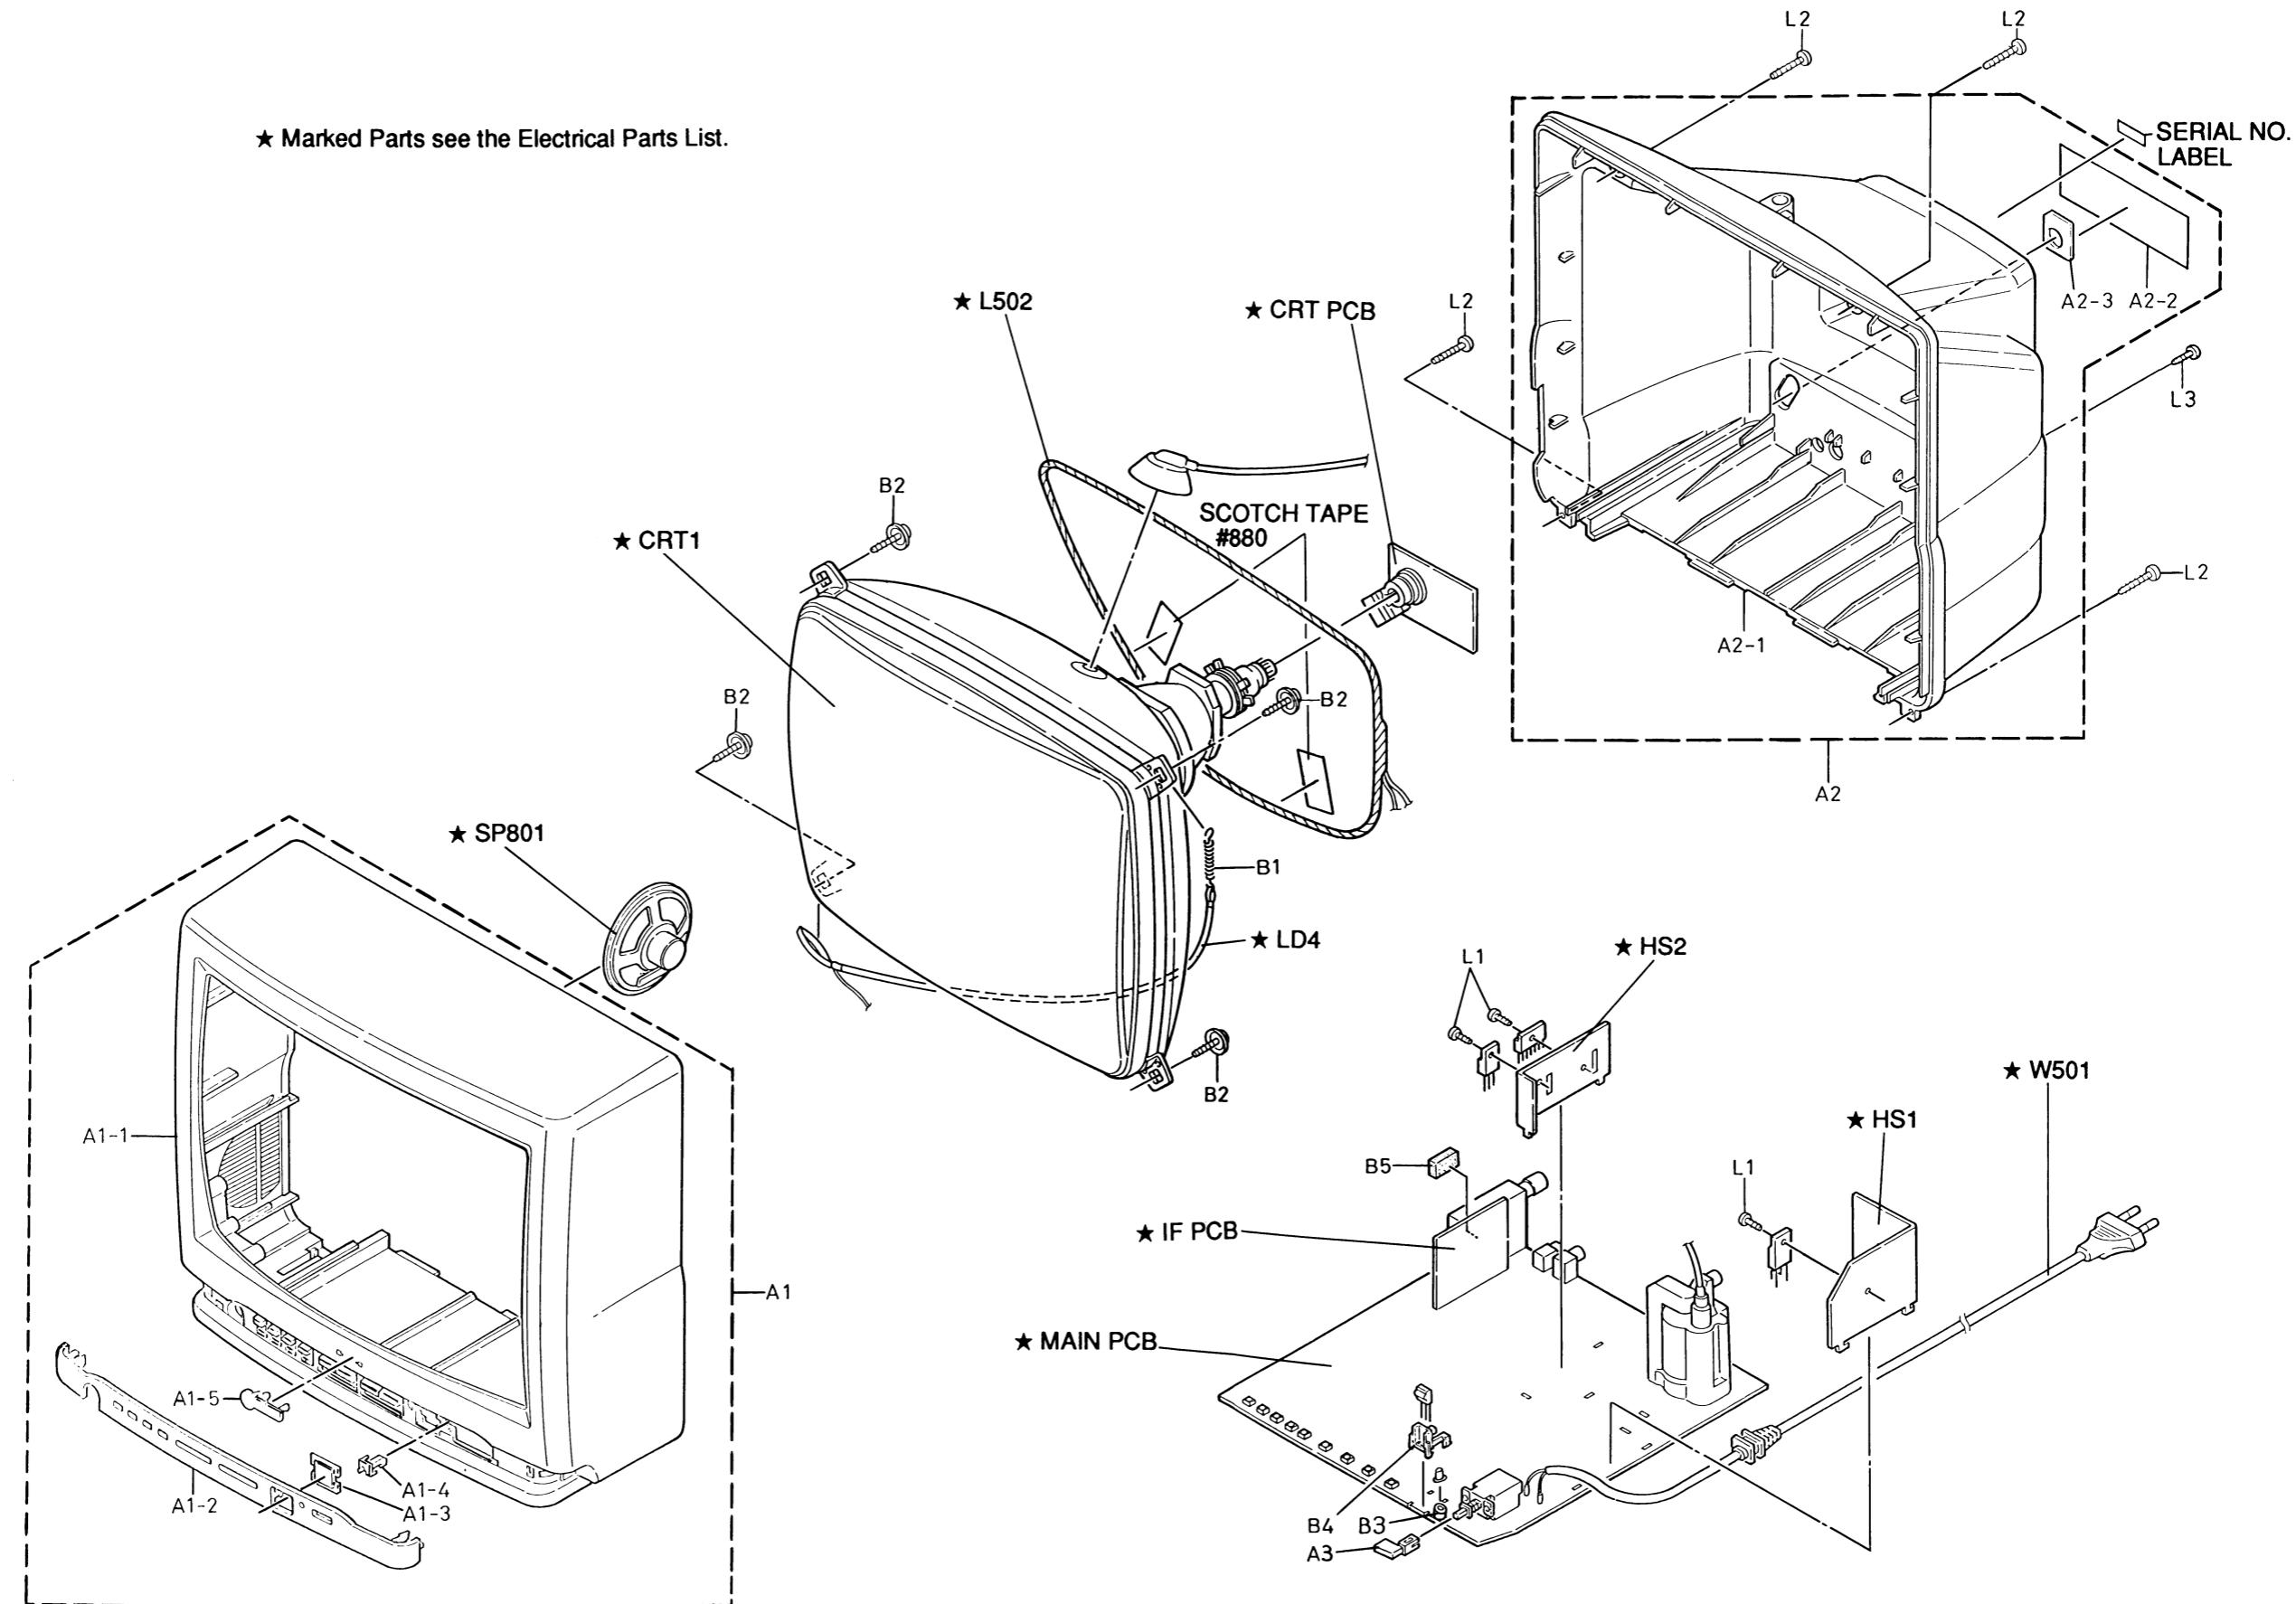

ELECTRICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a  have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTE: Parts that not assigned part numbers (-----) are not available.

Tolerance of Capacitors and Resistors are noted with the following symbols.

C.....±0.25%	F.....±1%	J.....±5%	M.....±20%	Z.....+80/-20%
D.....±0.5%	G.....±2%	K.....±10%	N.....±30%	

MMA PCB ASSEMBLY

Ref. No.	Description	Part No.
	MMA PCB ASSEMBLY Consists of the following:	MMA-87X
	PCB (MAIN+CRT+IF) MAIN PCB (MMA-A) CRT PCB (MMA-B) IF PCB (MMA-C)	BL7501F01001B

MAIN PCB (MMA-A)

Ref. No.	Description	Part No.
	MAIN PCB (MMA-A) Consists of the following:	-----
	CAPACITORS	
C 201	ELECTROLYTIC CAP. 470μF/16V M or ELECTROLYTIC CAP. 470μF/16V M or ELECTROLYTIC CAP. 470μF/16V M	CE1CMZDDL471 CE1CMZNTL471 626C477
C 202	ELECTROLYTIC CAP. 47μF/16V M	126C476S
C 203	ELECTROLYTIC CAP. 4.7μF/50V M	126F475S
C 209	ELECTROLYTIC CAP. 4.7μF/50V M	126F475S
C 211	ELECTROLYTIC CAP. 4.7μF/50V M	126F475S
C 212	ELECTROLYTIC CAP. 220μF/6.3V M	126A227S
C 213	ELECTROLYTIC CAP. 1μF/50V M	126F105S
C 214	CHIP CERAMIC CAP. F Z 0.022μF/50V	CHE1JZB0F223
C 215	ELECTROLYTIC CAP. 10μF/50V M	126F106S
C 216	*MYLAR CAP. 0.18μF/50V K	2250184S
C 217	ELECTROLYTIC CAP. 10μF/50V M	126F106S
C 218	ELECTROLYTIC CAP. 10μF/50V M	126F106S
C 219	ELECTROLYTIC CAP. 1μF/50V M	126F105S
C 220	CHIP CERAMIC CAP. SL J 120pF/50V	CHE1JJBSL121
C 221	ELECTROLYTIC CAP. 2.2μF/50V M	126F225S
C 224	CHIP CERAMIC CAP. CH J 24pF/50V	CHE1JJBCH240
C 225	CHIP CERAMIC CAP. CH J 24pF/50V	CHE1JJBCH240
C 226	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101
C 227	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101
C 228	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101
C 229	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 230	ELECTROLYTIC CAP. 47μF/16V M	126C476S
C 232	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101
C 233	ELECTROLYTIC CAP. 10μF/50V M	126F106S
C 234	ELECTROLYTIC CAP. 10μF/50V M	126F106S

* Mylar is a registered trademark of E. I. Du Pont de Nemours and Company.

Ref. No.	Description	Part No.	Ref. No.	Description	Part No.
C 263	METALIZED FILM CAP. 0.0047μF/1.6KV or METALIZED FILM CAP. 0.0047μF/1.6KV J	122Z183 1220496	C 319	CHIP CERAMIC CAP. SL J 27pF/50V	CHE1JJBSL270
C 264	METALIZED FILM CAP. 0.0018μF/1.6KV or METALIZED FILM CAP. 0.0018μF/1.6KV [for CRT: A34KFC12XX48/ 370KRB22-TC09(SPYB)]	122Z278 1220491	C 320	CHIP CERAMIC CAP. F Z 0.022μF/50V	CHE1JZB0F223
C 265	METALIZED FILM CAP. 0.0022μF/1.6KV or METALIZED FILM CAP. 0.0022μF/1.6KV [for CRT: 37GDA85X-TC01(P)]	122Z182 1220492	C 321	CHIP CERAMIC CAP. SL J 22pF/50V	CHE1JJBSL220
C 268	ELECTROLYTIC CAP. 0.47μF/160V or CERAMIC CAP. B K 0.0022μF/500V	CE2CMZNTLR47 CCD2JKS0B222	C 322	CHIP CERAMIC CAP. SL J 47pF/50V	CHE1JJBSL470
C 271	ELECTROLYTIC CAP. 47μF/160V M (105°C) or ELECTROLYTIC CAP. 47μF/160V M (105°C)	CA2C470NC009 CE2CMZDEH470	C 323	CHIP CERAMIC CAP. SL J 22pF/50V	CHE1JJBSL220
C 272	CHIP CERAMIC CAP. SL J 330pF/50V	CHE1JJBSL331	C 324	MYLAR CAP. 0.056μF K	2250563S
C 273	ELECTROLYTIC CAP. 4.7μF/50V M	126F475S	C 325	MYLAR CAP. 0.056μF K	2250563S
C 274	ELECTROLYTIC CAP. 0.47μF/50V	126X474S	C 326	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 275	CHIP CERAMIC CAP. B K 0.0027μF/50V	CHE1JKB0B272	C 328	SEMICONDUCTOR CAP. 0.01μF/25V K	12Y2103S
C 276	CHIP CERAMIC CAP. SL J 240pF/50V	CHE1JJBSL241	C 329	ELECTROLYTIC CAP. 2.2μF/50V	126X225S
C 277	ELECTROLYTIC CAP. 3.3μF/50V	126F335S	C 330	CHIP CERAMIC CAP. SL J 39pF/50V	CHE1JJBSL390
C 278	MYLAR CAP. 0.01μF K	2250103S	C 331	CHIP CERAMIC CAP. SL J 13pF/50V	CHE1JJBSL130
C 279	SEMICONDUCTOR CAP. 0.015μF/25V K	12Y2153S	C 332	CHIP CERAMIC CAP. SL J 27pF/50V	CHE1JJBSL270
C 280	SEMICONDUCTOR CAP. 0.022μF/25V K	12Y2223S	C 333	CHIP CERAMIC CAP. SL J 33pF/50V	CHE1JJBSL330
C 281	ELECTROLYTIC CAP. 47μF/16V M	126C476S	C 334	SEMICONDUCTOR CAP. 0.027μF/25V K	12Y2273S
C 282	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103	C 335	ELECTROLYTIC CAP. 1μF/50V M	126F105S
C 284	ELECTROLYTIC CAP. 0.47μF/50V M	126F474S	C 336	CHIP CERAMIC CAP. B K 0.001μF/50V	CHE1JKB0B102
C 285	ELECTROLYTIC CAP. 0.47μF/50V M	126F474S	C 337	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 286	ELECTROLYTIC CAP. 0.47μF/50V M	126F474S	C 339	ELECTROLYTIC CAP. 100μF/16V	126C107S
C 287	ELECTROLYTIC CAP. 10.μF/50V M	126F106S	C 340	CERAMIC CAP. B K 470pF/500V	CCD2JKSSL471
C 288	ELECTROLYTIC CAP. 0.1μF/50V M	126F104S	C 341	CERAMIC CAP. B K 470pF/50V	3B42471S
C 289	ELECTROLYTIC CAP. 0.1μF/50V M	126F104S	C 342	CERAMIC CAP. B K 470pF/50V	3B42471S
C 290	ELECTROLYTIC CAP. 0.1μF/50V M	126F104S	C 343	ELECTROLYTIC CAP. 100μF/160V M (105°C) or ELECTROLYTIC CAP.	CE2CMZDEH101
C 291	SEMICONDUCTOR CAP. 0.01μF/25V K	12Y2103S	C 344	100μF/160V M (105°C) or ELECTROLYTIC CAP.	622Z737
C 292	CHIP CERAMIC CAP. SL J 12pF/50V	CHE1JJBSL120	C 345	ELECTROLYTIC CAP. 1000μF/25V M W/F	626D108
C 293	ELECTROLYTIC CAP. 1μF/50V M	126F105S	C 346	ELECTROLYTIC CAP. 470μF/16V M	626C477
C 294	ELECTROLYTIC CAP. 10μF/50V M	126F106S	C 347	ELECTROLYTIC CAP. 2200μF/25V M	CE1EMZNTL222
C 295	SEMICONDUCTOR CAP. 0.1μF/25V Z	1220520S	C 348	ELECTROLYTIC CAP. 470μF/16V M	626C477
C 296	SEMICONDUCTOR CAP. 0.1μF/25V Z	1220520S	C 353	MYLAR CAP. 0.056μF K	2250563S
C 297	CHIP CERAMIC CAP. CH J 180pF/50V	CHE1JJBCH181	C 363	ELECTROLYTIC CAP. 470μF/16V M	626C477
C 298	ELECTROLYTIC CAP. 10μF/50V M	126F106S	C 364	MYLAR CAP. 0.1μF/50V K	2250104S
C 300	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101	C 368	CHIP CERAMIC CAP. B K 0.001μF/50V	CHE1JKB0B102
C 301	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101	C 370	MYLAR CAP. 0.1μF/50V K	2250104S
C 302	CHIP CERAMIC CAP. SL J 100pF/50V	CHE1JJBSL101	C 371	CERAMIC CAP. B K 0.001μF/50V	3B42102S
C 303	CHIP CERAMIC CAP. CH J 180pF/50V	CHE1JJBCH181	C 372	CERAMIC CAP. CH D 10pF/50V	32CH100S
C 304	CHIP CERAMIC CAP. CH J 180pF/50V	CHE1JJBCH181	C 373	CHIP CERAMIC CAP. F Z 0.047μF/25V	CHE1JZB0F473
C 305	CHIP CERAMIC CAP. CH J 180pF/50V	CHE1JJBCH181	C 374	CHIP CERAMIC CAP. F Z 0.047μF/25V	CHE1JZB0F473
C 306	CHIP CERAMIC CAP. CH D 7pF/50V	CHE1JJBCH7R0	C 375	ELECTROLYTIC CAP. 47μF/16V M	126C476S
C 307	CHIP CERAMIC CAP. CH J 20pF/50V	CHE1JJBCH200	C 376	CERAMIC CAP. 1000pF/1KV or	CCD3AKP0B102
C 308	CHIP CERAMIC CAP. F Z 0.047μF/25V	CHE1EZB0F473	C 377	CERAMIC CAP. 1000pF/1KV	6220574
C 309	CHIP CERAMIC CAP. CH D 8pF/50V	CHE1JDBCH8R0	C 378	CERAMIC CAP. CH J 47pF/50V	32CH470S
C 310	CHIP CERAMIC CAP. CH J 20pF/50V	CHE1JJBCH200	C 379	ELECTROLYTIC CAP. 1000μF/10V M W/F	626B108
C 312	CHIP CERAMIC CAP. SL J 56pF/50V M	CHE1JJBSL560	C 382	CHIP CERAMIC CAP. B K 0.027μF/50V	CHE1JKB0B272
C 313	ELECTROLYTIC CAP. 1000μF/16V	626C108	C 384	CERAMIC CAP. 100pF 500V	CCD2JKD0B101
C 314	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103	C 501 	CERAMIC CAP. 2200pF/400V or	CCG2HMP0E222
C 315	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103	C 502 	CERAMIC CAP./SAFETY 0.0022μF	1220621
C 316	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103	C 503 	CERAMIC CAP. 2200pF/400V or	CCG2HMP0E222
C 317	ELECTROLYTIC CAP. 0.47μF/50V	126F474S	C 504 	CERAMIC CAP./SAFETY 0.0022μF</	

Ref. No.	Description	Part No.
C 506	ELECTROLYTIC CAP. 150μF/400V or ELECTROLYTIC CAP. 150μF/400V	122Z020 1220893
C 507	MYLAR CAP. 0.039μF/50V K	2250393S
C 508	CERAMIC CAP. 680pF/2KV or CERAMIC CAP. 680pF/2KV	CCD3DKP0B681 6220584
C 509	MYLAR CAP. 0.022μF/50V K	2250223S
C 510	MYLAR CAP. 0.022μF/50V K	2250223S
C 512 △	CERAMIC CAP. 2200pF/400V(T4KV) or CERAMIC CAP. 0.0022μF 4KV	CCN2HMP0E222 122Z011
C 513	CERAMIC CAP. 2200pF/1KV or CERAMIC CAP. 2200pF/1KV	CCD3AKP0B222 6220576
C 515	ELECTROLYTIC CAP. 330μF/25V M	126D337S
C 516	ELECTROLYTIC CAP. 220μF/6.3V M	126A227S
C 517	CERAMIC CAP. 2200pF/1KV or CERAMIC CAP. 2200pF/1KV	CCD3AKP0B222 6220576
CONNECTORS		
CN 201	CONNECTOR BASE 2P	1740764
CN 202	CONNECTOR BASE 5P or CONNECTOR BASE 5P or	1730812 1730813
	CONNECTOR BASE 5P	1780168
CN 208	CONNECTOR BASE 2P	1740764
CN 501	CONNECTOR BASE 2P or CONNECTOR BASE 2P	1780276 1780165
DIODES		
D 202	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 204	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 208	ZENER DIODE MTZ12C or ZENER DIODE GZS12Z	MTZ12CS QDTZ000GZS12
D 211	ZENER DIODE MTZ7.5B or ZENER DIODE GZS7.5Y	MTZ7.5BS QDTY00GZS7R5
D 212	ZENER DIODE MTZ7.5B or ZENER DIODE GZS7.5Y	MTZ7.5BS QDTY00GZS7R5
D 213	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 214	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 215	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 216	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 217	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 218	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 221	LED KLR-133L or LED SLR-55VC3F(RED)	NP9Z0KLR133L 1401273
D 222	ZENER DIODE MTZ5.1C or ZENER DIODE GZS5.1Z	MTZ5.1CS QDTZ00GZS5R1
D 223	ZENER DIODE MTZ6.2B or ZENER DIODE GZS6.2Y	MTZ6.2BS QDTY00GZS6R2
D 224	ZENER DIODE MTZ5.1B or ZENER DIODE GZS5.1Y	MTZ5.1BS QDTY00GZS5R1
D 225	ZENER DIODE MTZ5.1B or ZENER DIODE GZS5.1Y	MTZ5.1BS QDTY00GZS5R1
D 226	ZENER DIODE MTZ5.1B or ZENER DIODE GZS5.1Y	MTZ5.1BS QDTY00GZS5R1
D 227	DIODE ERA15-02KFRB	QDNZ0ERA1502

Ref. No.	Description	Part No.
D 228	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 229	DIODE ERB12-02L3	AERB1202L300
D 230	FAST RECOVERY DIODE ERB44-04L3	QDQZ0ERB4404
D 231	DIODE 1SS130	1SS130S
D 232	ZENNER DIODE MTZ18B or ZENER DIODE GZS18Y	MTZ18BS QDTY00GZS18
D 233	ZENNER DIODE MTZ20B or ZENER DIODE GZS20Y	MTZ20BS QDTY00GZS20
D 234	ZENNER DIODE MTZ9.1B or ZENER DIODE GZS9.1Y	MTZ9.1BS QDTY00GZS9R1
D 235	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 236	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 237	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 238	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 239	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 240	ZENER DIODE MTZ7.5B or ZENER DIODE GZS7.5Y	MTZ7.5BS QDTY00GZS7R5
D 242	FAST RECOVERY DIODE ERD38-06L	AERD3806L000
D 243	DIODE ERA22-02KFRB	QDSZ0ERA2202
D 244	FAST RECOVERY DIODE ERB44-02L3	QCDZERB4402L
D 245	ZENER DIODE EQB01-150 or RECTIFIER DIODE R2M LF-B1	AEQB01150000 QDDZ0000R2M
D 248	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 249	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 251	ZENER DIODE MTZ6.8B or ZENER DIODE GZS6.8Y	MTZ6.8BS QDTY00GZS6R8
D 252	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 253	FAST RECOVERY DIODE ERB44-02L3	QDQZ0ERB4404
D 254	ZENER DIODE MTZ8.2B or ZENER DIODE GZS8.2	MTZ8.2BS QDTY00GZS8R2
D 256	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 501	DIODE ERC04-10L3	QDDZ0ERC0410
D 502	DIODE ERC04-10L3	QDDZ0ERC0410
D 503	DIODE ERC04-10L3	QDDZ0ERC0410
D 504	DIODE ERC04-10L3	QDDZ0ERC0410
D 505	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 506	FAST RECOVERY DIODE ERB44-02L3	QCDZERB4402L
D 507	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 509	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
D 510	ZENER DIODE MTZ15B or ZENER DIODE GZS15Y	MTZ15BS QDTY00GZS15
D 511	DIODE 1SS133 or DIODE 1SS176	1SS133S 1SS176S
ICS		
IC 201	IC TMP47C634N-R514	QSMQA0ZTS016
IC 202	IC TC89101P	GTC89101P***

Ref. No.	Description	Part No.
IC 203	IC TC4053BP or IC BU4053B	14DW168 14LF166
IC 204	IC LA7830	14LQ163
IC 205	IC AN5265	14LN160
IC 206	IC TA8759AN	GTA8759AN000
IC 207	IC 78M12 or IC 78M12 or IC 78M12 or IC 78M12	AN78M12 14L0242 UPC78M12HF L78M12
IC 208	IC L5631	L5631
IC 209	IC 78M05 or IC 78M05	AN78M05 L78M05
IP 201 △	IC PROTECTOR ICP-N10	579F085Z
IP 202 △	IC PROTECTOR ICP-N20	579F087Z
COILS		
L 204	INDUCTOR 39μH (J) or INDUCTOR 39μH (J)	2164390S 2161390S
L 206	SIZE COIL or	LLBB000AE005
L 207	POT TYPE COIL 4.7mH	1140097
L 208	MICRO INDUCTOR 68μH-K-AXT or MICRO INDUCTOR 68μH-K-5FT	117M957 2165680S
L 209	DELAY LINE	2162680S
L 210	CASING COIL	LFA07V0MM029
L 211	CASING COIL	LFA07V0MM031
L 212	CASING COIL	LFA07V0MM031
L 213	MICRO INDUCTOR 10μH or MICRO INDUCTOR 10μH	2165100S 2162100S
L 214	MICRO INDUCTOR 27μH-K-AXT or MICRO INDUCTOR 27μH-K-5FT	2165270S 2162270S
L 215	CASING COIL	LFA07V0MM032
L 216	CASING COIL	LFA07V0MM030
L 217	MICRO INDUCTOR 33μH-K-AXT or MICRO INDUCTOR 33μH-K-AXT	2165330S 2162330S
L 218	POT TYPE COIL 47μH K or POT TYPE COIL 47μH K	LLBD**DMM001 LLBD00DQE001
L 219	POT TYPE COIL 47μH K or POT TYPE COIL 47μH K	LLBD**DMM001 LLBD00DQE001
R 213	MICRO INDUCTOR 10μH or MICRO INDUCTOR 10μH	2165100S 2162100S
TRANSISTORS		
Q 201	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or	QSC3331TNPA QSC3331UNPA
Q 204	TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	NQC40KTC3198 NQC10KTC3199
Q 205	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC3198GR TO-92 or	QSC3331TNPA QSC3331UNPA NQC40KTC3198
Q 206	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC3198GR TO-92 or	QSC3331TNPA QSC3331UNPA NQC40KTC3198
Q 207	TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	NQC40KTC3198 NQC10KTC3199

Ref. No.	Description	Part No.
Q 208	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or	QSC3331TNPA QSC3331UNPA
Q 209	TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	NQC40KTC3198 NQC10KTC3199
Q 210	TRANSISTOR 2SA1318T or TRANSISTOR 2SA1318U or	2SA1318T-AA-NP 2SA1318U-AA-NP
Q 211	TRANSISTOR KTA1266GR TO-92 or TRANSISTOR KTA1267GR	NQS40KTA1266 NQS10KTA1267
Q 213	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or	QSC3331TNPA QSC3331UNPA
Q 214	TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	NQC40KTC3198 NQC10KTC3199
Q 215	TRANSISTOR 2SA1318T or TRANSISTOR 2SA1318U or	2SA1318T-AA-NP 2SA1318U-AA-NP
Q 216	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or	QSC3331TNPA QSC3331UNPA
Q 217	TRANSISTOR KTC3198GR TO-92 or TRANSISTOR 2SC3331(T) or	NQC40KTC3198 QSC3331TNPA
Q 218	TRANSISTOR KTC3198GR TO-92 or TRANSISTOR 2SC3331(U) or	NQC10KTC3199 QSC3331TNPA
Q 219	TRANSISTOR 2SC2271(D) or TRANSISTOR 2SC2271(E)	2SD2271D-AA-MP 2SC2271E-AA-MP
Q 220	TRANSISTOR 2SD2333LS	QPZP02SD2333
Q 221	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or	QSC3331TNPA QSC3331UNPA
Q 222	TRANSISTOR KTC3198GR TO-92 or 	

Ref. No.	Description	Part No.
Q 225	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	QSC3331TNPAA QSC3331UNPAA NQC40KTC3198 NQC10KTC3199
Q 226	TRANSISTOR KTC3199GR or TRANSISTOR KTC3198GR or TRANSISTOR KTC3198GR or TRANSISTOR 2SC3331T or TRANSISTOR 2SC3331U	NQC10KTC3199 NQC40KTC3198 NQC40KTC3198 QSC3331TNPAA QSC3331UNPAA
Q 227	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	QSC3331TNPAA QSC3331UNPAA NQC40KTC3198 NQC10KTC3199
Q 228	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	QSC3331TNPAA QSC3331UNPAA NQC40KTC3198 NQC10KTC3199
Q 229	TRANSISTOR KTA1267GR or TRANSISTOR KTA1266GR or TRANSISTOR 2SA1318T or TRANSISTOR 2SA1318U	NQS10KTA1267 NQS40KTA1266 2SA1318T-AA-NP 2SA1318U-AA-NP
Q 230	TRANSISTOR KTA1267GR or TRANSISTOR KTA1266GR or TRANSISTOR 2SA1318T or TRANSISTOR 2SA1318U	NQS10KTA1267 NQS40KTA1266 2SA1318T-AA-NP 2SA1318U-AA-NP
Q 231	TRANSISTOR KTC3199GR or TRANSISTOR KTC3198GR or TRANSISTOR 2SC3331T or TRANSISTOR 2SC3331U	NQC10KTC3199 NQC40KTC3198 QSC3331TNPAA QSC3331UNPAA
Q 232	TRANSISTOR KTC3199GR or TRANSISTOR KTC3198GR or TRANSISTOR 2SC3331T or TRANSISTOR 2SC3331U	NQC10KTC3199 NQC40KTC3198 QSC3331TNPAA QSC3331UNPAA
Q 233	TRANSISTER 2SB1274(R) or TRANSISTER 2SB1274(S)	Q2SB1274R000 Q2SB1274S000
Q 234	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	QSC3331TNPAA QSC3331UNPAA NQC40KTC3198 NQC10KTC3199
Q 235	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	QSC3331TNPAA QSC3331UNPAA NQC40KTC3198 NQC10KTC3199
Q 236	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	QSC3331UNPAA QSC3331TNPAA NQC40KTC3198 NQC10KTC3199
Q 237	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC3198GR TO-92 or TRANSISTOR KTC3199GR	QSC3331TNPAA QSC3331UNPAA NQC40KTC3198 NQC10KTC3199
Q 501	TRANSISTOR 2SD1710CA	QREZ02SD1710
Q 502	TRANSISTOR 2SC3807	QQPZ02SC3807
Q 504	TRANSISTOR 2SB698(F) or TRANSISTOR 2SB698(G)	QQSF002SB698 QQSG002SB698
Q 505 ▲	PHOTO COUPLER PC111LYS	QPES0PC111LY
Q 506	FET 2SK212E or FET 2SK212F	2SK212E 2SK212F
Q 507	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC3198GR TO-92 or	QSC3331TNPAA QSC3331UNPAA NQC40KTC3198

Ref. No.	Description	Part No.
	TRANSISTOR KTC3199GR	NQC10KTC3199
RESISTORS		
R 201	CARBON RES. 1/6W J 330 Ω or CARBON RES. 1/5W J 330 Ω	132A331S 132A331S
R 204	CHIP RES. 1/10W J 6.8K Ω	RRXAJBBZ0682
R 205	CHIP RES. 1/10W J 5.6K Ω	RRXAJBBZ0562
R 206	CHIP RES. 1/10W J 68 Ω	RRXAJBBZ0680
R 207	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 214	CHIP RES. 1/10W J 12K Ω	RRXAJBBZ0123
R 215	CHIP RES. 1/10W J 12K Ω	RRXAJBBZ0123
R 216	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 217	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 220	CHIP RES. 1/10W J 5.6K Ω	RRXAJBBZ0562
R 221	CHIP RES. 1/10W J 3.9K Ω	RRXAJBBZ0392
R 222	CHIP RES. 1/10W J 12K Ω	RRXAJBBZ0123
R 223	CHIP RES. 1/10W J 12K Ω	RRXAJBBZ0123
R 224	CHIP RES. 1/10W J 68K Ω	RRXAJBBZ0683
R 225	CHIP RES. 1/10W J 4.7K Ω	RRXAJBBZ0472
R 226	CHIP RES. 1/10W J 3.9K Ω	RRXAJBBZ0392
R 227	CHIP RES. 1/10W J 33K Ω	RRXAJBBZ0333
R 228	CHIP RES. 1/10W J 2.2K Ω	RRXAJBBZ0222
R 229	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 230	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 231	CHIP RES. 1/10W J 47K Ω	RRXAJBBZ0473
R 232	CHIP RES. 1/10W J 47K Ω	RRXAJBBZ0473
R 233	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 234	CHIP RES. 1/10W J 15K Ω	RRXAJBBZ0153
R 235	CHIP RES. 1/10W J 18K Ω	RRXAJBBZ0183
R 236	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0333
R 237	CHIP RES. 1/10W J 33K Ω	RRXAJBBZ0153
R 238	CHIP RES. 1/10W J 15K Ω	RRXAJBBZ0153
R 239	CHIP RES. 1/10W J 15K Ω	RRXAJBBZ0153
R 240	CHIP RES. 1/10W J 22K Ω	RRXAJBBZ0223
R 241	CHIP RES. 1/10W J 27K Ω	RRXAJBBZ0273
R 243	CHIP RES. 1/10W J 68K Ω	RRXAJBBZ0683
R 244	CHIP RES. 1/10W J 68K Ω	RRXAJBBZ0683
R 245	CHIP RES. 1/10W J 390 Ω	RRXAJBBZ0391
R 246	CHIP RES. 1/10W J 1K Ω	RRXAJBBZ0102
R 247	CHIP RES. 1/10W J 5.6K Ω	RRXAJBBZ0562
R 248	CHIP RES. 1/10W J 1K Ω	RRXAJBBZ0102
R 249	CARBON RES. 1/6W J 150 Ω or CARBON RES. 1/5W J 150 Ω	132A151S 132A151S
R 250	CHIP RES. 1/10W J 2.2K Ω	RRXAJBBZ0222
R 251	CHIP RES. 1/10W J 680 Ω	RRXAJBBZ0681
R 252	CHIP RES. 1/10W J 680 Ω	RRXAJBBZ0681
R 253	CHIP RES. 1/10W J 680 Ω	RRXAJBBZ0681
R 254	CHIP RES. 1/10W J 1.5K Ω	RRXAJBBZ0152
R 255	CHIP RES. 1/10W J 15K Ω	RRXAJBBZ0153
R 257	CHIP RES. 1/10W J 1K Ω	RRXAJBBZ0102
R 260	CARBON RES. 1/6W J 330 Ω or CARBON RES. 1/5W J 330 Ω	132A331S 132A331S
R 262	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 263	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 264	CHIP RES. 1/10W J 33K Ω	RRXAJBBZ0333
R 265	CHIP RES. 1/10W J 8.2K Ω	RRXAJBBZ0822
R 266	CHIP RES. 1/10W J 8.2K Ω	RRXAJBBZ0822
R 267	CHIP RES. 1/10W J 12K Ω	RRXAJBBZ0123
R 268	CHIP RES. 1/10W J 3.3K Ω	RRXAJBBZ0332
R 269	CHIP RES. 1/10W J 12K Ω	RRXAJBBZ0123
R 270	CHIP RES. 1/10W J 6.8K Ω	RRXAJBBZ0682

Ref. No.	Description	Part No.
R 271	CHIP RES. 1/10W J 3.3K Ω	RRXAJBBZ0332
R 272	CHIP RES. 1/10W J 5.6K Ω	RRXAJBBZ0562
R 273	CHIP RES. 1/10W J 18K Ω	RRXAJBBZ0183
R 274	CHIP RES. 1/10W J 1.5K Ω	RRXAJBBZ0152
R 275	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 276	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 277	CHIP RES. 1/10W J 1K Ω	RRXAJBBZ0102
R 278	CARBON RES. 1/6W J 10K Ω or CARBON RES. 1/5W J 10K Ω	132A103S 132A103S
R 279	CHIP RES. 1/10W J 47K Ω	RRXAJBBZ0473
R 280	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 281	CHIP RES. 1/10W J 82K Ω	RRXAJBBZ0823
R 282	CHIP RES. 1/10W J 47K Ω	RRXAJBBZ0473
R 283	CHIP RES. 1/10W J 33K Ω	RRXAJBBZ0333
R 284	CHIP RES. 1/10W J 1.2K Ω	RRXAJBBZ0122
R 285	CHIP RES. 1/10W J 1.5K Ω	RRXAJBBZ0152
R 286	CHIP RES. 1/10W J 56K Ω	RRXAJBBZ0563
R 287	CHIP RES. 1/10W J 68K Ω	RRXAJBBZ0683
R 288	CHIP RES. 1/10W J 68K Ω	RRXAJBBZ0683
R 289	CHIP RES. 1/10W J 220 Ω	RRXAJBBZ0221
R 290	CHIP RES. 1/10W J 3.3K Ω	RRXAJBBZ0332
R 291	CARBON RES. 1/4W J 1 Ω	1345109S
R 292	CARBON RES. 1/4W J 1.2 Ω	1345129S
R 295	FUSE RES. 1/2W 68 Ω or	RFX2680MS002
R 297	FUSE RES. 1/2W 68 Ω or	RFX2680KA003
R 298	FUSE RES. 1/2W 68 Ω	5362680
R 301	CEMENT RES. 5W J 560 Ω or	RW05561PG001
R 302	CEMENT RES. 5W J 560 Ω or	RW05561UB001
R 303	CEMENT RES. 5W J 560 Ω	RW05561KA006
R 304	CEMENT RES. 5W J 560 Ω	RW05561KA006
R 305	CEMENT RES. 1/10W J 4.7 Ω	RW05561KA047
R 306	CEMENT RES. 1/10W J 220 Ω	1345221S
R 307	FUSE RES. 1W J 2.2 Ω or	RF01229KA004
R 308	FUSE RES. 1W J 2.2 Ω or	RF01229KA004
R 309	FUSE RES. 1W J 2.2 Ω or	RF01229KA004
R 310	FUSE RES. 1W J 2.2 Ω or	RF01229KA004
R 311	FUSE RES. 1W J 2.2 Ω or	RF01229KA004
R 312	FUSE RES. 1W J 2.2 Ω or	RF01229KA004
R 313	FUSE RES. 1W J 2.2 Ω or	RF01229KA004
R 314	FUSE RES. 1W J 2.2 Ω or	RF01229KA004
R 315	FUSE RES. 1W J 2.2 Ω or	RF01229KA004
R 316	FUSE RES. 1W J 2.2 Ω or	RF01229KA004
R 317	CEMENT RES. 5W K 3.3K Ω or	RF01229KA004
R 318	CEMENT RES. 5W K 3.3K Ω or	RF01229KA004
R 319	CEMENT RES. 5W K 3.3K Ω or	RF01229KA004
R 320	CEMENT RES. 5W K 3.3K Ω or	RF01229KA004
R 321		

Ref. No.	Description	Part No.
R 386	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 387	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 388	CHIP RES. 1/10W J 10K Ω	RRXAJBBZ0103
R 389	CHIP RES. 1/10W J 470K Ω	RRXAJBBZ0474
R 390	CHIP RES. 1/10W J 68K Ω	RRXAJBBZ0683
R 391	CHIP RES. 1/10W J 1K Ω	RRXAJBBZ0102
R 392	CHIP RES. 1/10W J 3.3K Ω	RRXAJBBZ0332
R 393	CHIP RES. 1/10W J 3.3M Ω	RRXAJBBZ0335
R 394	CHIP RES. 1/10W J 560 Ω	RRXAJBBZ0561
R 395	CHIP RES. 1/10W J 1K Ω	RRXAJBBZ0102
R 396	CARBON RES. 1/6W J 150K Ω or CARBON RES. 1/5W J 150K Ω	132A154S
R 397	CARBON RES. 1/6W J 10K Ω or CARBON RES. 1/5W J 10K Ω	132A103S
R 398	CARBON RES. 1/6W J 33K Ω or CARBON RES. 1/5W J 33K Ω	132A333S
R 399	CARBON RES. 1/4W J 1.5K Ω	1345152S
R 400	CARBON RES. 1/6W J 22K Ω or CARBON RES. 1/5W J 22K Ω	132A223S
R 401	CARBON RES. 1/6W J 27K Ω or CARBON RES. 1/5W J 27K Ω	132A273S
R 402	CARBON RES. 1/6W J 10K Ω or CARBON RES. 1/5W J 10K Ω	132A103S
R 403	CARBON RES. 1/6W J 5.6K Ω or CARBON RES. 1/5W J 5.6K Ω	132A562S
R 404	CARBON RES. 1/6W J 100K Ω or CARBON RES. 1/5W J 100K Ω	132A104S
R 405	CARBON RES. 1/6W J 120K Ω or CARBON RES. 1/5W J 120K Ω	132A124S
R 406	CARBON RES. 1/6W J 47K Ω or CARBON RES. 1/5W J 47K Ω	132A473S
R 407	CARBON RES. 1/6W J 22K Ω or CARBON RES. 1/5W J 22K Ω	132A223S
R 408	METAL RES. 1W J 15K Ω	534A153
R 410	CARBON RES. 1/4W J 15 Ω	1345150S
R 411	CHIP RES. 1/10W J 2.7K Ω	RRXAJBBZ0272
R 412	METAL RES. 2W J 27 Ω	534B270
R 413	CHIP RES. 1/10W J 68K Ω	RRXAJBBZ0683
R 414	CHIP RES. 1/10W J 27K Ω	RRXAJBBZ0273
R 415	CARBON RES. 1/6W J 10K Ω or CARBON RES. 1/5W J 10K Ω	132A103S
R 416	CARBON RES. 1/6W J 3.3K Ω or CARBON RES. 1/5W J 3.3K Ω	132A332S
R 417	CHIP RES. 1/10W J 100 Ω	RRXAJBBZ0101
R 418	FUSE RES. 1/2W J 2.2 Ω or FUSE RES. 1/2W J 2.2 Ω	5362229
R 419	CARBON RES. 1/4W J 39 Ω	1345390S
R 427	METAL RES. 1W J 1K Ω	534A102
R 428	CARBON RES. 1/4W J 39 Ω	1345390S
R 430	CHIP RES. 1/10W J 2.2K Ω	RRXAJBBZ0222
R 439	METAL RES. 1W J 1K Ω (use only for FBT: 154-177T)	534A102
R 440	CHIP RES. 1/10W J 0K Ω (JW271)	RRXAJBBZ000
R 441	CARBON RES. 1/6W J 47 Ω or CARBON RES. 1/5W J 47 Ω	132A470S
R 442	CARBON RES. 1/6W J 33K Ω or CARBON RES. 1/5W J 33K Ω	132A333S
R 443	CARBON RES. 1/6W J 33K Ω or CARBON RES. 1/5W J 33K Ω	132A333S
R 444	CARBON RES. 1/6W J 560 Ω or	132A561S

Ref. No.	Description	Part No.
R 445	CARBON RES. 1/4W J 1K Ω	1345102S
R 446	CARBON RES. 1/6W J 10K Ω or CARBON RES. 1/5W J 10K Ω	132A103S
R 447	CARBON RES. 1/6W J 10K Ω or CARBON RES. 1/5W J 10K Ω	132A103S
R 501	CEMENT RES. 5W K 1.2 Ω or CEMENT RES. 5W K 1.2 Ω or CEMENT RES. 5W K 1.2 Ω	RW051R2PG001
R 502	CARBON RES. 1/4W J 120K Ω	1345124S
R 503	CARBON RES. 1/4W J 120K Ω	1345124S
R 504	CARBON RES. 1/4W J 15K Ω	1345153S
R 505	CARBON RES. 1/4W J 150 Ω	1345151S
R 506	CARBON RES. 1/4W J 2.2K Ω	1345222S
R 507	METAL RES. 2W J 82 Ω	534B820
R 508	METAL RES. 3W J 68 Ω or METAL RES. 3W J 68 Ω or METAL RES. 3W J 68 Ω	RN03680KE003
R 509	CARBON RES. 1/6W J 470 Ω or CARBON RES. 1/5W J 470 Ω	132A471S
R 510	CARBON RES. 1/6W J 22K Ω or CARBON RES. 1/5W J 22K Ω	132A223S
R 512	METAL RES. 2W J 0.68 Ω	534B68A
R 513	CARBON RES. 1/4W J 5.6K Ω	1345562S
R 514	METAL RES. 3W J 33 Ω or METAL RES. 3W J 33 Ω or	RN0330KE003
R 517	CARBON RES. 1/6W J 1.2M Ω or CARBON RES. 1/5W J 1.2M Ω	132A125S
R 518	CARBON RES. 1/6W J 1M Ω or CARBON RES. 1/5W J 1M Ω	132A105S
R 519	CARBON RES. 1/6W J 330 Ω or CARBON RES. 1/5W J 330 Ω	132A331S
R 520	CARBON RES. 1/6W J 47K Ω or CARBON RES. 1/5W J 47K Ω	132A473S
R 521	CARBON RES. 1/6W J 27K Ω or CARBON RES. 1/5W J 27K Ω	132A273S
R 522	CARBON RES. 1/4W J 560K Ω	1345564S
JW 200	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 201	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 202	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 203	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 204	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 205	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 206	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 207	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 208	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 210	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 211	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 212	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 213	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 214	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 215	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 216	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 217	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 218	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 219	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 220	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 221	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 226	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000

Ref. No.	Description	Part No.
JW 227	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 232	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 251	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 252	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 253	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 254	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 260	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 261	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 262	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 263	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 264	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 266	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 267	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000
JW 270	CHIP RES. 1/10W J 0 Ω	RRXAJBBZ0000

SWITCHES		
SW 201	TAUT SWITCH SKHHBV or LIGHT TOUCH SWITCH EVQPAC07K	SST0101AL013
SW 202	TAUT SWITCH SKHHBV or LIGHT TOUCH SWITCH EVQPAC07K	SST0101MS013
SW 203	TAUT SWITCH SKHHBV or LIGHT TOUCH SWITCH EVQPAC07K	SST0101AL013
SW 204	TAUT SWITCH SKHHBV or LIGHT TOUCH SWITCH EVQPAC07K	SST0101AL013
SW 205	TAUT SWITCH SKHHBV or LIGHT TOUCH SWITCH EVQPAC07K	SST0101MS013
SW 206	TAUT SWITCH SKHHBV or LIGHT TOUCH SWITCH EVQPAC07K	SST0101MS013
SW 207	TAUT SWITCH SKHHBV or LIGHT TOUCH SWITCH EVQPAC07K	SST0101AL013
SW 208	TAUT SWITCH SKHHBV or LIGHT TOUCH SWITCH EVQPAC07K	SST0101MS013
SW 209	SLIDE SWITCH SSV-22-0300 or SLIDE SWITCH or SLIDE SWITCH or	SSS0202DK001
SW 501 Δ	PUSH SWITCH SPPW81-6.55-A2	SPP0AAZMS001

TRANSFORMERS		
--------------	--	--

CRT PCB (MMA-B)

Ref. No.	Description	Part No.
	CRT PCB (MMA-B)	
	Consists of the following:	
	CAPACITORS	
C 601	CERAMIC CAP. 0.01μF/2KV or CERAMIC CAP. 0.01μF/2KV	CCD3DZP0E103 6220602
C 602	CHIP CERAMIC CAP. SL J 150pF/50V	CHE1JJBSL151
C 603	CHIP CERAMIC CAP. SL J 150pF/50V	CHE1JJBSL151
C 604	CHIP CERAMIC CAP. SL J 150pF/50V	CHE1JJBSL151
C 605	ELECTROLYTIC CAP. 10μF/50V M	126F106S
	CONNECTORS	
CN 601 △	CRT SOCKET or CRT SOCKET	1780080 1780218
CN 602	CONNECTOR PIN 1P or CONNECTOR PIN 1P RT-01N-2.3A or CONNECTOR PIN 1P	1700576 1730688 JTEA000LC001
CN 603	WIRE HOLDER 3P 51039-0300 or WIRE HOLDER 3P 51039-0300	XW01D03NF001 XW01B03NF001
CN 604	WIRE HOLDER 6P 51039-0600 or WIRE HOLDER 6P 51039-0600	XW01D06NF001 XW01B06NF001
	COIL	
L 601	MICRO INDUCTOR 180μH	2162181S
	TRANSISTORS	
Q 601	TRANSISTOR 2SC2228(D) or TRANSISTOR 2SC2228(E)	2SC2228D-AE-MP 2SC2228E-AE-MP
Q 602	TRANSISTOR 2SC2228(D) or TRANSISTOR 2SC2228(E)	2SC2228D-AE-MP 2SC2228E-AE-MP
Q 603	TRANSISTOR 2SC2228(D) or TRANSISTOR 2SC2228(E)	2SC2228D-AE-MP 2SC2228E-AE-MP
	RESISTORS	
R 601	CARBON RES. 1/4W J 1.8KΩ	1345182S
R 602	CARBON RES. 1/4W J 1.8KΩ	1345182S
R 603	CARBON RES. 1/4W J 1.8KΩ	1345182S
R 604	CARBON RES. 1/4W J 1.5KΩ	1345152S
R 605	CARBON RES. 1/4W J 1.5KΩ	1345152S
R 606	CARBON RES. 1/4W J 1.5KΩ	1345152S
R 607	CHIP RES. 1/10W J 1.8KΩ	RRXAJBBZ0182
R 608	CHIP RES. 1/10W J 1.2KΩ	RRXAJBBZ0122
R 609	CHIP RES. 1/10W J 220Ω	RRXAJBBZ0182
R 610	CHIP RES. 1/10W J 1.8KΩ	RRXAJBBZ0221
R 611	CHIP RES. 1/10W J 220Ω	RRXAJBBZ0221
R 612	CHIP RES. 1/10W J 1.2KΩ	RRXAJBBZ0122
R 613	CHIP RES. 1/10W J 220Ω	RRXAJBBZ0221
R 614	CHIP RES. 1/10W J 1.8KΩ	RRXAJBBZ0182
R 615	CHIP RES. 1/10W J 1.2KΩ	RRXAJBBZ0122
R 616	CHIP RES. 1/10W J 220Ω	RRXAJBBZ0221
R 617	METAL RES. 1W J 15KΩ	534A153
R 618	METAL RES. 1W J 15KΩ	534A153
R 619	METAL RES. 1W J 15KΩ	534A153
JW 607	CHIP RES. 1/10W J 0Ω	RRXAJBBZ0000
	VARIABLE RESISTORS	
VR 601	POTENTIOMETER 20KΩ B	138J918
VR 602	POTENTIOMETER 500Ω B	138J912
VR 603	POTENTIOMETER 500Ω B	138J912
VR 604	POTENTIOMETER 5KΩ B	138J916
VR 605	POTENTIOMETER 5KΩ B	138J916
VR 606	POTENTIOMETER 5KΩ B	138J916

IF PCB (MMA-C)

Ref. No.	Description	Part No.
	IF PCB (MMA-C)	
	Consists of the following:	
	CAPACITORS	
C 101	CHIP CERAMIC CAP. SL J 22pF/50V	CHE1JJBSL220
C 102	CHIP CERAMIC CAP. SL J 10pF/50V	CHE1JJBSL100
C 103	CHIP CERAMIC CAP. B K 0.01μF/50V	CHE1JKB0B103
C 104	MYLAR CAP. 0.068μF/50V K	2250683S
C 105	CHIP CERAMIC CAP. B K 0.001μF/50V	CHE1JKB0B102
C 106	ELECTROLYTIC CAP. 0.47μF/50V M	126F474S
C 107	ELECTROLYTIC CAP. 4.7μF/50V M	126F475S
C 108	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 109	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 110	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 111	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 112	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 113	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 114	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 115	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 116	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 117	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 118	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 119	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 120	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 121	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 122	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 123	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 124	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 125	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 126	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 127	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 128	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 129	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
C 130	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHE1JZB0F103
	CONNECTORS	
CN 101	PIN HEADER 6P	1770989
CN 102	PIN HEADER 3P	1770986
CN 103	CONNECTOR BASE 4P (EH/TOP)	1730628
CN 104	CONNECTOR BASE 3P (EH/TOP)	1730627
	IC	
IC 101	IC LA7530N	14LQ162
	COILS	
L 101	MICRO INDUCTOR 3.9μH or	2165399S
L 102	MICRO INDUCTOR 3.9μH or	2162399S
L 103	MICRO INDUCTOR 2.7μH or	2165279S
L 104	MICRO INDUCTOR 2.7μH or	2162279S
L 105	MICRO INDUCTOR 10μH or	2165100S
L 106	MICRO INDUCTOR 10μH or	2162100S
L 107	MICRO INDUCTOR 10μH or	2162100S
	TRANSISTORS	
Q 102	TRANSISTOR 2SC3331(T) or TRANSISTOR 2SC3331(U) or TRANSISTOR KTC198GR TO-92 or	QSC3331TNPA QSC3331UNPA NQC40KTC3198
Q 103	TRANSISTOR KTC199GR	NQC10KTC3199
Q 104	TRANSISTOR 2SC3000E	2SC3000E-AA-NP
	RESISTORS	
R 101	CHIP RES. 1/10W J 470Ω	RRXAJBBZ0471
R 102	CHIP RES. 1/10W J 390Ω	RRXAJBBZ0391
R 103	CHIP RES. 1/10W J 470Ω	RRXAJBBZ0471
R 104	CHIP RES. 1/10W J 330Ω	RRXAJBBZ0331

Ref. No.	Description	Part No.
R 105	CHIP RES. 1/10W J 5.6KΩ	RRXAJBBZ0562
R 106	CHIP RES. 1/10W J 1.8KΩ	RRXAJBBZ0182
R 107	CHIP RES. 1/10W J 22KΩ	RRXAJBBZ0223
R 108	CHIP RES. 1/10W J 560Ω	RRXAJBBZ0561
R 109	CHIP RES. 1/10W J 10KΩ	RRXAJBBZ0103
R 110	CHIP RES. 1/10W J 560Ω	RRXAJBBZ0561
R 111	CHIP RES. 1/10W J 1.5KΩ	RRXAJBBZ0152
R 112	CHIP RES. 1/10W J 47KΩ	RRXAJBBZ0473
R 113	CHIP RES. 1/10W J 180KΩ	RRXAJBBZ0184
R 114	CHIP RES. 1/10W J 330Ω	RRXAJBBZ0331
R 115	CHIP RES. 1/10W J 560Ω	RRXAJBBZ0561
R 116	CHIP RES. 1/10W J 560Ω	RRXAJBBZ0561
R 117	CHIP RES. 1/10W J 5.6KΩ	RRXAJBBZ0562
R 118	CHIP RES. 1/10W J 33Ω	RRXAJBBZ0330
R 119	CHIP RES. 1/10W J 1.5KΩ	RRXAJBBZ0152
R 120	CHIP RES. 1/10W J 2.2KΩ	RRXAJBBZ0222
R 121	CHIP RES. 1/10W J 120KΩ	RRXAJBBZ0124
R 122	CHIP RES. 1/10W J 100KΩ	RRXAJBBZ0104
R 123	CHIP RES. 1/10W J 1.8KΩ	RRXAJBBZ0182
R 124	CHIP RES. 1/10W J 1KΩ	RRXAJBBZ0102
R 125	CHIP RES. 1/10W J 3.3KΩ	RRXAJBBZ0332
R 126	CHIP RES. 1/10W J 150Ω	RRXAJBBZ0151
R 127	CHIP RES. 1/10W J 1.5KΩ	RRXAJBBZ0152
R 128	CHIP RES. 1/10W J 560Ω	RRXAJBBZ0561
R 129	CHIP RES. 1/10W J 100Ω	RRXAJBBZ0101
	VARIABLE RESISTOR	
VR 101	SEMIFIXED RES. 10KΩ B	138J917
	MISCELLANEOUS	
CF 101	CERAMIC DISCRIMINATOR CDA5.5MC26	1812020
CF 102	CERAMIC DISCRIMINATOR CDA6.5MC26	1813594
CF 103	CERAMIC TRAP TPW02B	1813593
CF 104	CERAMIC FILTER SFE5.5MBF	1812018
CF 105	CARAMIC FILTER SFE6.5MB	1813595
SAW101	SAW FILTER KAF-38.0MR-MH	FBB386PMR002

Ref. No.	Description	Part No.
C718	CHIP CERAMIC CAP. SL J 82pF/50V	1270820C
C719	ELECTROLYTIC CAP. 220μF/6.3V M	126A227S
C720	ELECTROLYTIC CAP. 100μF/6.3V M	126A107S
C721	ELECTROLYTIC CAP. 100μF/6.3V M	126A107S


Ref. No.	Description	Part No.
R708	CHIP RES. 1/10W 100KΩ or	RRXAJR8Z0104
	CHIP RES. 1/10W 100KΩ	134F104C
R709	CHIP RES. 1/10W 33KΩ or	RRXAJR8Z0333
	CHIP RES. 1/10W 33KΩ	134F333C
R710	CHIP RES. 1/10W 10KΩ or	RRXAJR8Z0103
	CHIP RES. 1/10W 10KΩ	134F103C
R711	CHIP RES. 1/10W 6.8KΩ or	RRXAJR8Z0682
	CHIP RES. 1/10W 6.8KΩ	134F682C
R712	CHIP RES. 1/10W 8.2KΩ or	RRXAJR8Z0822
	CHIP RES. 1/10W 8.2KΩ	134F822C
R713	CHIP RES. 1/10W 10KΩ or	RRXAJR8Z0103
	CHIP RES. 1/10W 10KΩ	134F103C
R714	CHIP RES. 1/10W 33KΩ or	RRXAJR8Z0333
	CHIP RES. 1/10W 33KΩ	134F333C
R715	CHIP RES. 1/10W 1.2KΩ or	RRXAJR8Z0122
	CHIP RES. 1/10W 1.2KΩ	134F122C
R716	CHIP RES. 1/10W 1.2KΩ or	RRXAJR8Z0122
	CHIP RES. 1/10W 1.2KΩ	134F122C
R717	CHIP RES. 1/10W 1.2KΩ or	RRXAJR8Z0122
	CHIP RES. 1/10W 1.2KΩ	134F122C
R718	CHIP RES. 1/10W 1.2KΩ or	RRXAJR8Z0122
	CHIP RES. 1/10W 1.2KΩ	134F122C
R719	CHIP RES. 1/10W 220Ω or	RRXAJR8Z0221
	CHIP RES. 1/10W 220Ω	134F221C
R721	CHIP RES. 1/10W 10KΩ or	RRXAJR8Z0103
	CHIP RES. 1/10W 10KΩ	134F103C
R723	CHIP RES. 1/10W 1KΩ or	RRXAJR8Z0102
	CHIP RES. 1/10W 1KΩ	134F102C
R724	CHIP RES. 1/10W 1KΩ or	RRXAJR8Z0102
	CHIP RES. 1/10W 1KΩ	134F102C
MISCELLANEOUS		
TP701	TEST PIN or	1700093
	TEST PIN	1740354
TP702	TEST PIN or	1700093
	TEST PIN	1740354
X701	CRYSTAL OSCILLATOR 13.875MHz	FX0136LCU001

CHASSIS ELECTRICAL PARTS


Ref. No.	Description	Part No.
CRT 1 △	CRT 370KRB22-TC09(SPYB) or	1812341
	CRT 37GDA85X-TC01(P) or	1812724
	CRT A34KFC12XX48	TCRT1C*GS001
L 501 △	DEGAUSSING COIL or	LLBH00ZTZ011
	DEGAUSSING COIL	LLBH00ZAB006
LD 1	WIRE ASS'Y (for SPEAKER)	WX1L7500-001
LD 4	WIRE ASS'Y (for CRT GND)	WX1L7401-001A
SP 1	SPEAKER or	1520568
	SPEAKER or	1520614
	SPEAKER or	1520589
	SPEAKER or	DSD0807HC001
	SPEAKER	152N589

A B C D E F G H I J K L M N


CRT PCB (Top View)

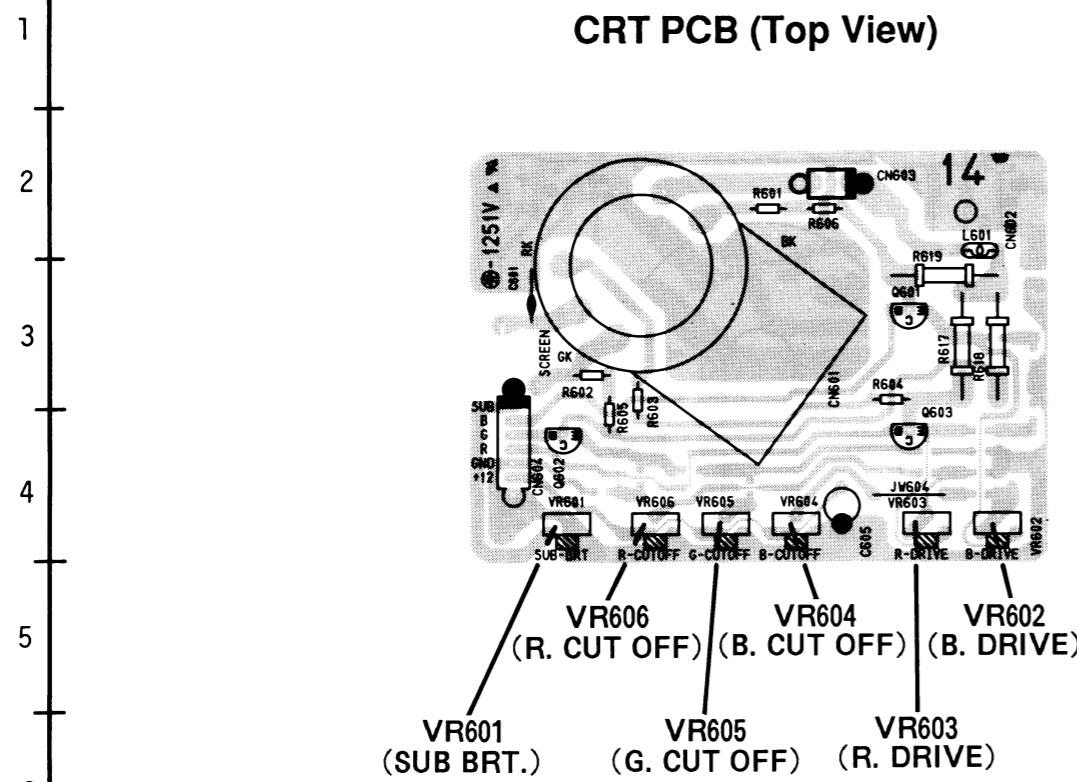

WIRING DIAGRAM

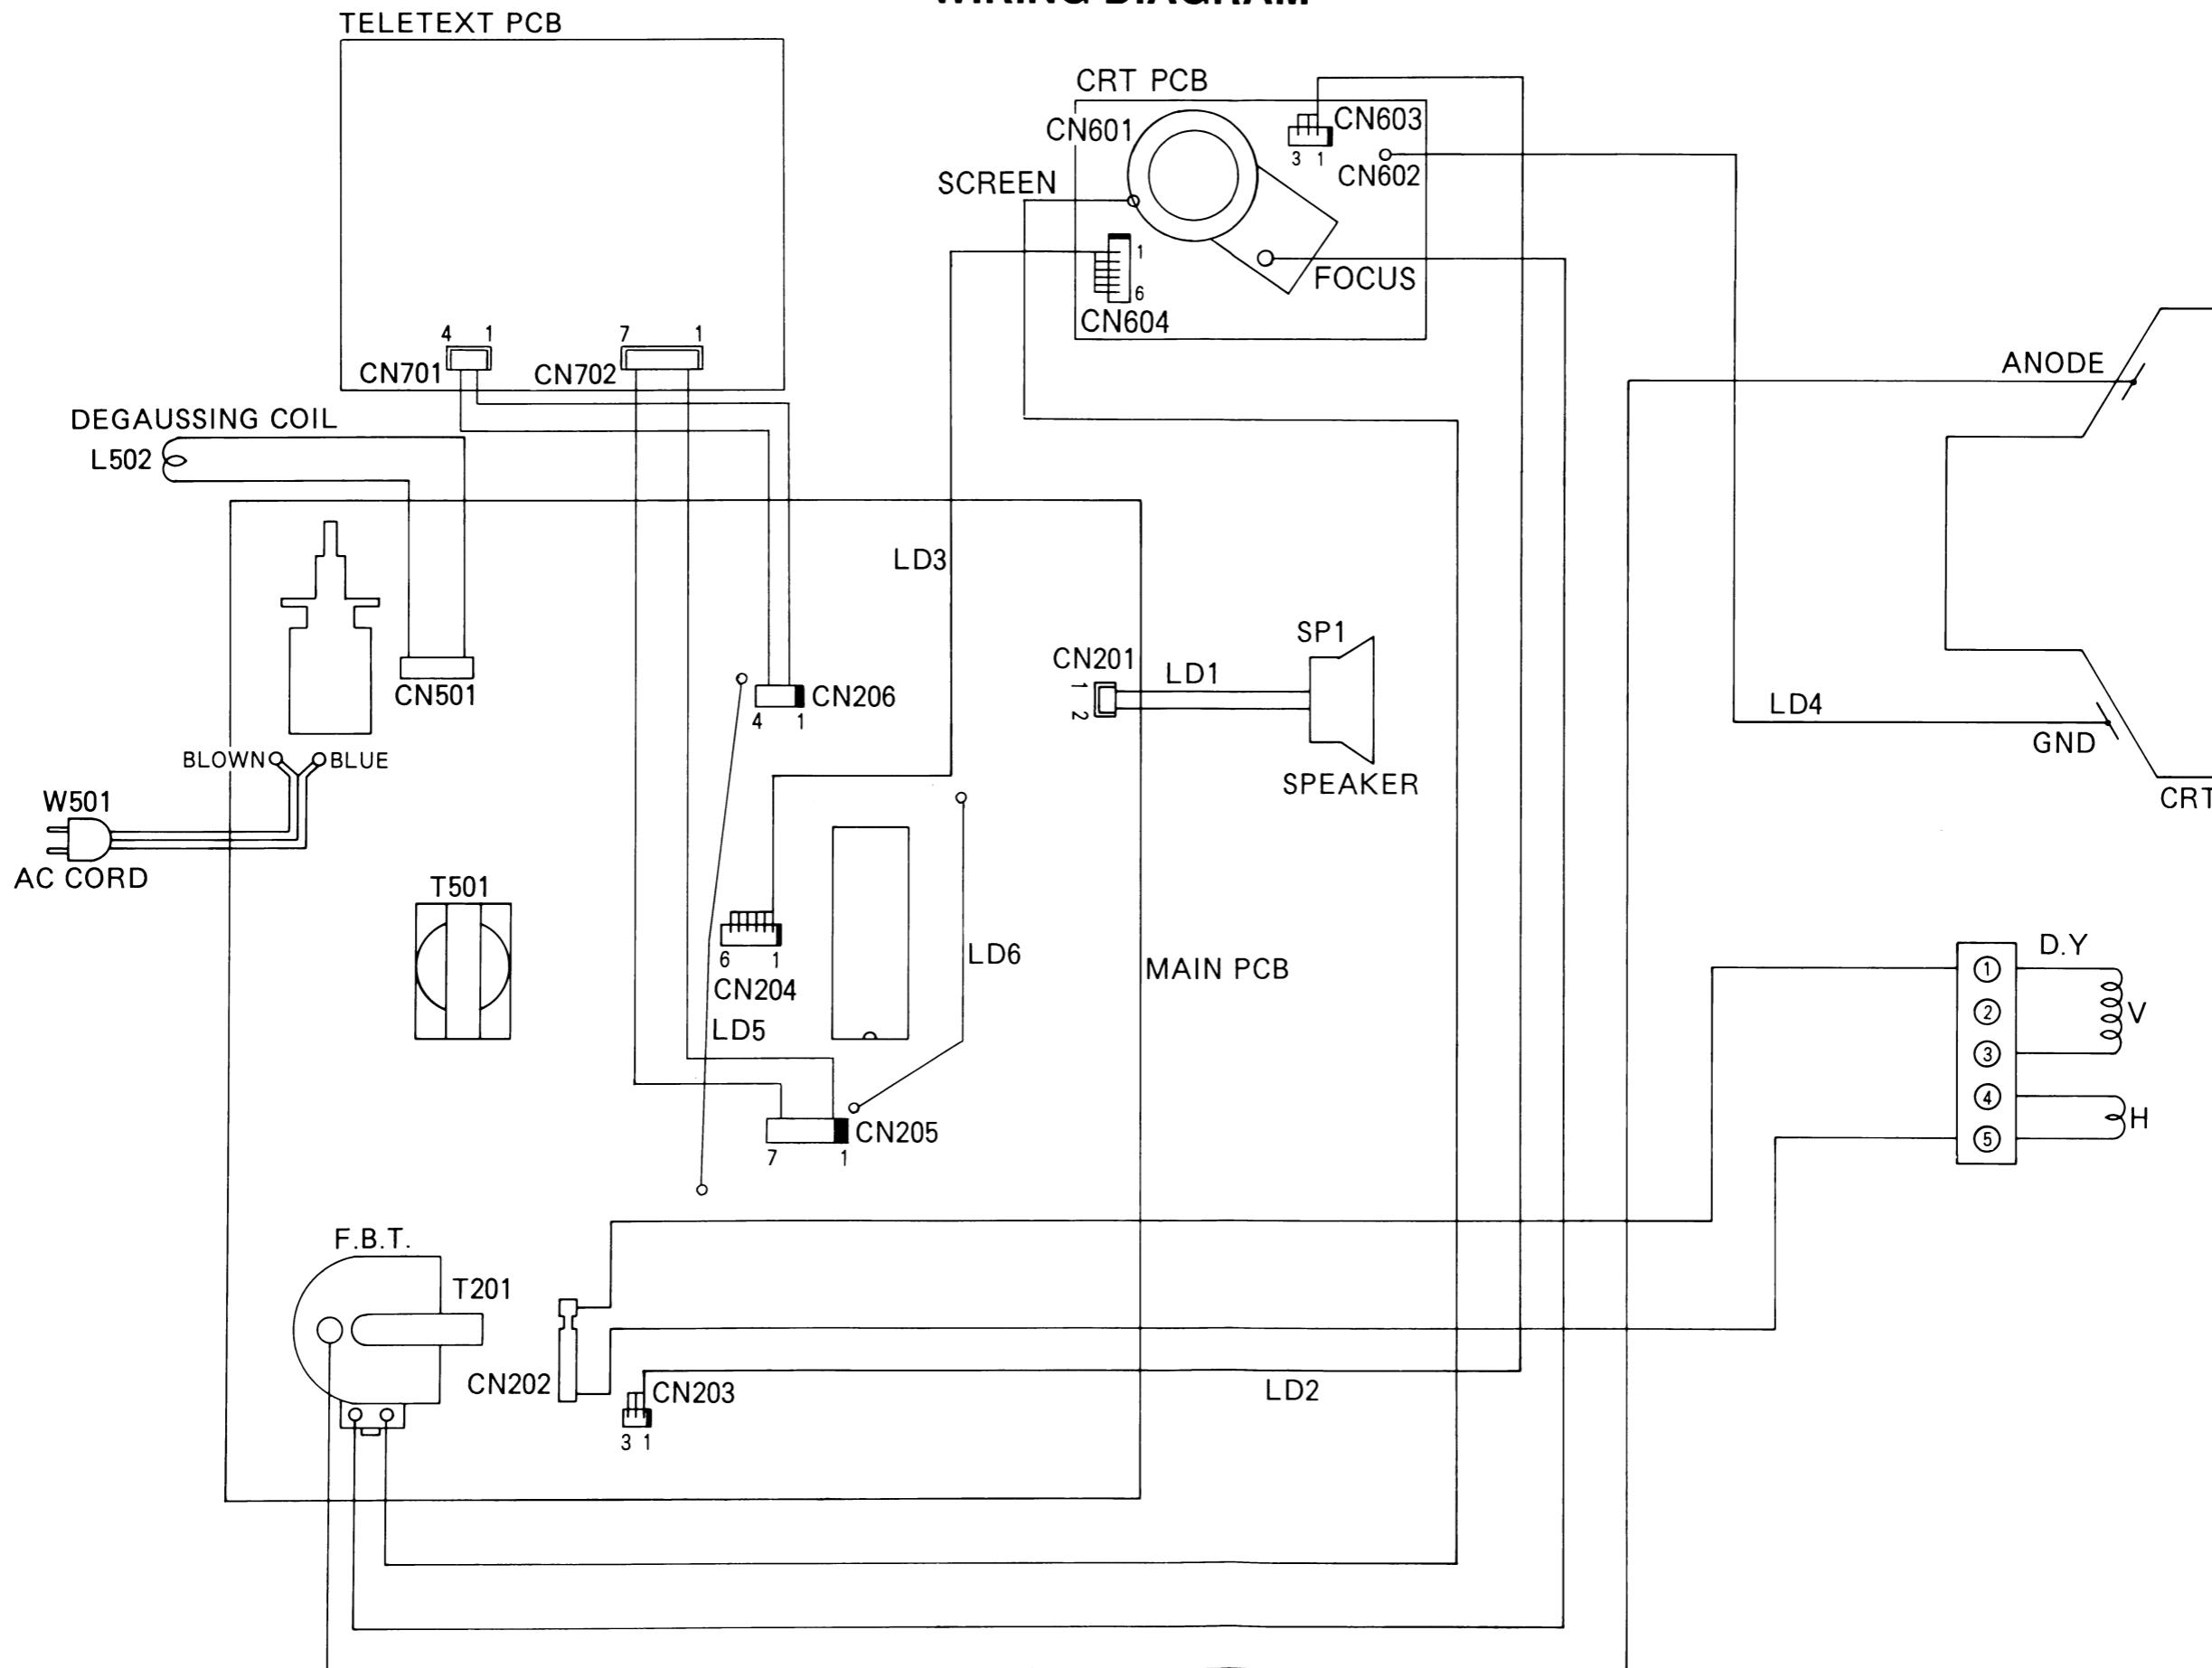


EXPLODED VIEW

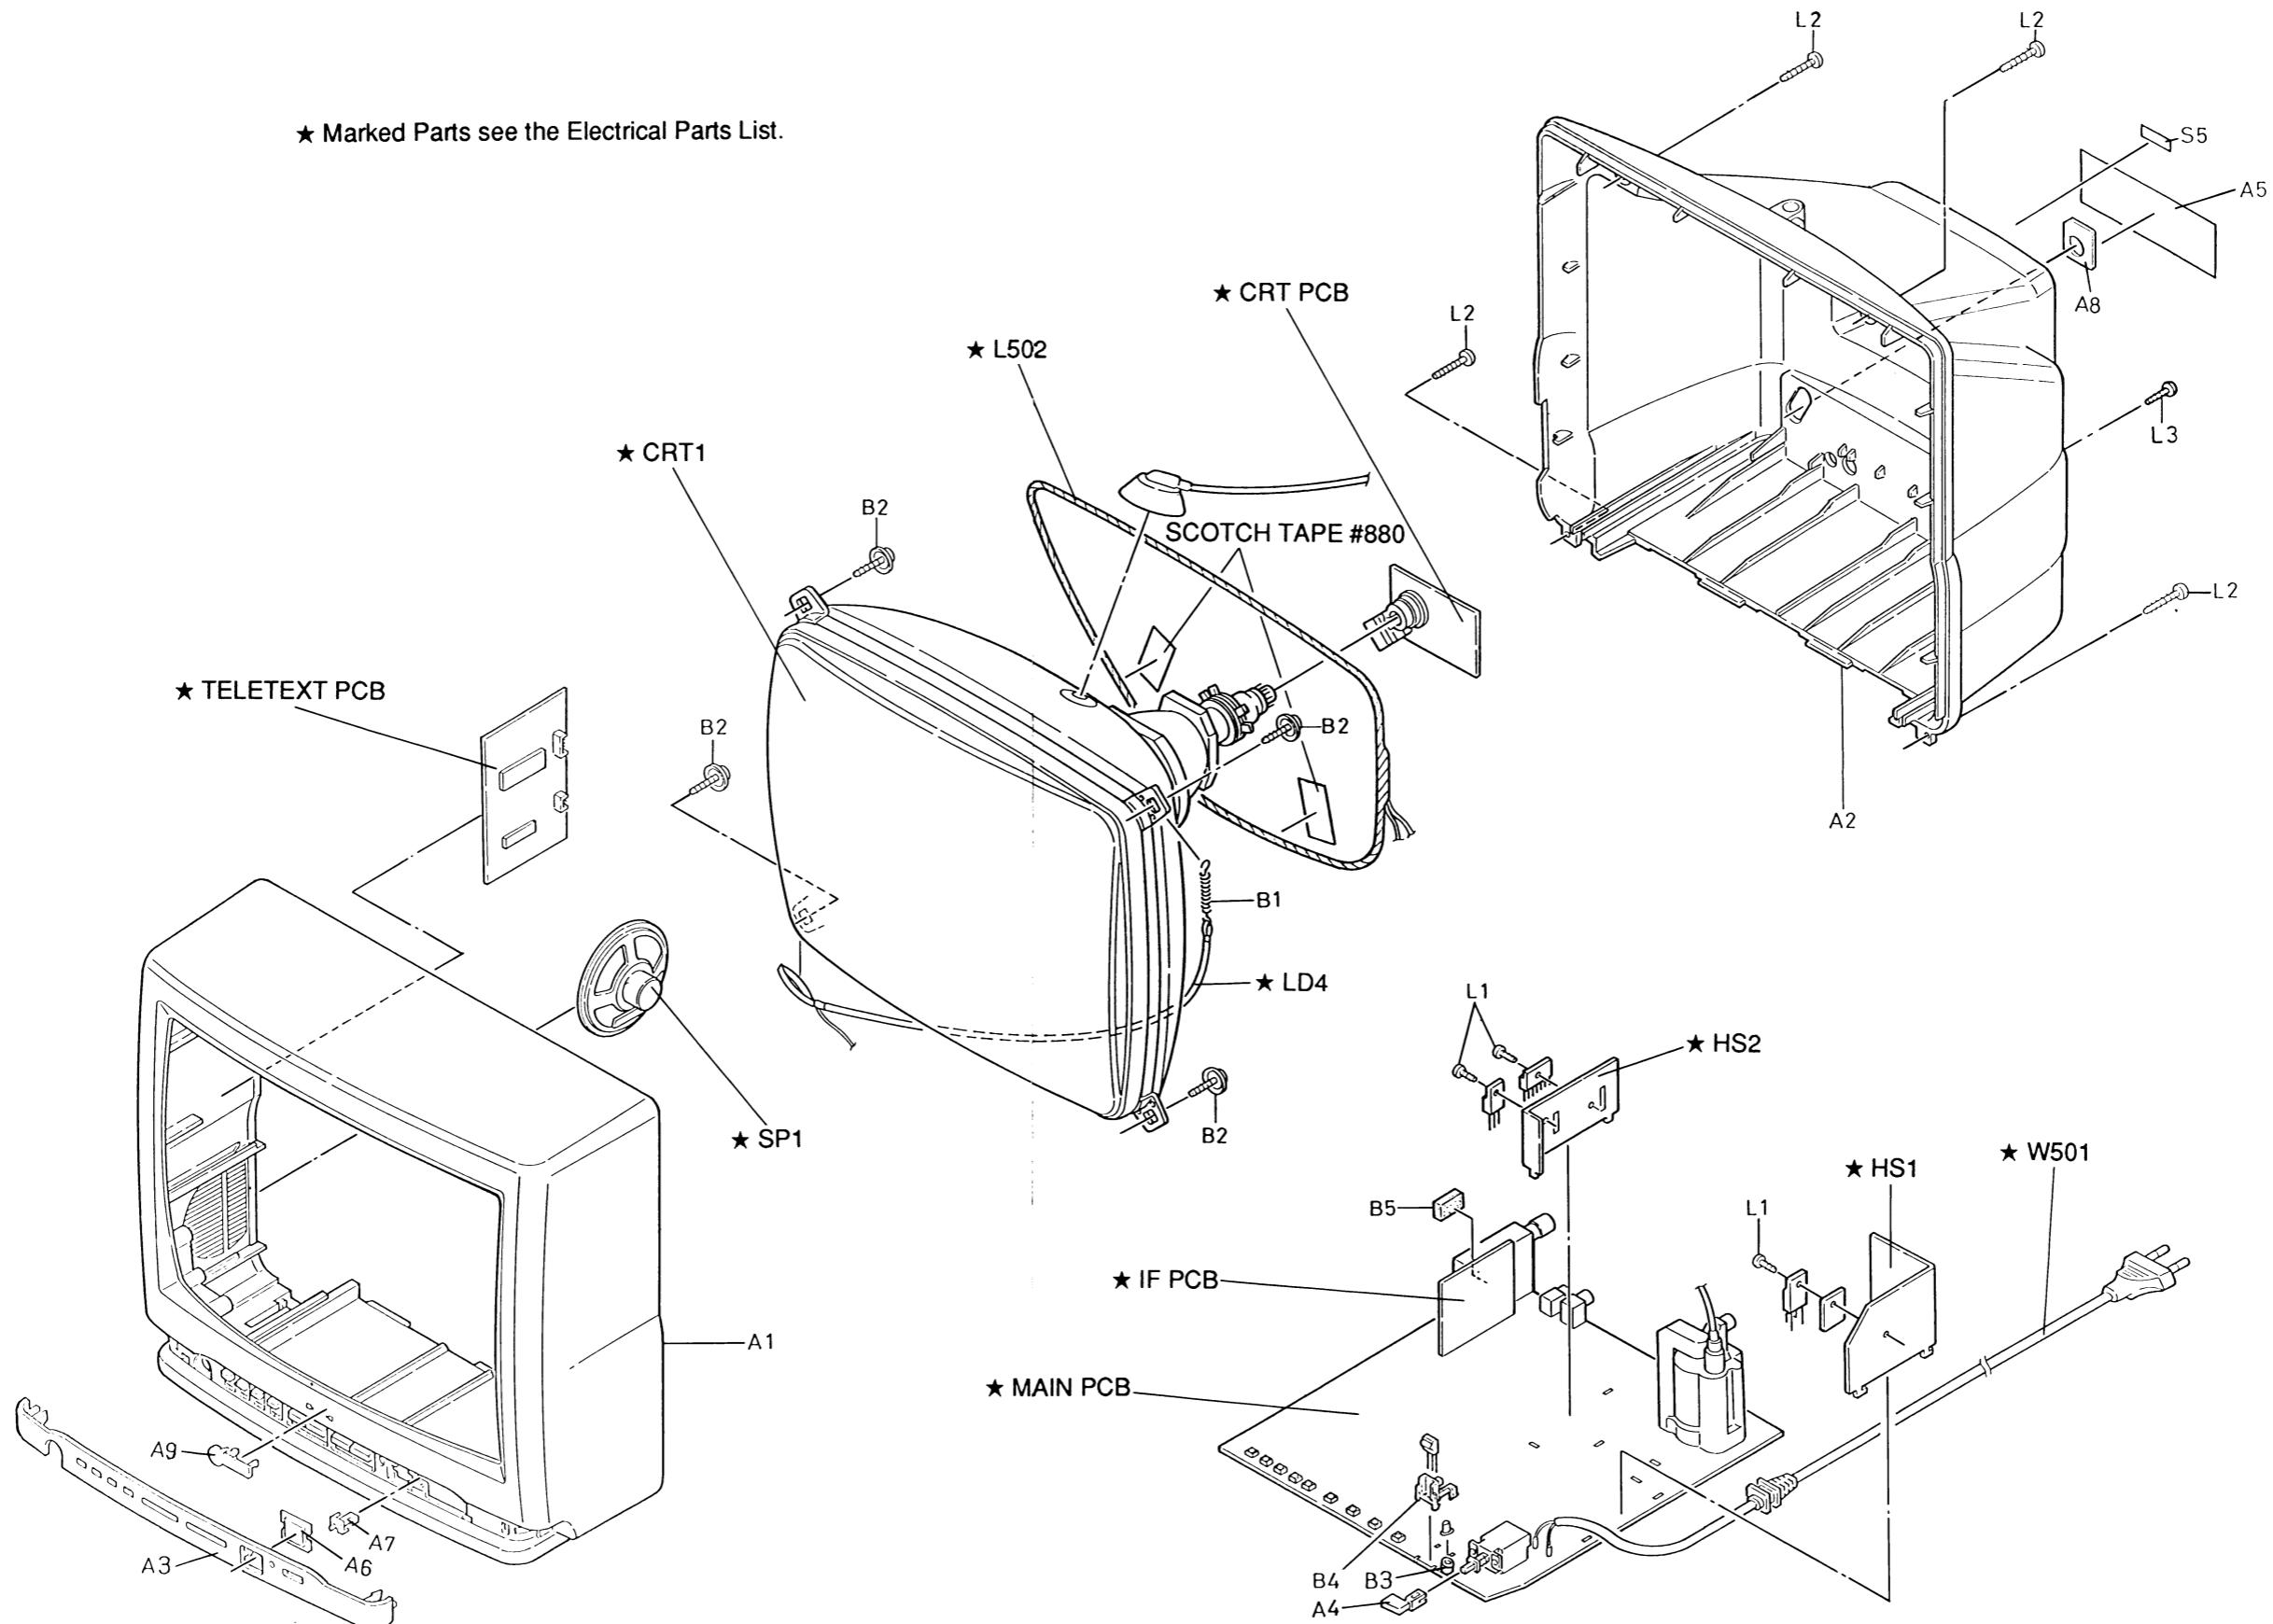


A B C D E F G H I J K L M N

TELETEXT PCB (Top View)

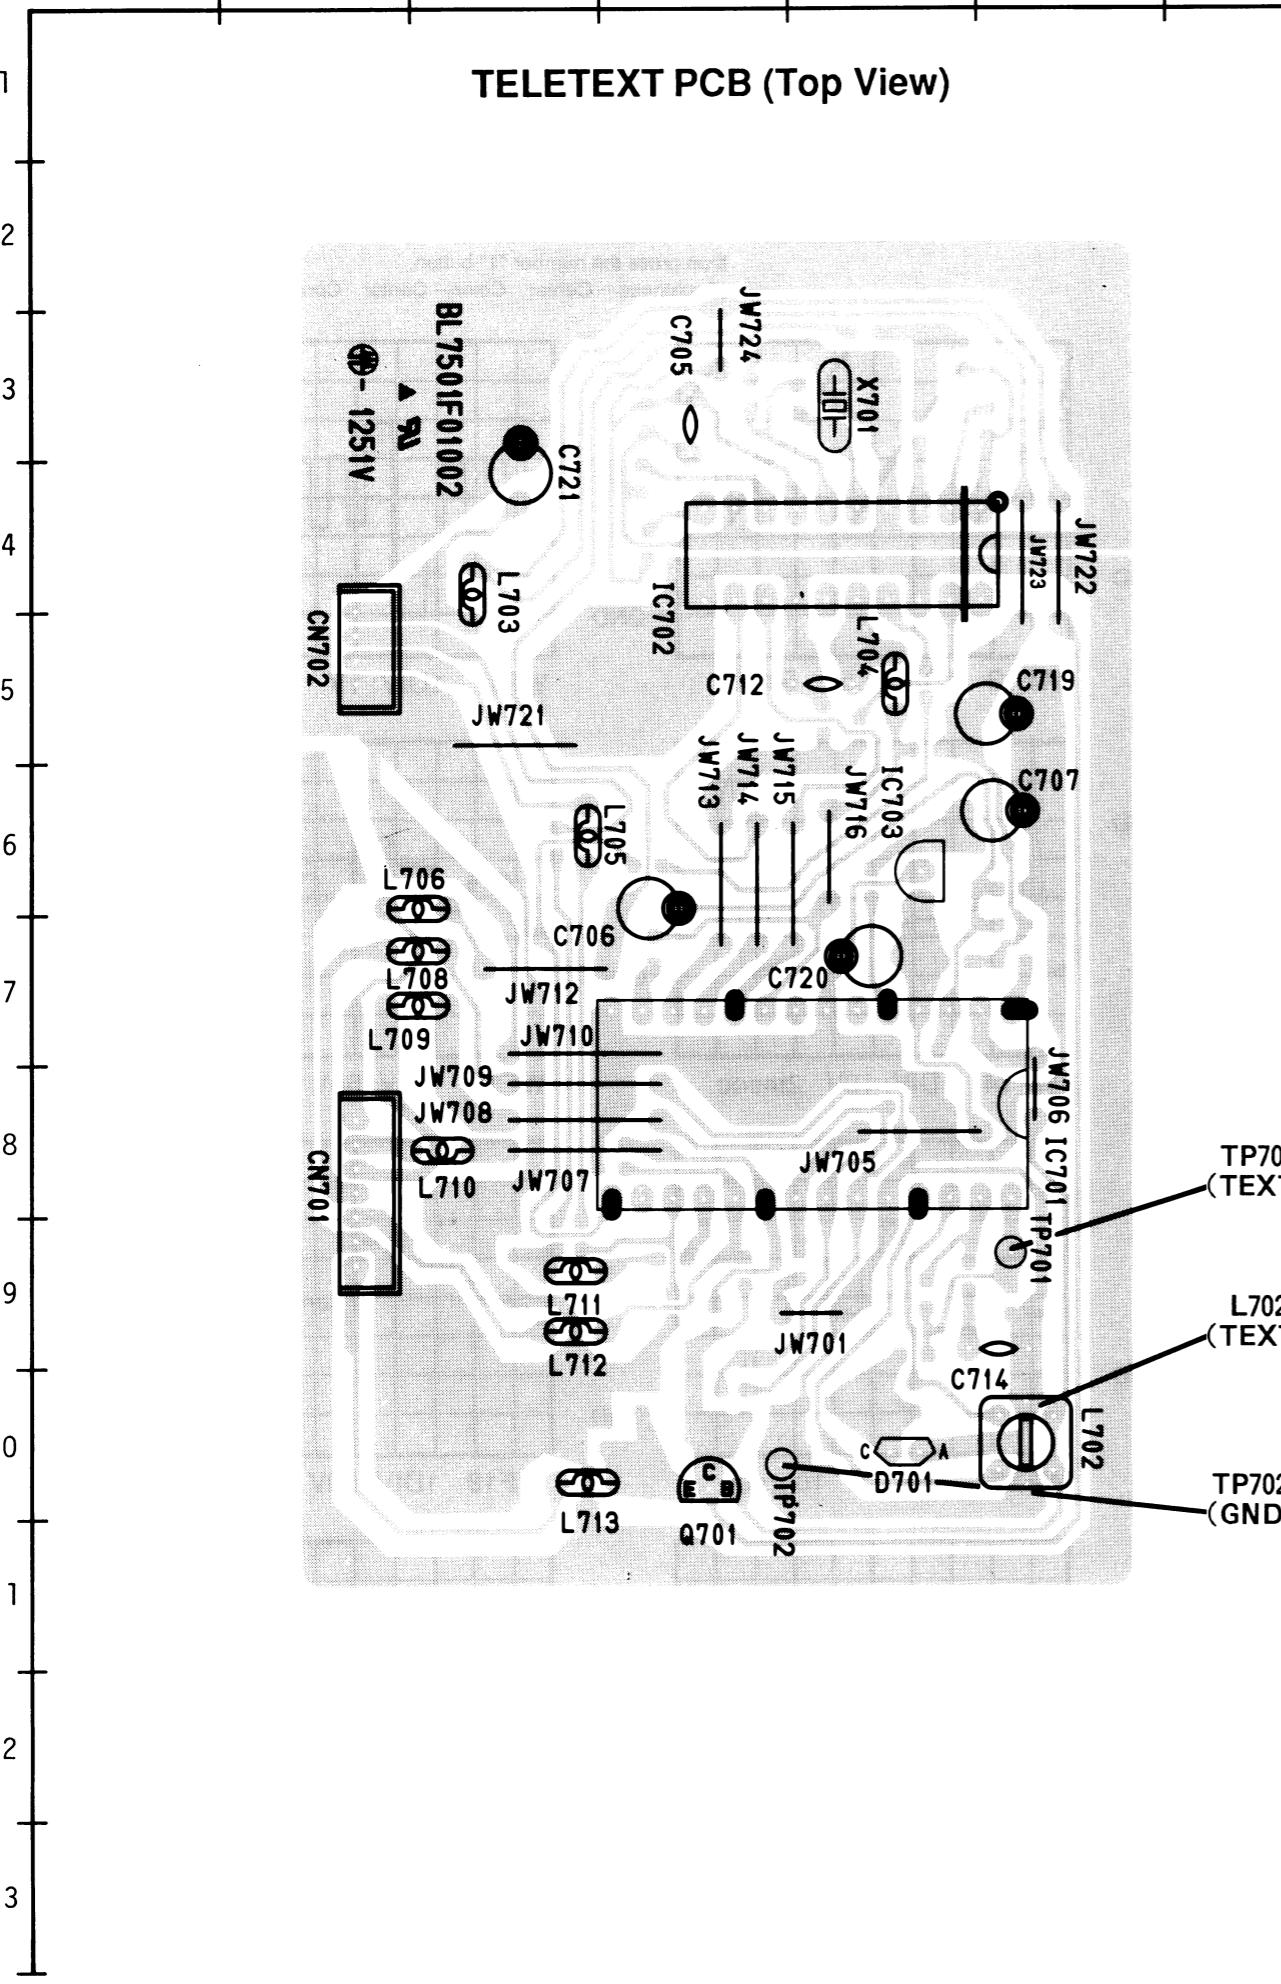


TELETEXT PCB (Bottom View)

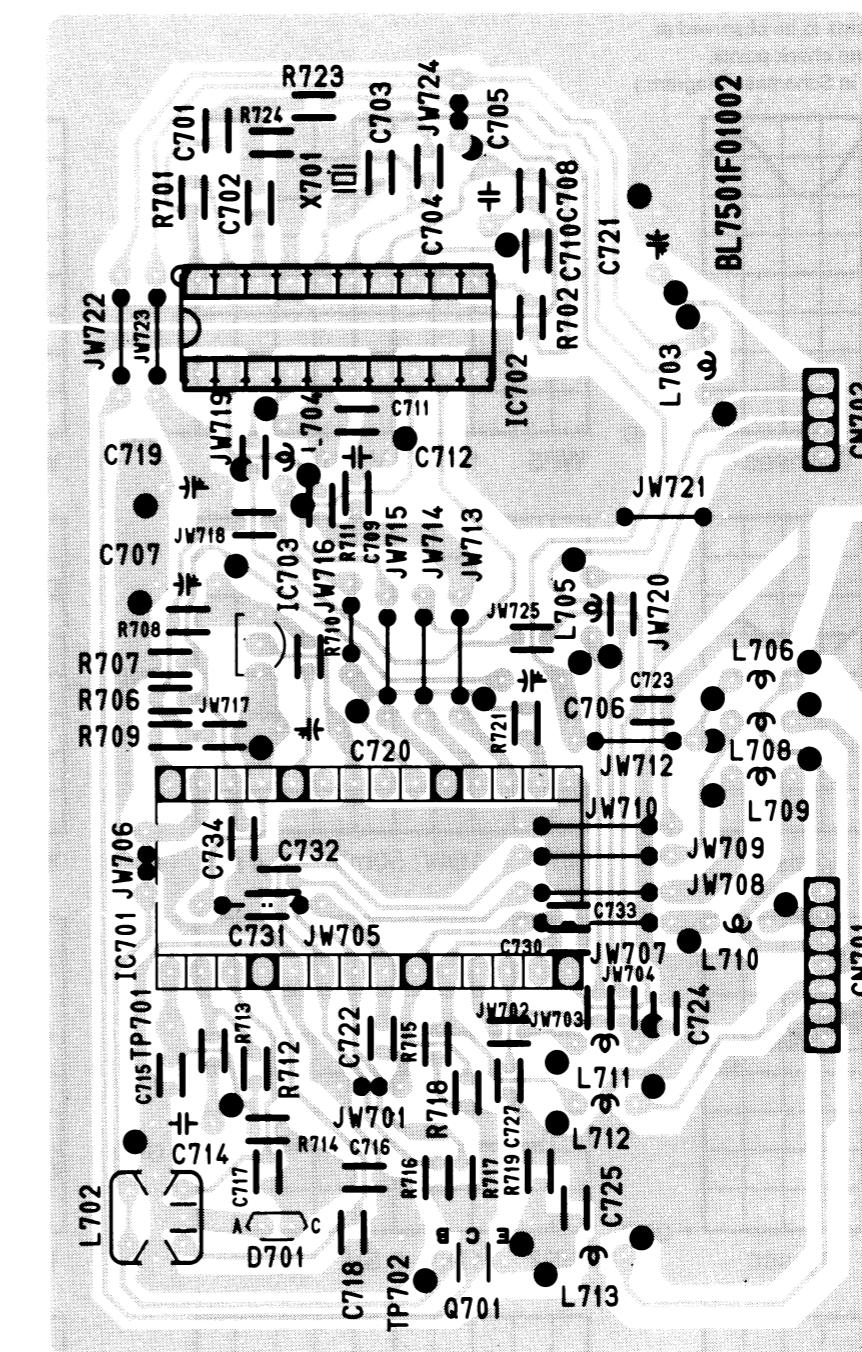


WAVEFORMS

WF1 ~ WF20 = Waveforms to be observed at Waveform check points.
(Shown in Schematic Diagram.)


INPUT : PAL Color Bar Signal (with 1KHz Audio Signal)
RECEIVING CH. : E2 ch (48.25 MHz)
PRESET MODE : Press Picture Select button on the remote control unit,
then press the number "1" button.
(Brightness--- Center Color--- Center Contrast--- Approx 70%)

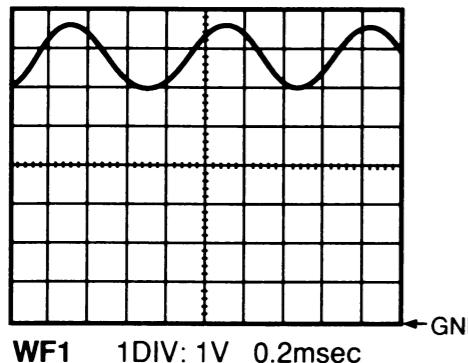


WF1 1DIV: 1V 0.2msec

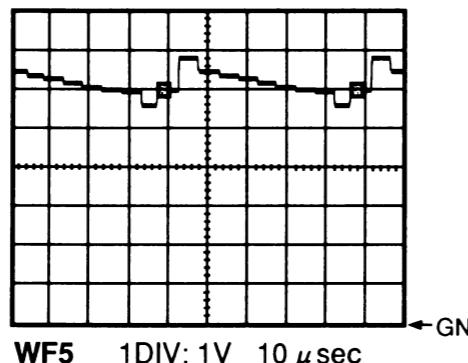


WF5 1DIV: 1V 10 μsec

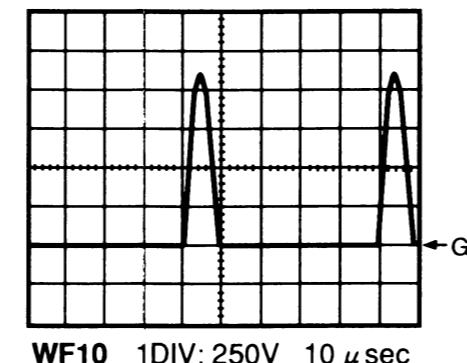


WF10 1DIV: 250V 10 μsec

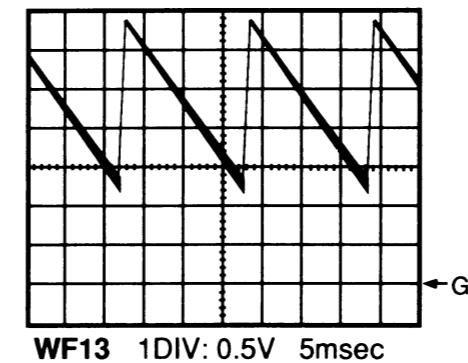


WF13 1DIV: 0.5V 5msec

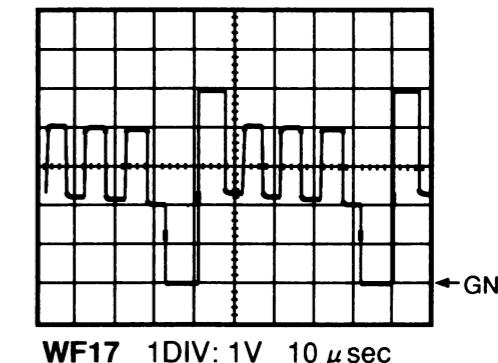


WF17 1DIV: 1V 10 μsec

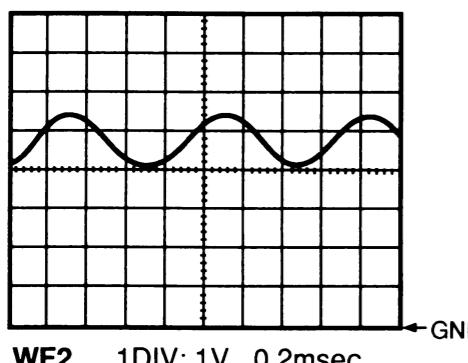


WF2 1DIV: 1V 0.2msec

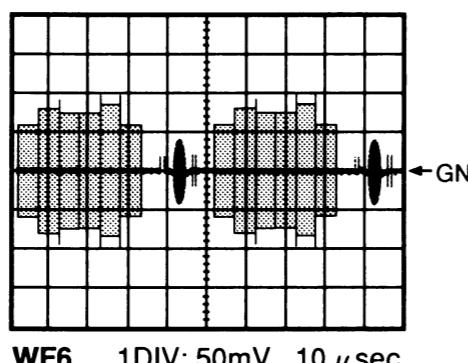


WF6 1DIV: 50mV 10 μsec

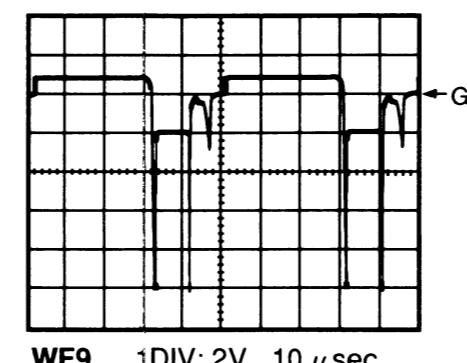


WF9 1DIV: 2V 10 μsec

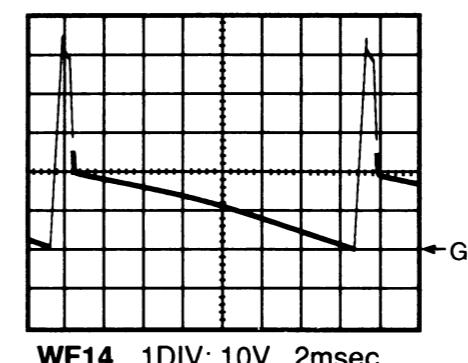


WF14 1DIV: 10V 2msec

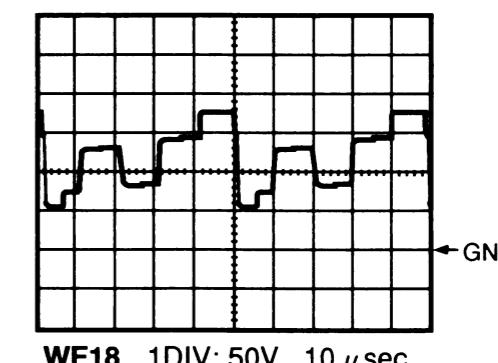


WF18 1DIV: 50V 10 μsec

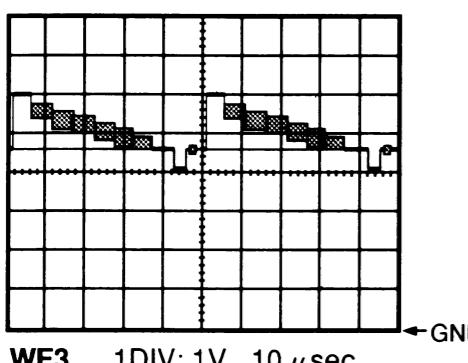


WF3 1DIV: 1V 10 μsec

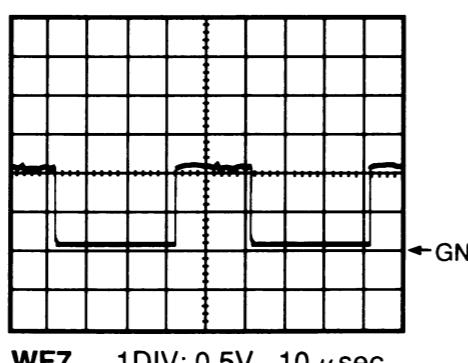


WF7 1DIV: 0.5V 10 μsec

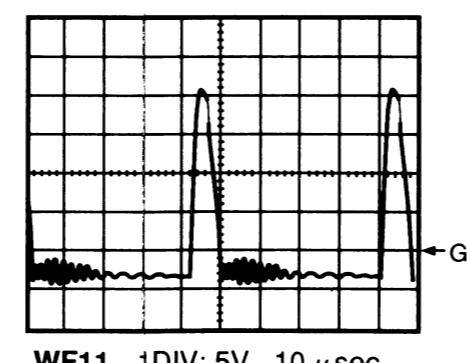


WF11 1DIV: 5V 10 μsec

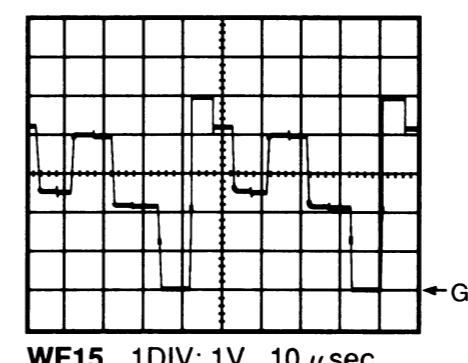


WF15 1DIV: 1V 10 μsec

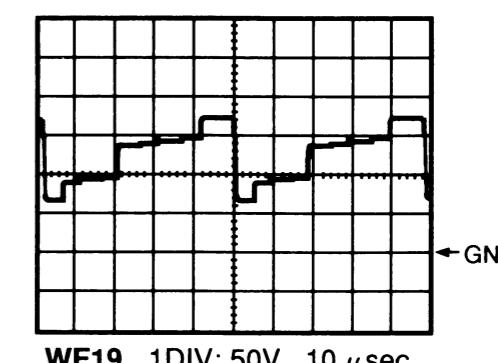


WF19 1DIV: 50V 10 μsec

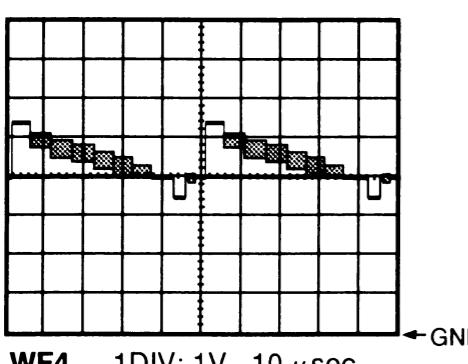


WF4 1DIV: 1V 10 μsec

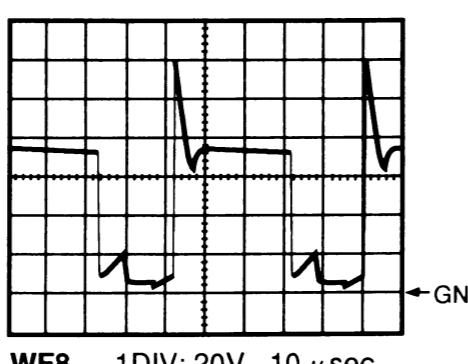


WF8 1DIV: 20V 10 μsec

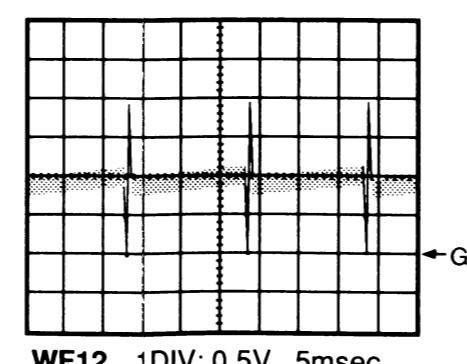

WF12 1DIV: 0.5V 5msec

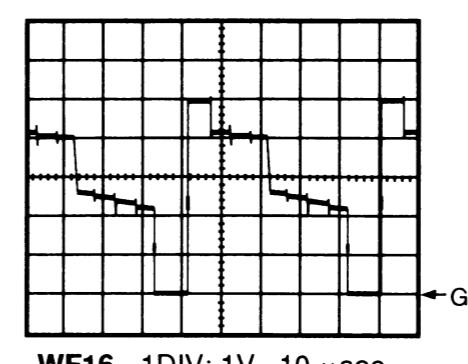


WF16 1DIV: 1V 10 μsec

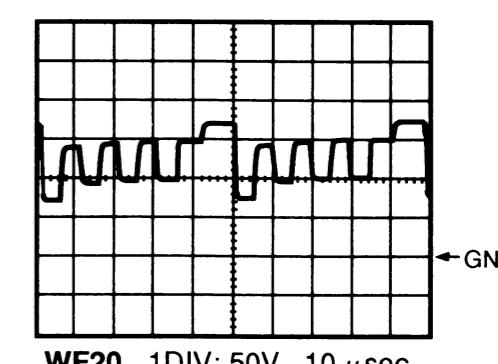


WF20 1DIV: 50V 10 μsec

IF SCHEMATIC DIAGRAM

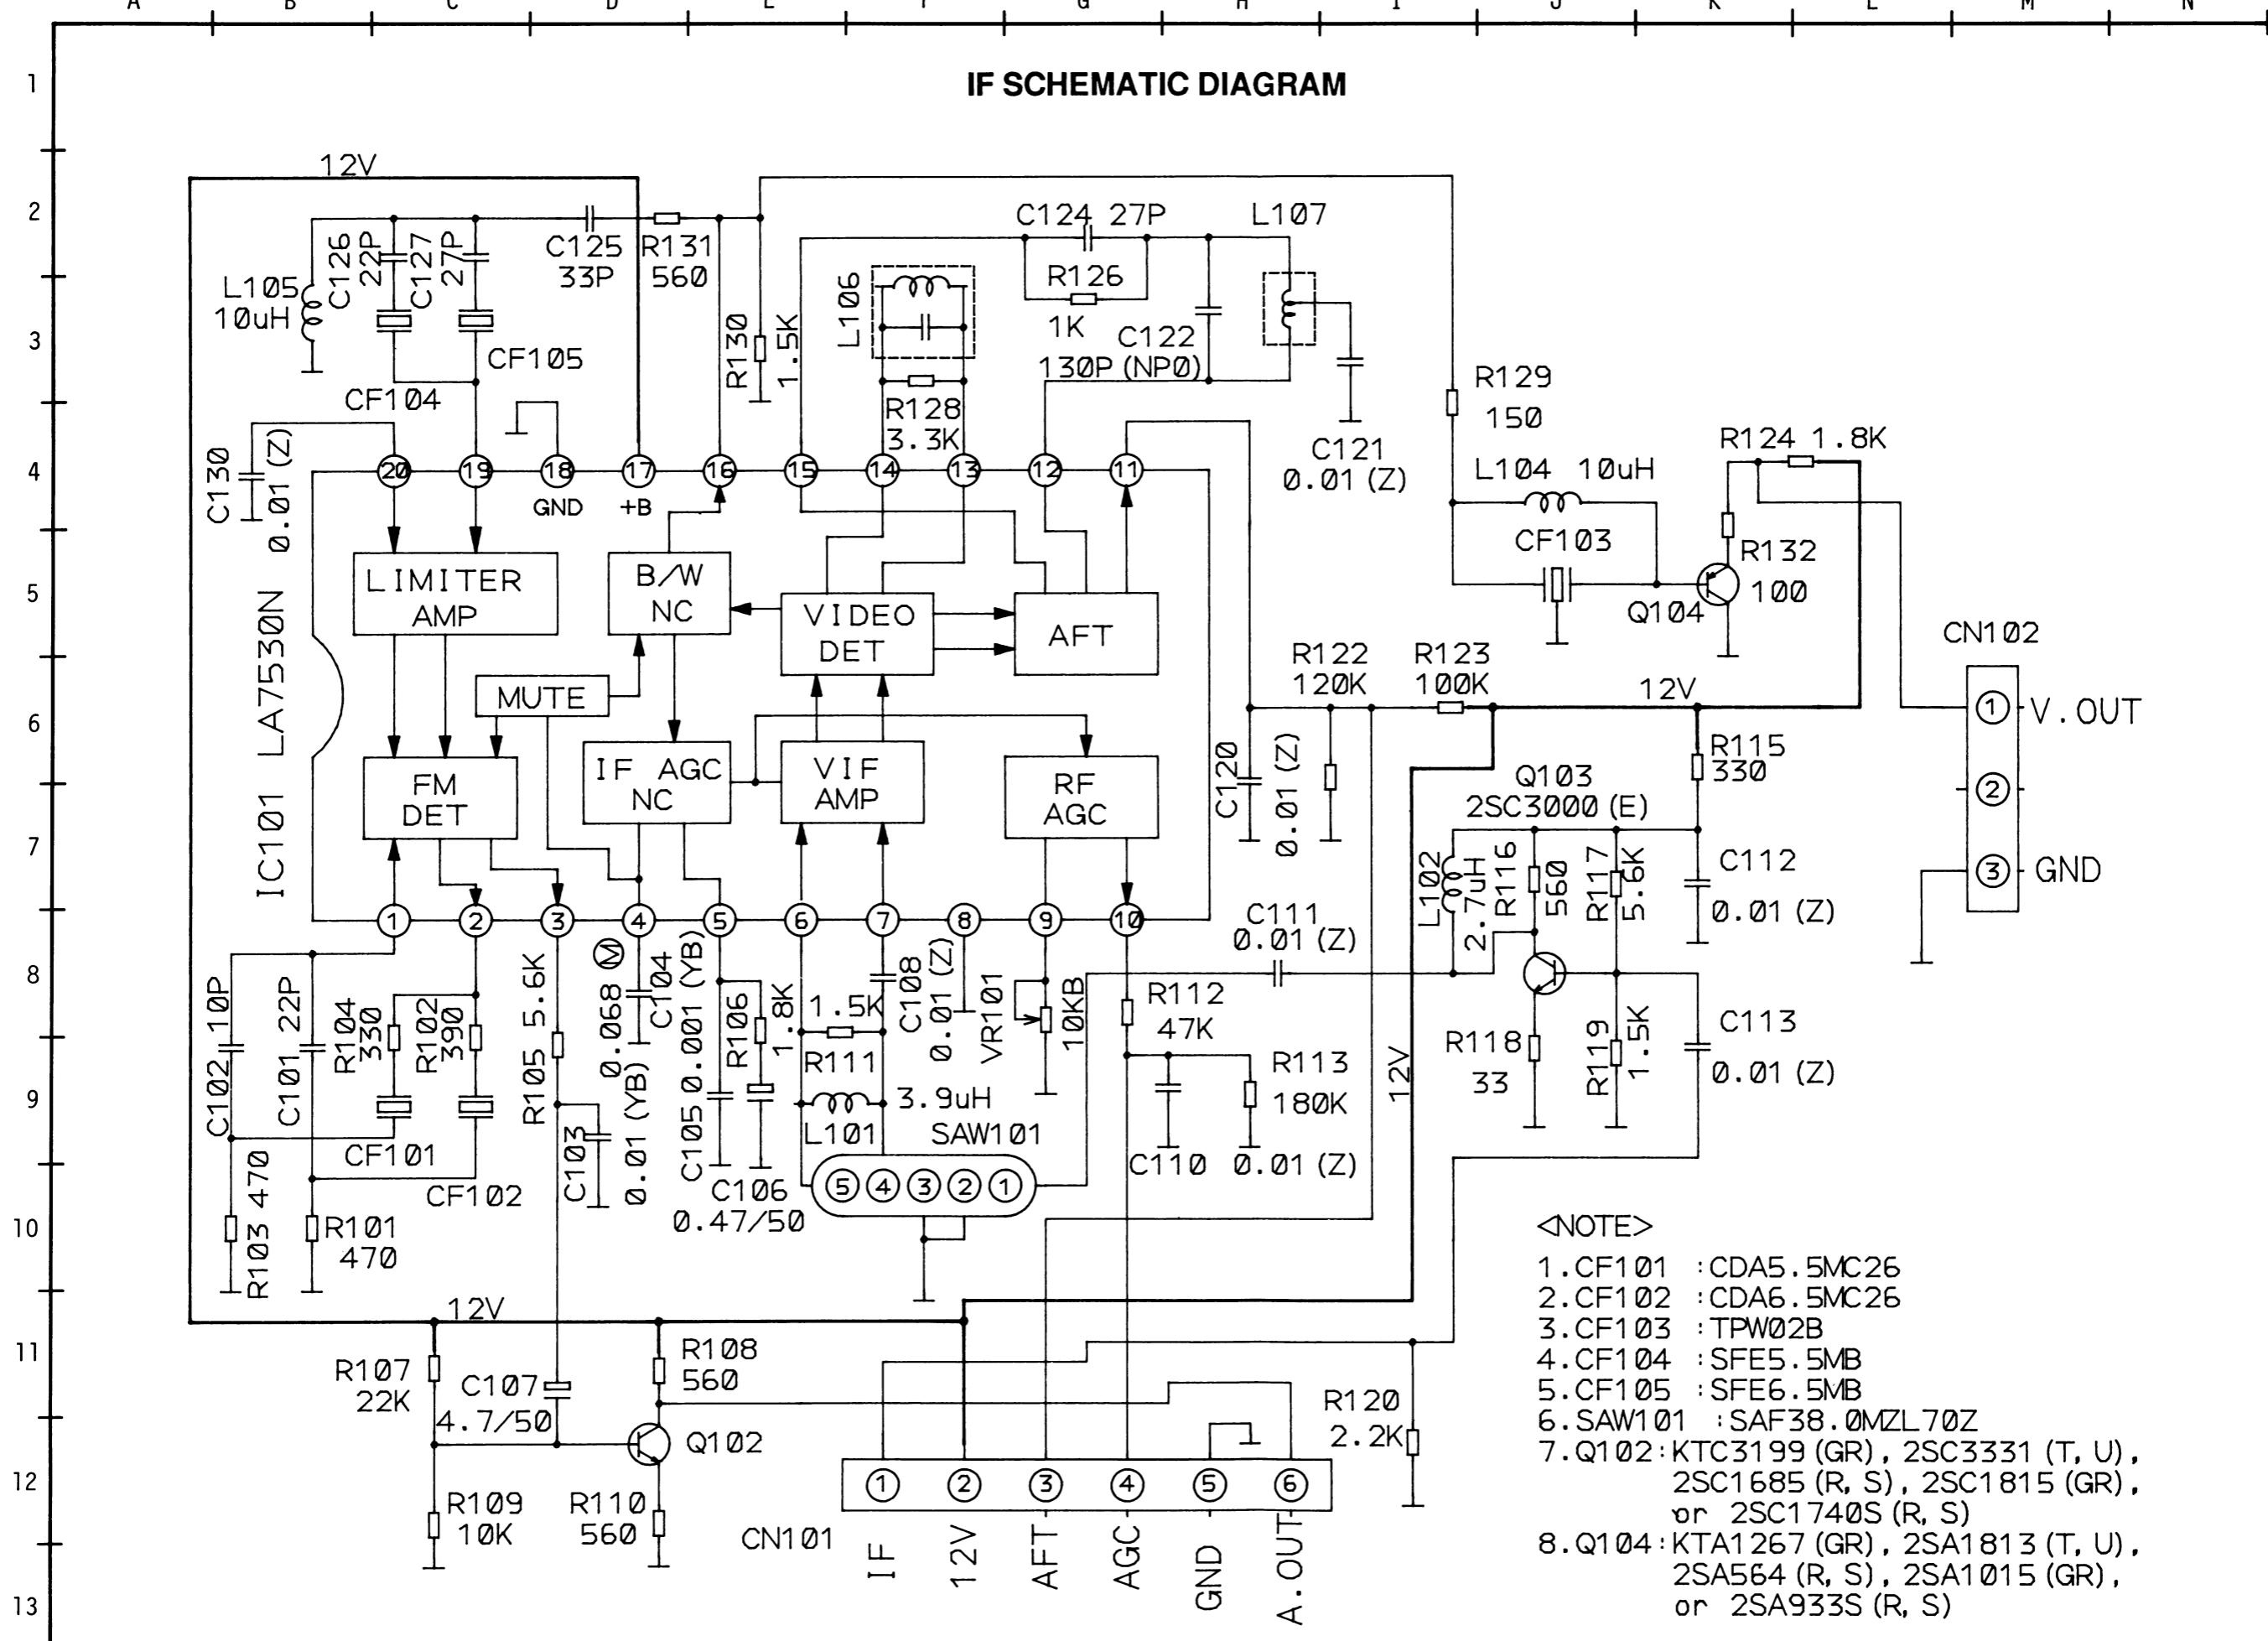


A B C D E F G H I J K L M N

TELETEXT SCHEMATIC DIAGRAM

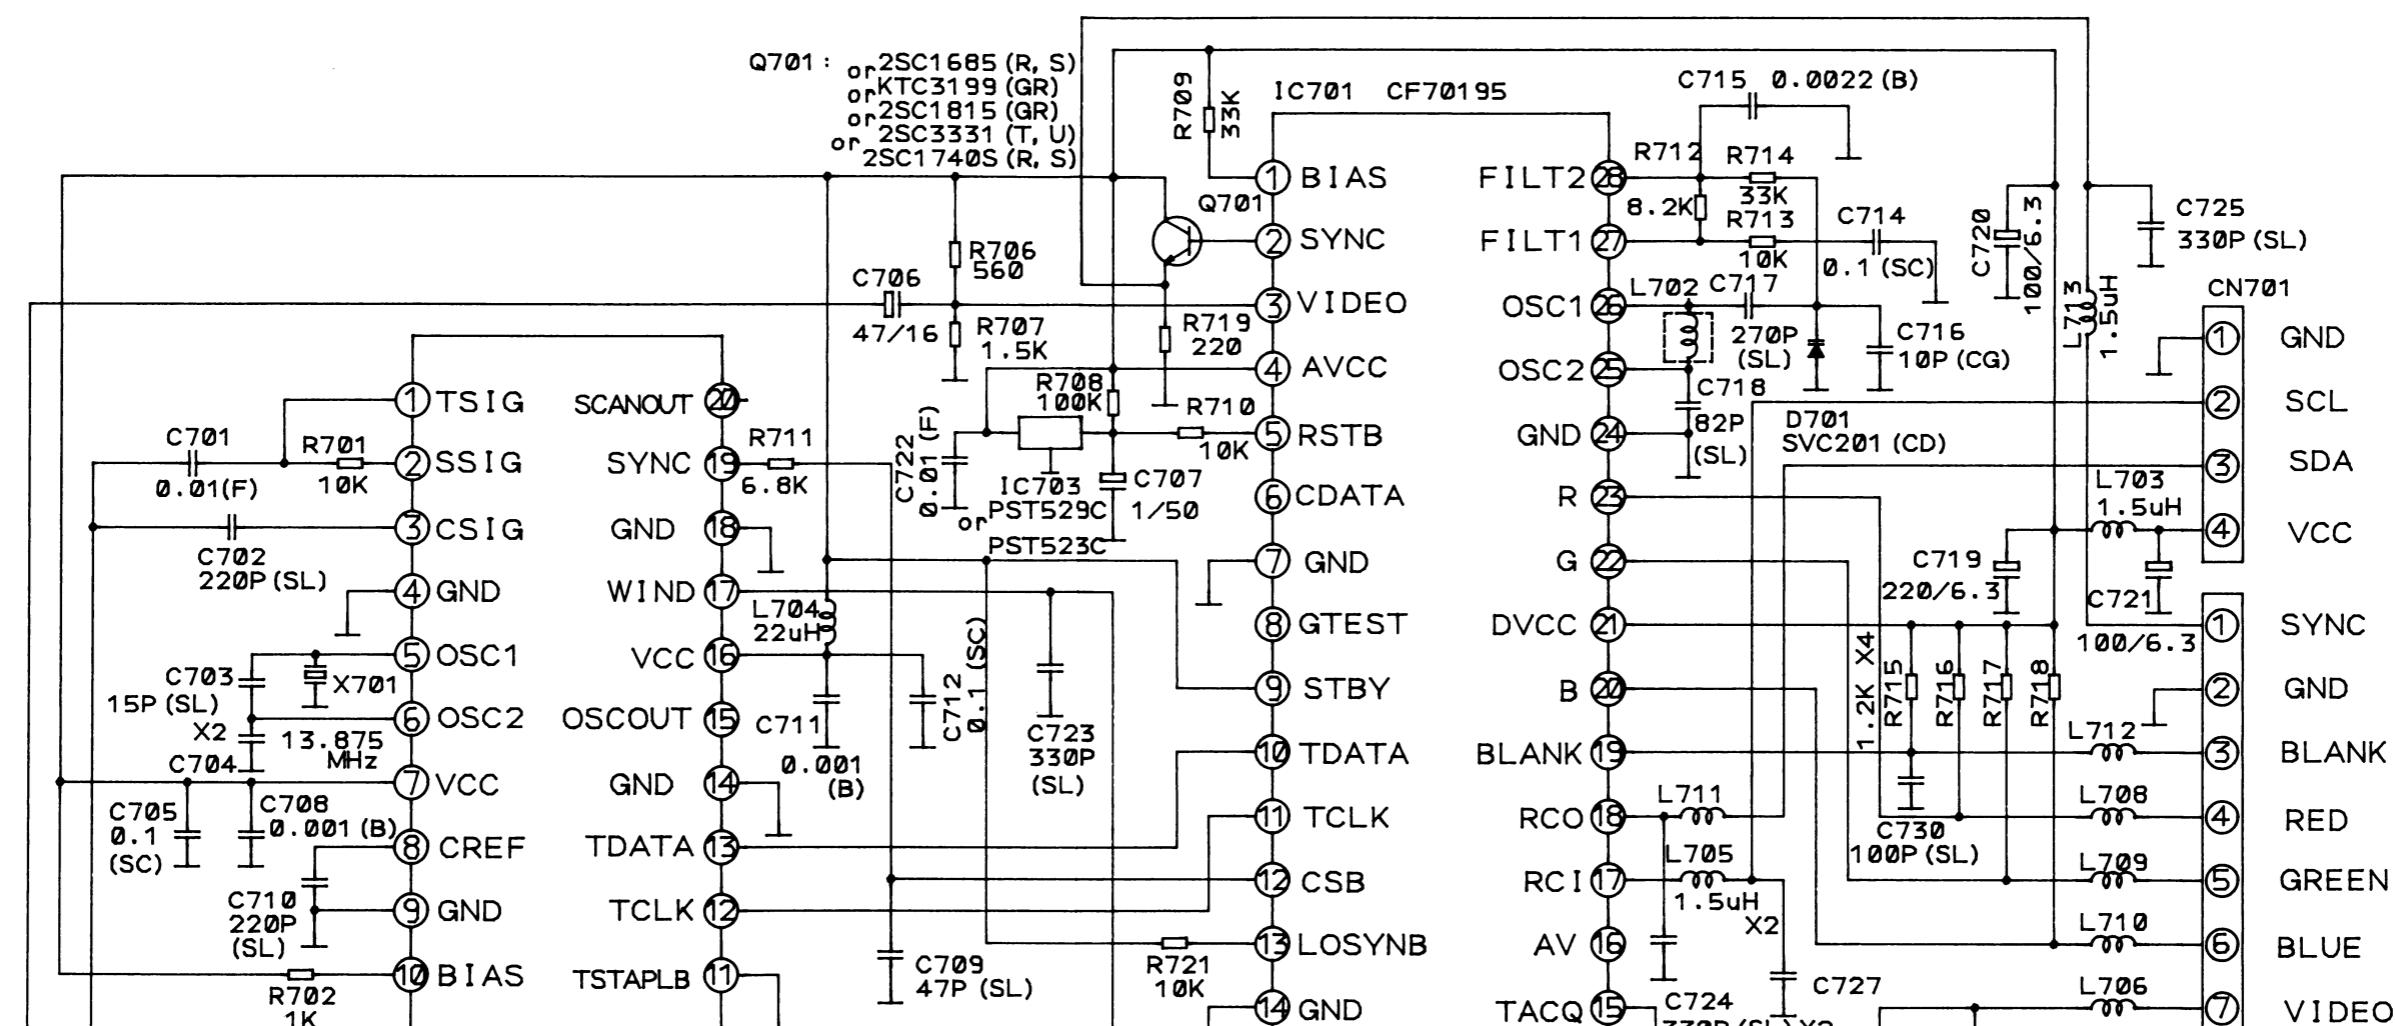



A B C D E F G H I J K L M N


MAIN PCB (Top View)

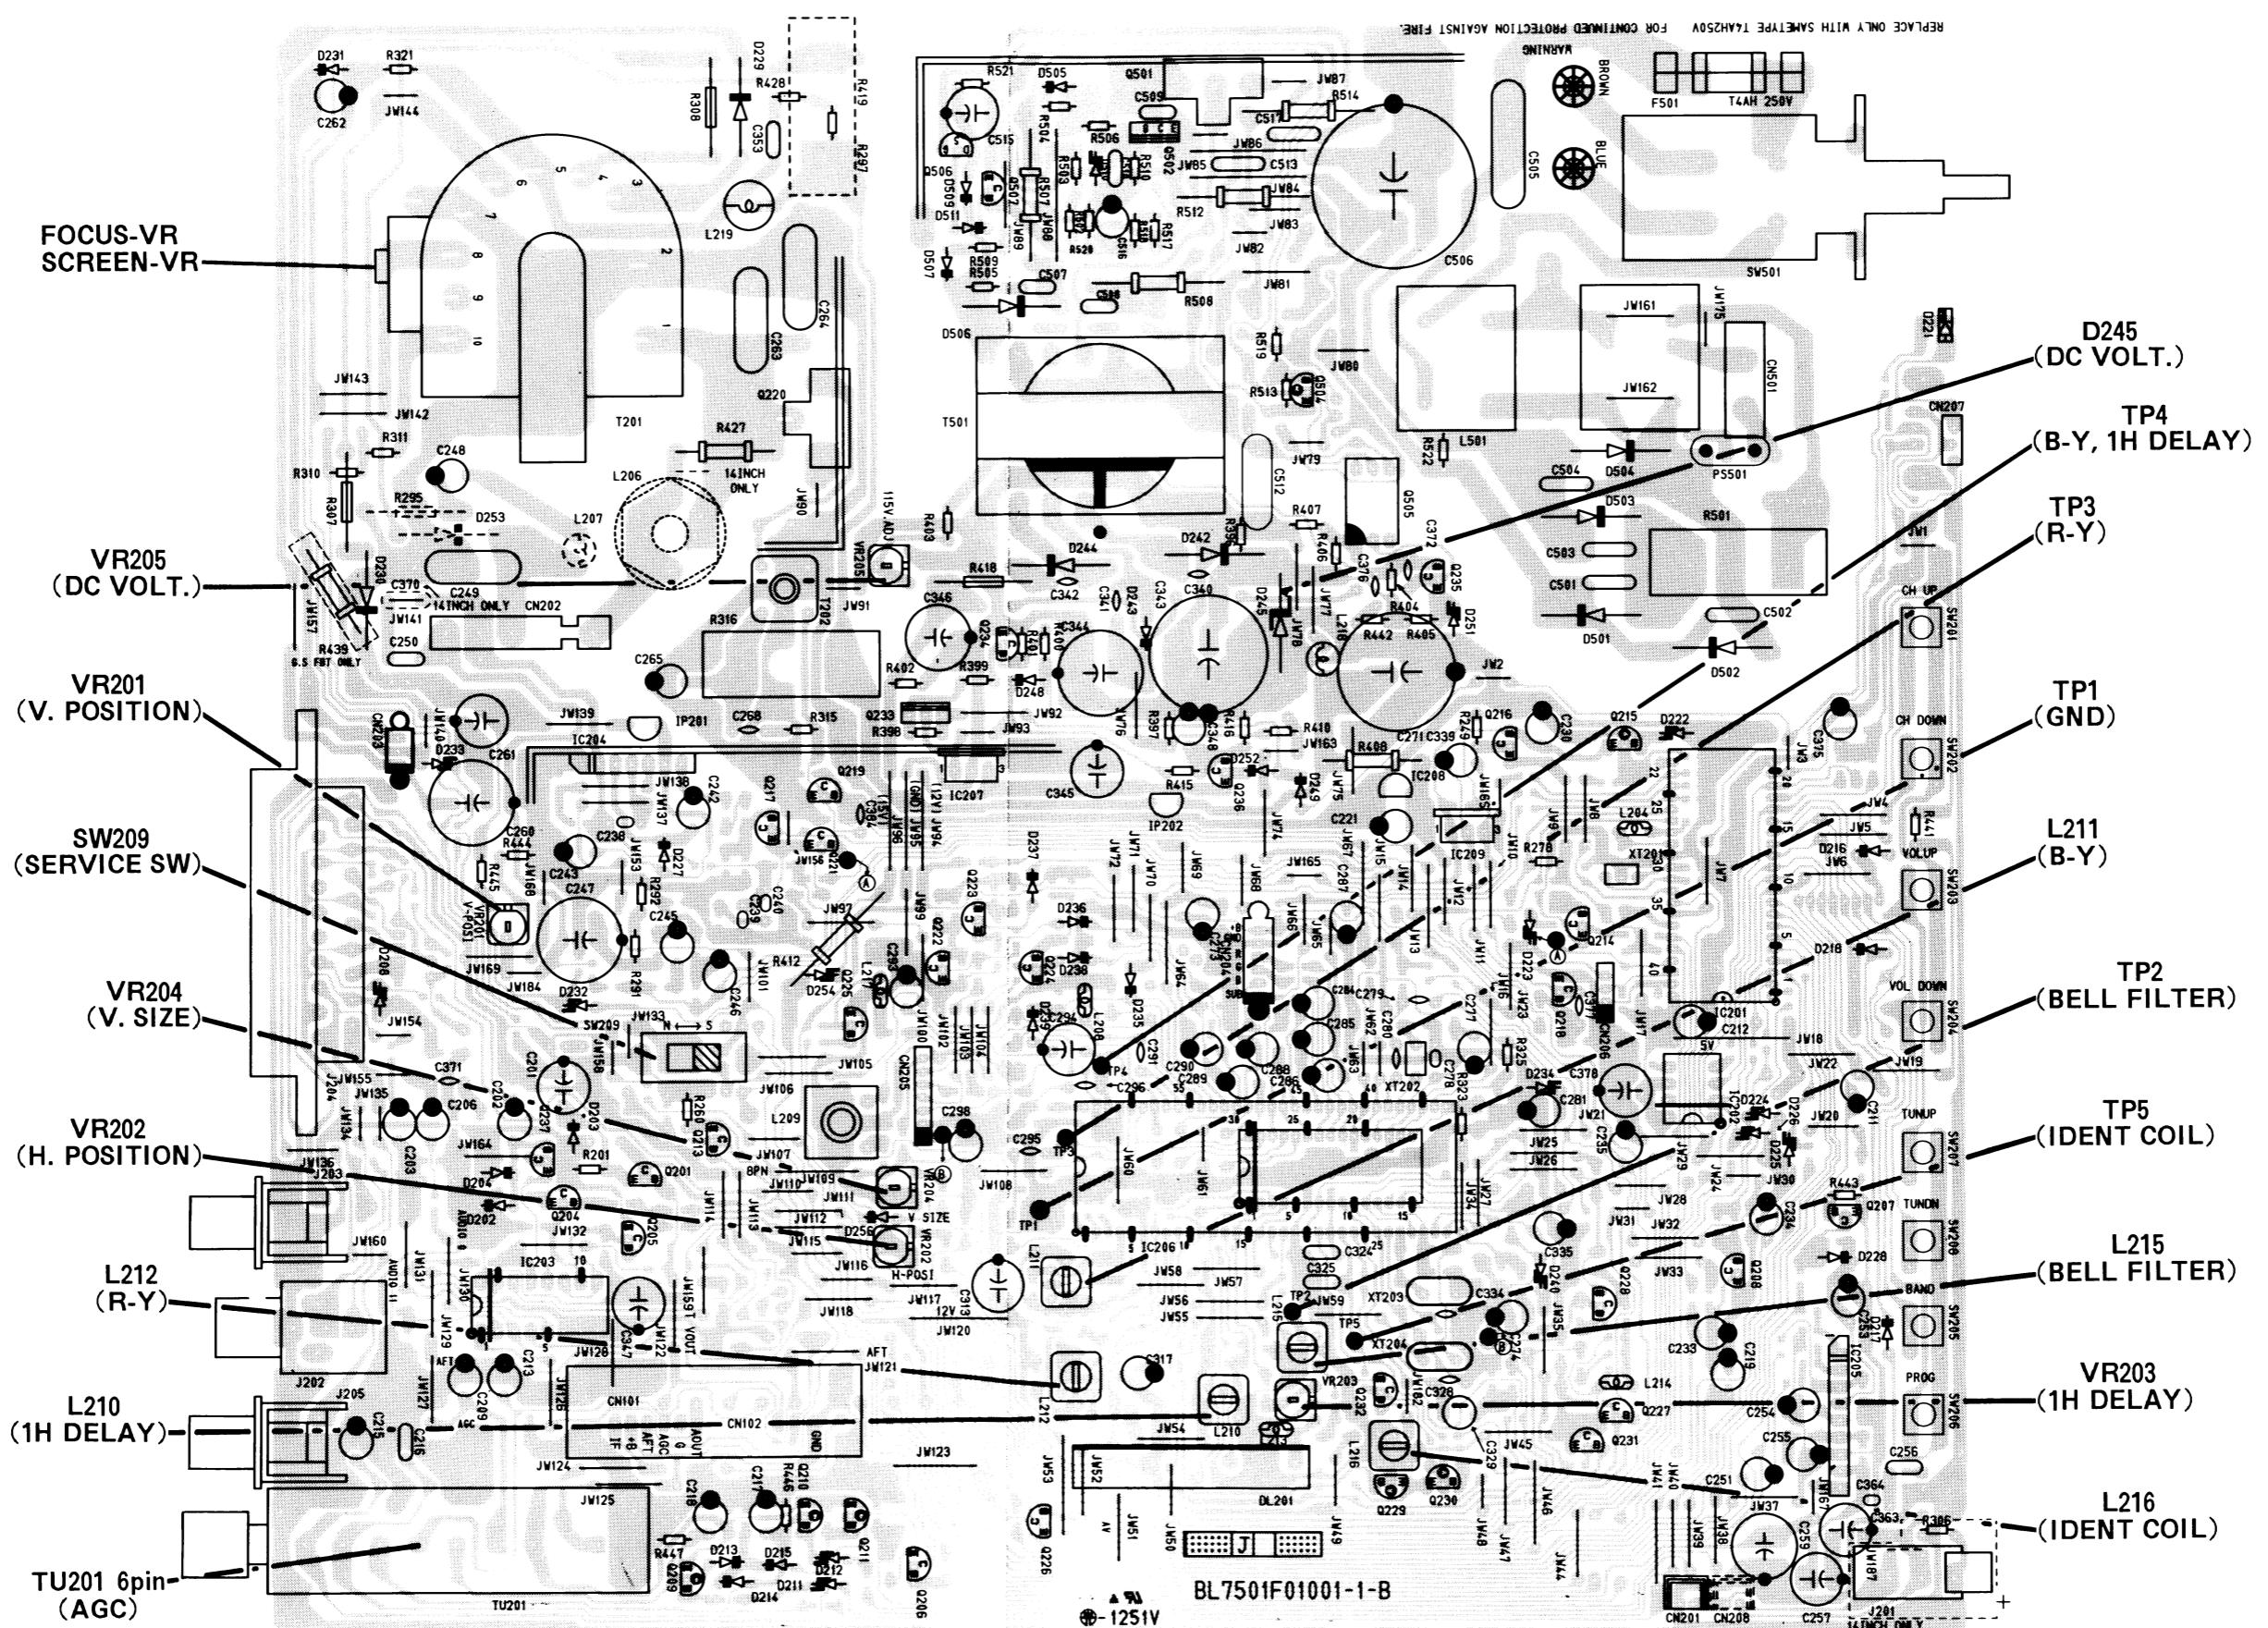

BLOCK DIAGRAM

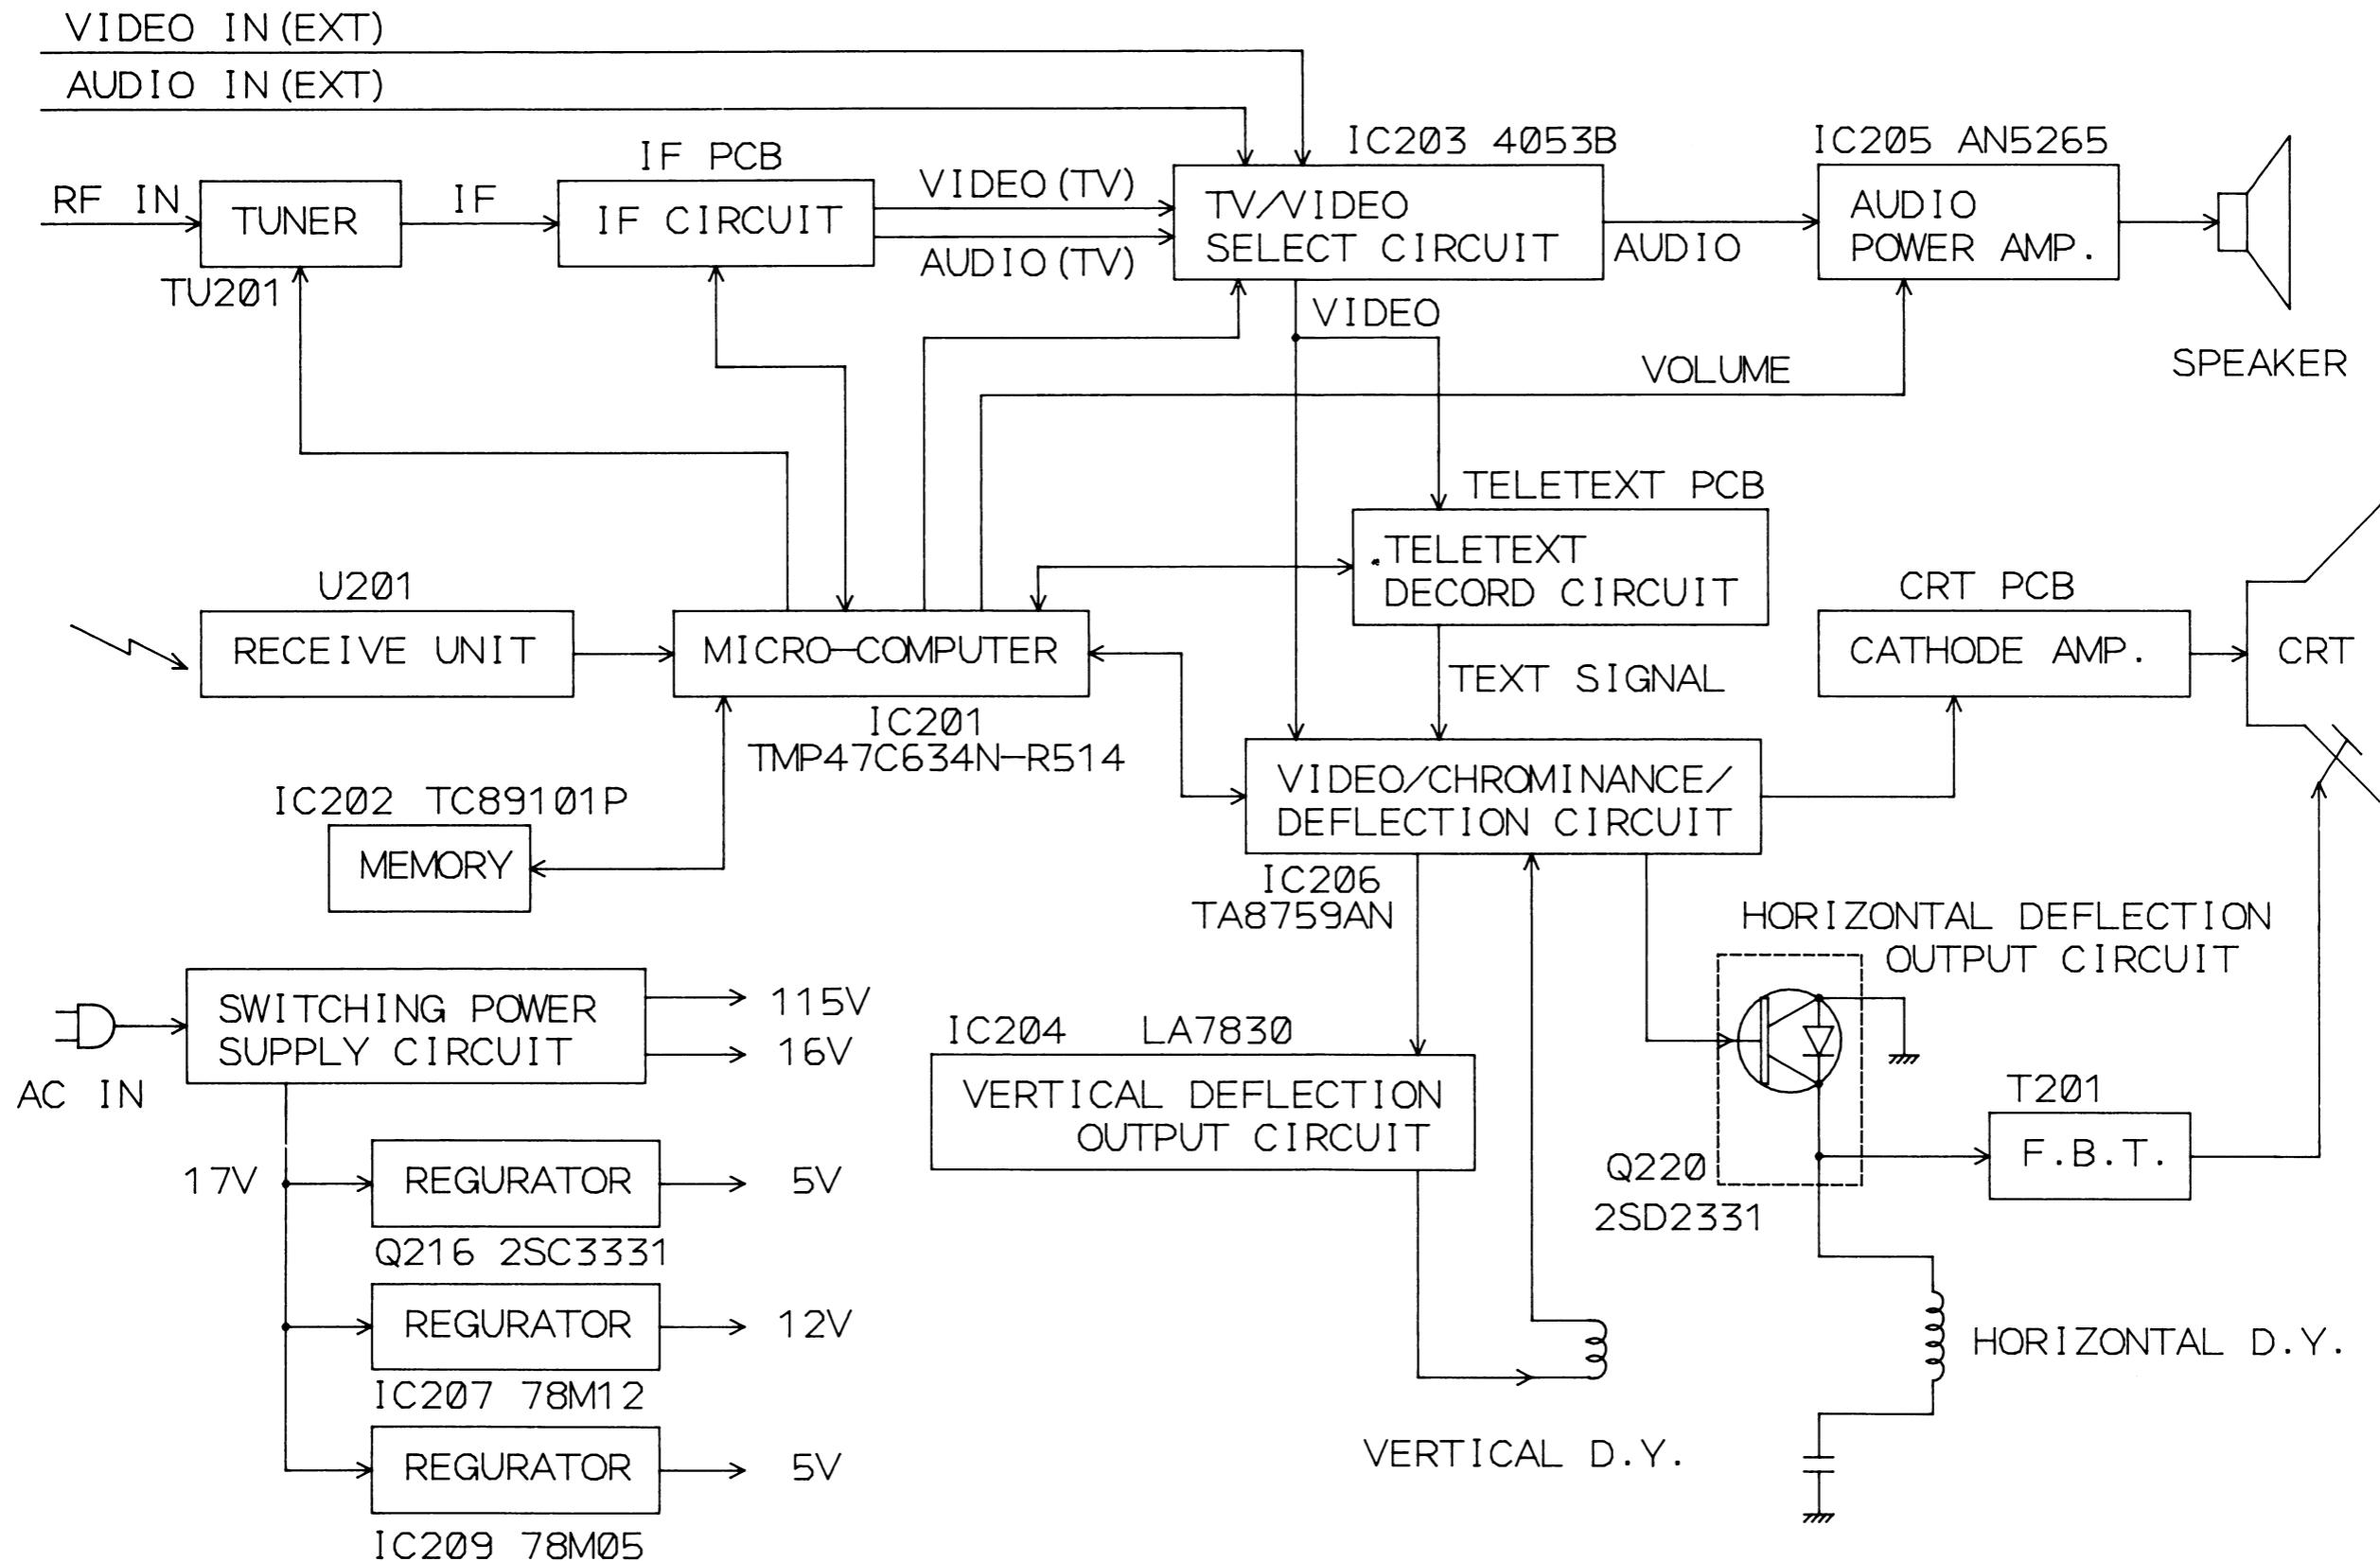

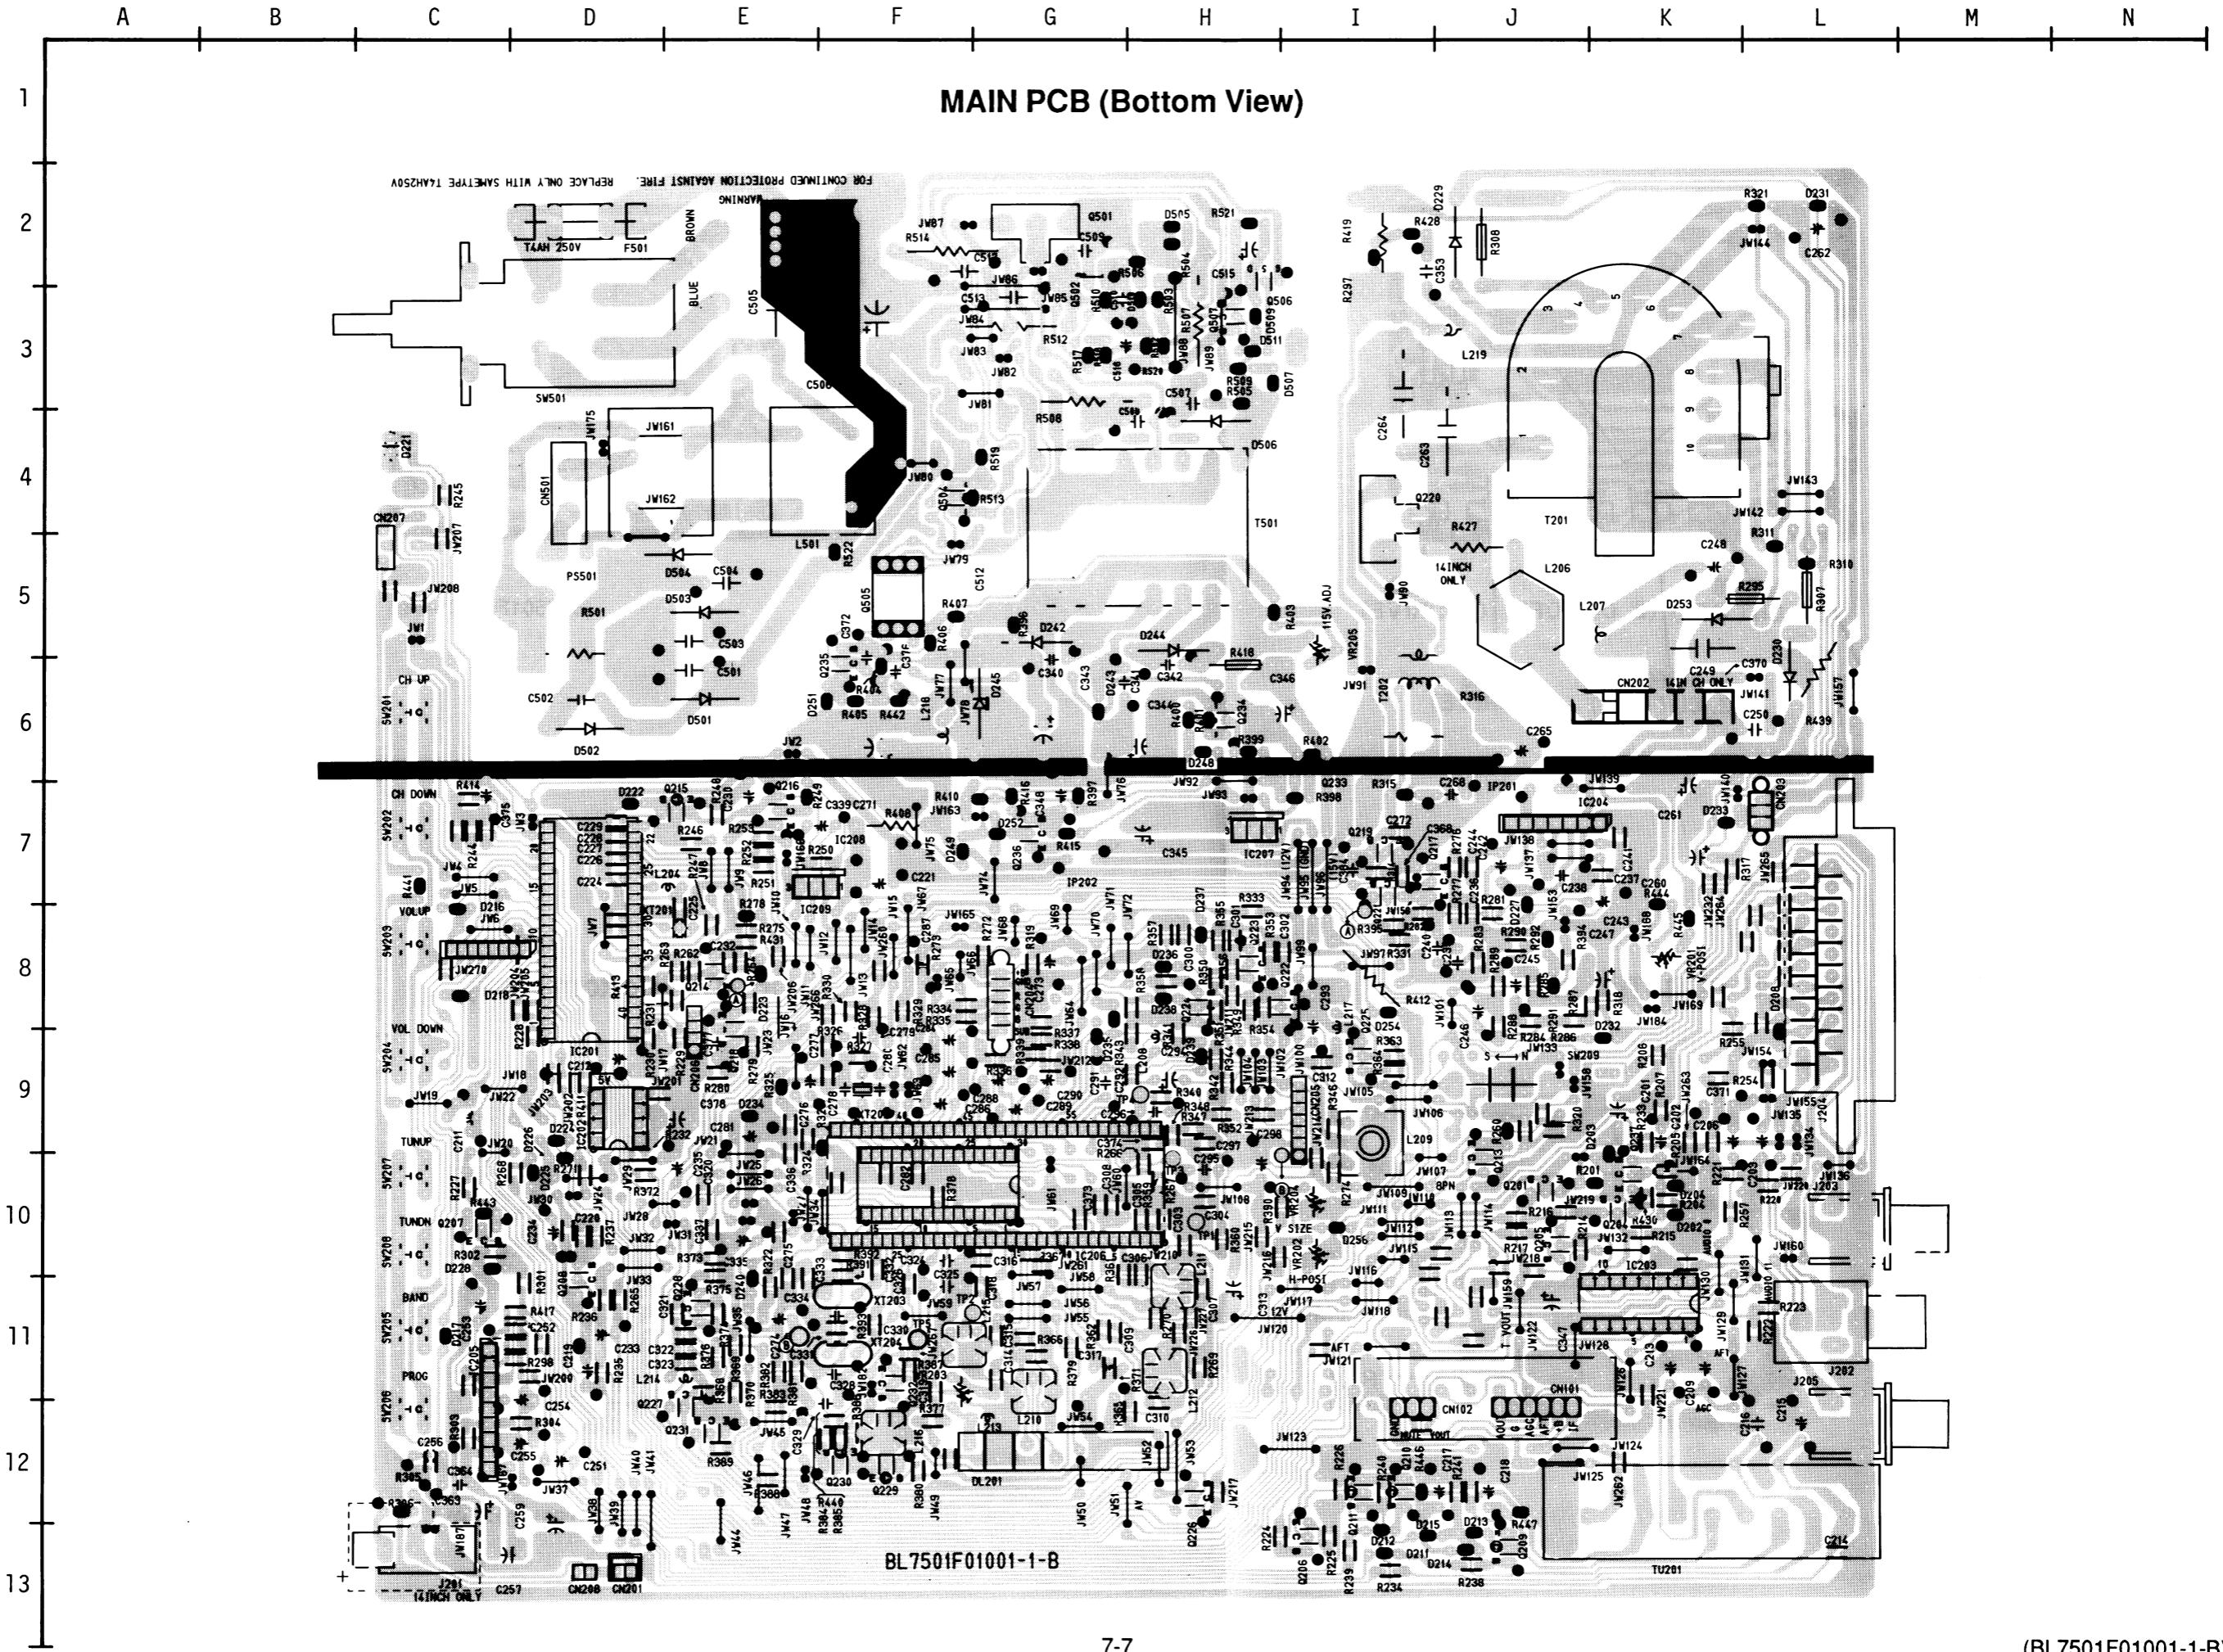

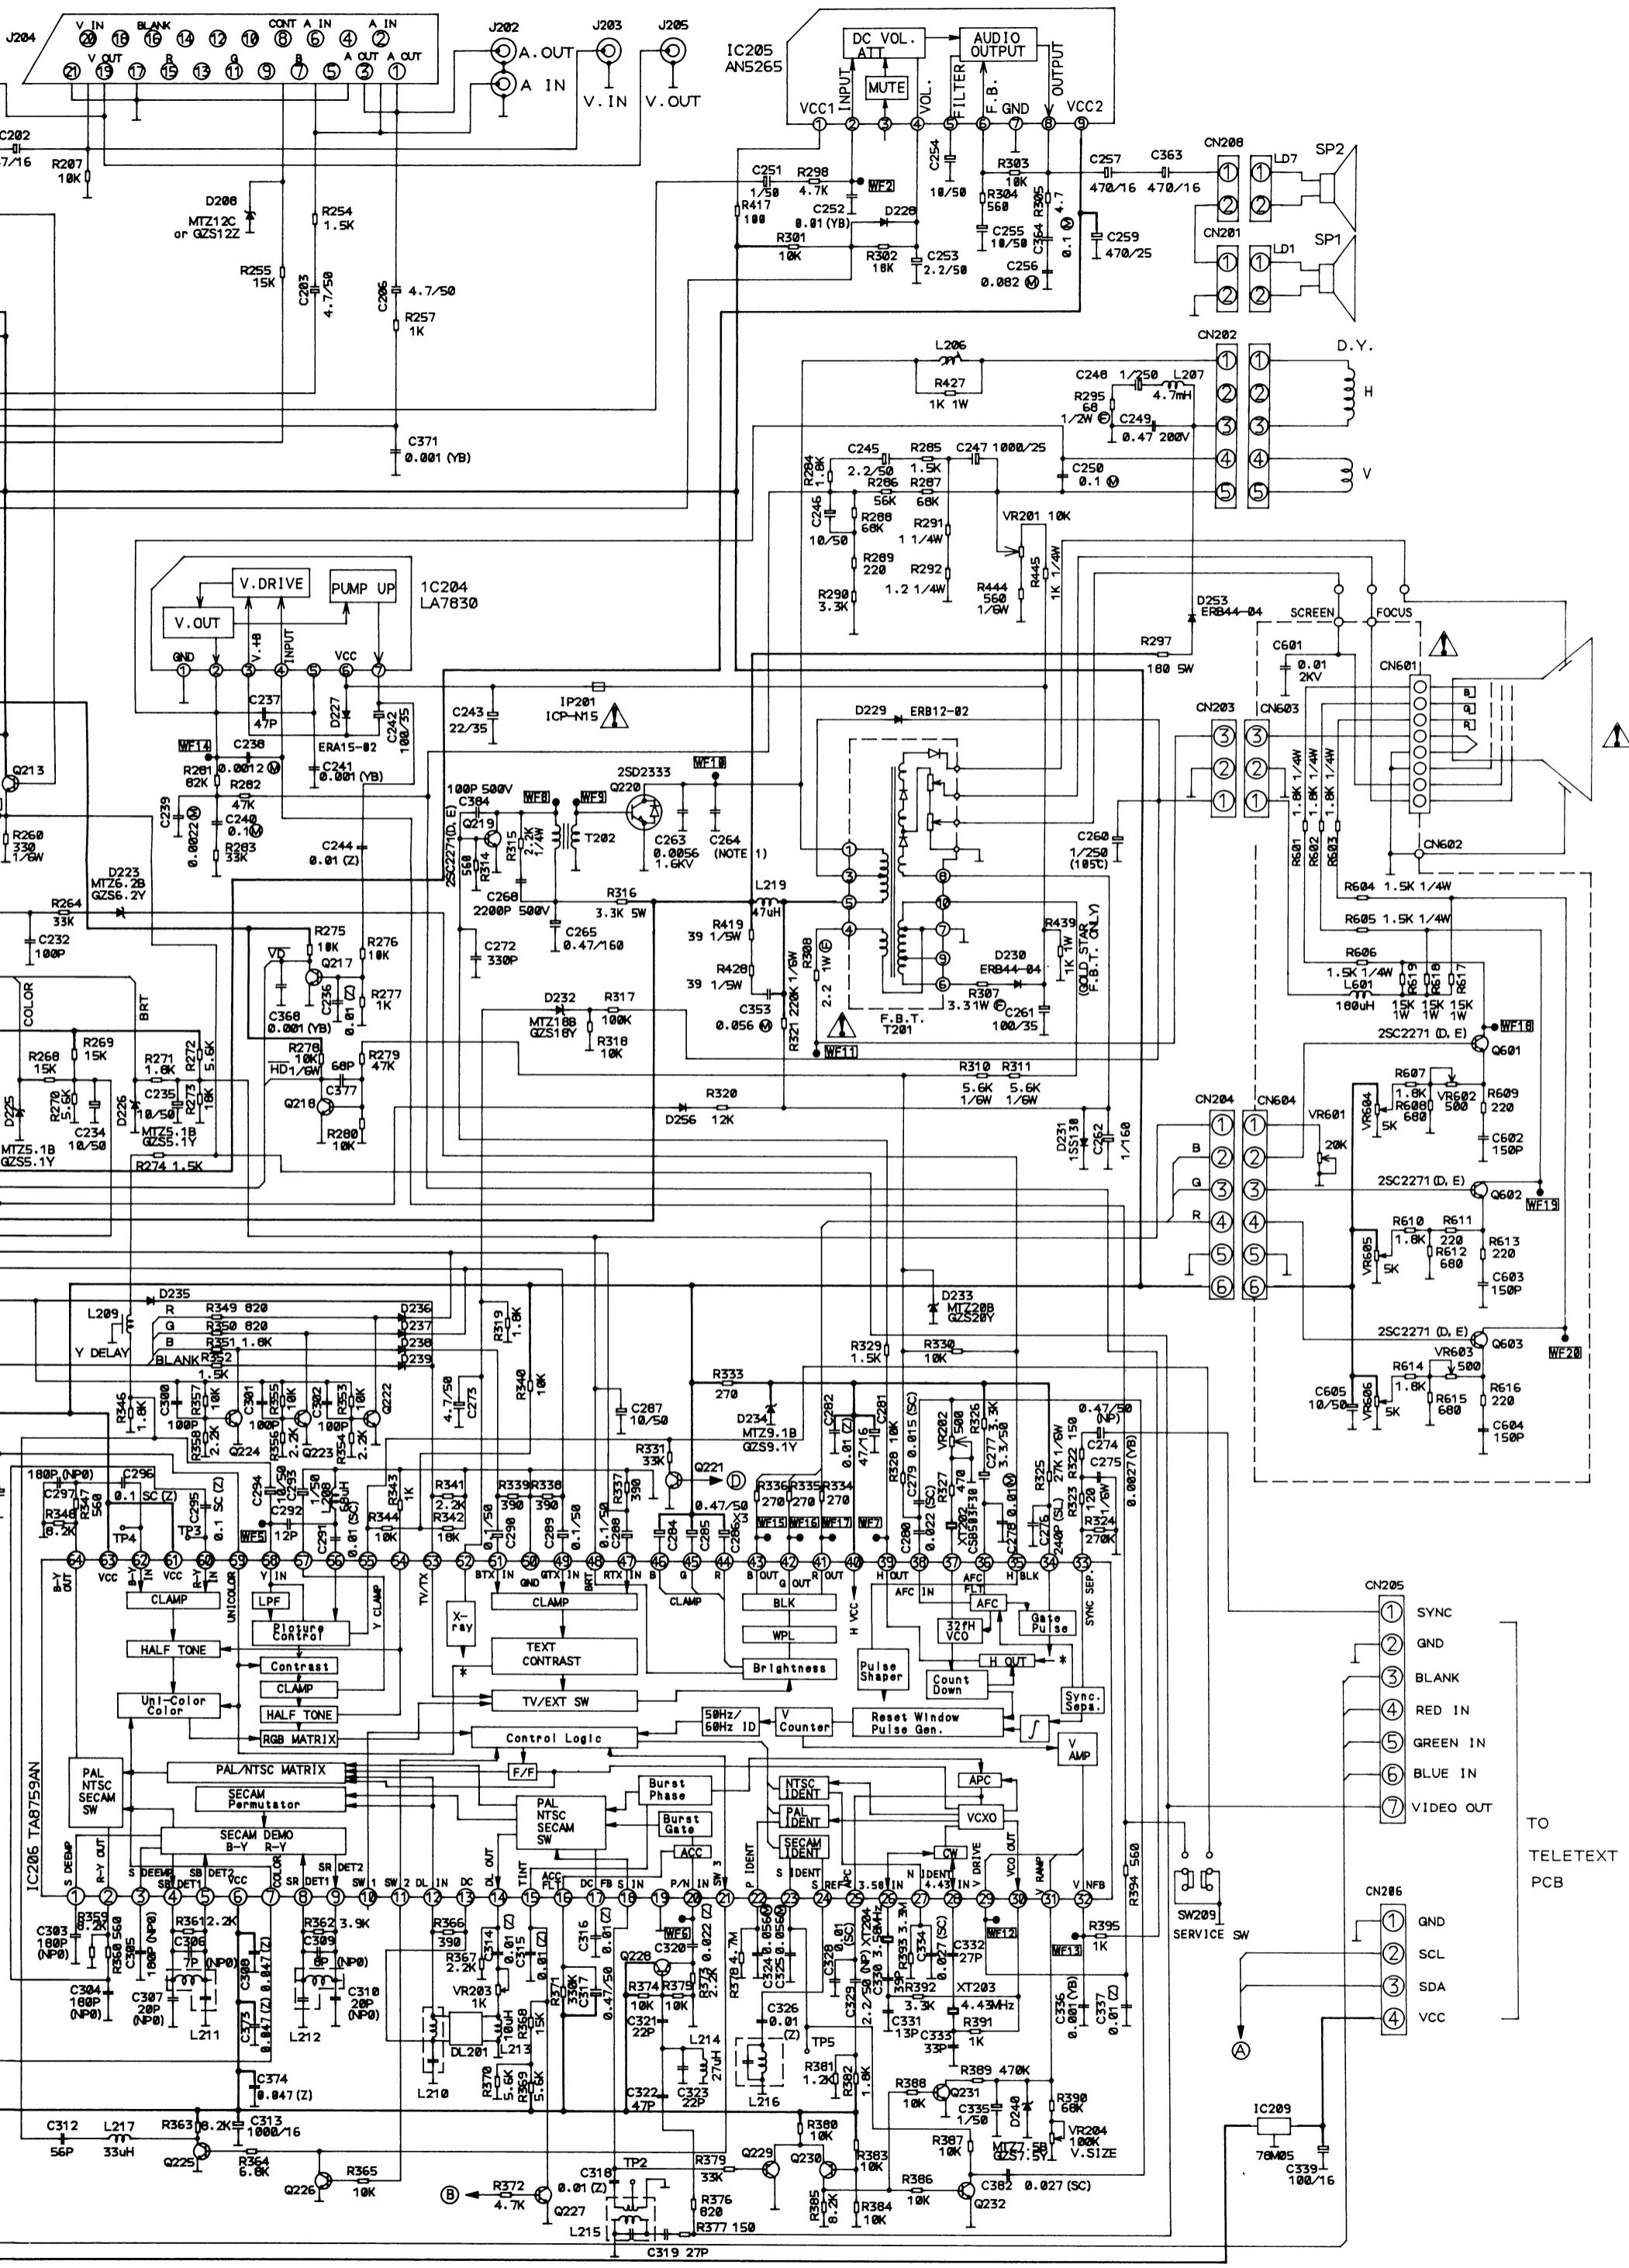

<NOTE1>

Value of C264 is different from kinds of CRT and FBT.

FBT	CRT	510UFB22 -TC52 (DPY)	A48KMX12XX44	51GGB95X-TC01
FCM-20B031		0.0018 1.6KV	0.001 1.6KV	0.0012 1.6KV
154-177T		0.0033 1.6KV	0.0018 1.6KV	0.0022 1.6KV

<NOTE2>

- NOTE2>

 - 1.No indicated NPN type transistors are used KTC31
2SC1740S (R, S), 2SC3331 (T, U), 2SC1685 (R, S) or 2SC181
 - 2.No indicated PNP type transistors are used KTA12
2SA933S (R, S), 2SA1318 (T, U), 2SA564 (R, S) or 2SA1015 (
 - 3.No indicated diodes are used 1SS133 or 1SS176.

CAUTION:

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE T4AH 250V FUSE.
ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES
D'INCEIE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE T4AH 250V.
RISK OF FIRE - REPLACE FUSE AS MARKED.

